

INSTRUMENTS AND CONTROLS

INSTRUMENTS AND CONTROLS

A permanently lit warning light or one that flashes with the engine running, indicates an operating fault in the relevant unit. Some warning lights may be linked to buzzers and a message on the multi-function display. Do not ignore this warning: contact a PEUGEOT dealer as soon as possible.

If the Central STOP warning light comes on when you are driving, stop immediately where it is safe to do so.



Central STOP warning light

This light comes on each time the ignition is switched on.

It is linked to the "engine oil pressure", "coolant level low", "brake fluid level", "electronic brake force distribution fault" warning lights and the coolant temperature gauge.

Stop immediately if it flashes with the engine running.

Contact a PEUGEOT dealer.



Engine oil pressure warning light

Linked to the central STOP warning light.

If it comes on with the engine running, it is accompanied by an audible signal and the message "Oil pressure insufficient" or "Top up engine oil level" on the multi-function display.

Stop immediately.

If there is a lack of oil in the lubrication circuit, top up the level.

Contact a PEUGEOT dealer without delay.



Diesel engine low coolant level warning light

Linked to the central STOP warning light.

This comes on for approximately 3 seconds each time the ignition is switched on.

This warning light is accompanied by an audible signal and the message "Top up engine coolant level" on the multi-function display.

Stop immediately.

Warning: Allow the engine to cool before topping up.

The cooling system is pressurised.

To prevent the risk of scalding, unscrew the cap by two turns to allow the pressure to drop.

Once the pressure has dropped, remove the cap and top up the level.

Contact a PEUGEOT dealer.



Handbrake and low brake fluid level warning light

Linked to the central STOP warning light.

This comes on each time the ignition is switched on.

Illumination of this light is accompanied by an audible signal and a message on the multi-function display indicating the cause of the warning:

- **"Handbrake on"**, if the handbrake is applied or has not been released correctly,
- **"Brake fluid level low"** if there is an excessive drop in the brake fluid (if the light remains on even with the handbrake released),
- **"Braking fault"** is displayed simultaneously with the ABS light, indicating a malfunction of the electronic brake force distribution.

Stop immediately.

Contact a PEUGEOT dealer.

INSTRUMENTS AND CONTROLS



Battery charge warning light

This comes on each time the ignition is switched on.

If it comes on with the engine running, it is accompanied by an audible signal and a message **"Battery charge fault"** on the multi-function display.

It can indicate:

- faulty operation of the charging circuit,
- loose battery or starter terminals,
- a cut or slack alternator belt,
- an alternator fault.

Contact a PEUGEOT dealer.



Anti-lock braking system (ABS) warning light

This light comes on for 3 seconds each time the ignition is switched on.

If it remains on or comes on above 8 mph (12 km/h), this indicates a malfunction of the ABS.

However, the vehicle retains conventional servo-assisted braking.

Illumination of this light is accompanied by an audible signal and the message **"ABS fault"** on the multi-function display.

Contact a PEUGEOT dealer.



Electronic stability programme (ESP/ASR) warning light

This comes on for 3 seconds each time the ignition is switched on.

If the light remains on or comes on when the engine is running and the vehicle is moving, it is accompanied by an audible signal and the message **"ESP/ASR system not functioning"** on the multi-function display; contact a PEUGEOT dealer.

When the engine is running and the vehicle is moving, it flashes if the system is activated.

It is lit continuously when the system is disarmed.



Engine diagnostics warning light

This comes on each time the ignition is switched on.

If it comes on with the engine running, accompanied by an audible signal and the message on the multi-function display:

- **"Antipollution fault"**, it indicates a malfunction in the emission control system.
- **"Unblock diesel filter"** indicates the start of saturation of the particulate emission filter (due to exceptionally prolonged urban driving conditions: reduced speed, long traffic jams, ...).

To regenerate the filter, you are advised to drive, as soon as possible when traffic conditions permit, at a speed of 35 mph (60 km/h) or above for at least five minutes (until the warning light goes out). If the warning light remains on, contact a PEUGEOT dealer.

Note: following prolonged operation of the vehicle at very low speed or at idle, you may, in exceptional circumstances, notice emissions of water vapour at the exhaust on acceleration. This does not have any effect on the vehicle's performance or on the environment.

If it flashes when the engine is running, accompanied by an audible signal and the message **"Catalytic converter fault"** on the multi-function display, it indicates a malfunction in the injection or ignition system. There is a risk of damage to the catalytic converter (petrol engines only).

Contact a PEUGEOT dealer as soon as possible.

INSTRUMENTS AND CONTROLS



Diesel pre-heat light

This comes on each time the ignition is switched on.

Wait until it goes out before trying the starter.



Passenger air bag disarmed indicator light

Illumination of this warning light is accompanied by a message "**Passenger air bag deactivated**" on the multi-function display.

If the passenger air bag is disarmed, the indicator light comes on when the ignition is switched on and remains on.

In all cases, if the warning light flashes, contact a PEUGEOT dealer.



Seat belt not fastened warning light

With the engine running, this indicator light comes on when the driver's seat belt is not fastened.



Water in diesel filter warning light (according to country)

Illumination of this warning light is accompanied by an audible signal and the message "**Water in diesel fuel filter**" on the multi-function display.

There is a risk of damage to the injection system.

Contact a PEUGEOT dealer as soon as possible.



Air bag warning light

This light comes on for a few seconds when the ignition is switched on.

Illumination of this warning light, with the engine running, is accompanied by an audible signal and the message "**Air bag fault**" on the multi-function display indicating:

- a fault in the front air bags,
- or
- a fault in the side air bags or curtain air bags.

Contact a PEUGEOT dealer.



Low fuel level warning light.

The warning light comes on for three seconds when the ignition is switched on.

When this light comes on with the engine running, it is accompanied by an audible signal and the message "**Fuel level low**" on the multi-function display.

When the warning light comes on, you have enough fuel to drive approximately **30 miles (50 km)**. The tank capacity is approximately 60 litres.

This light flashes to indicate a malfunction of the fuel gauge.

Contact a PEUGEOT dealer.