

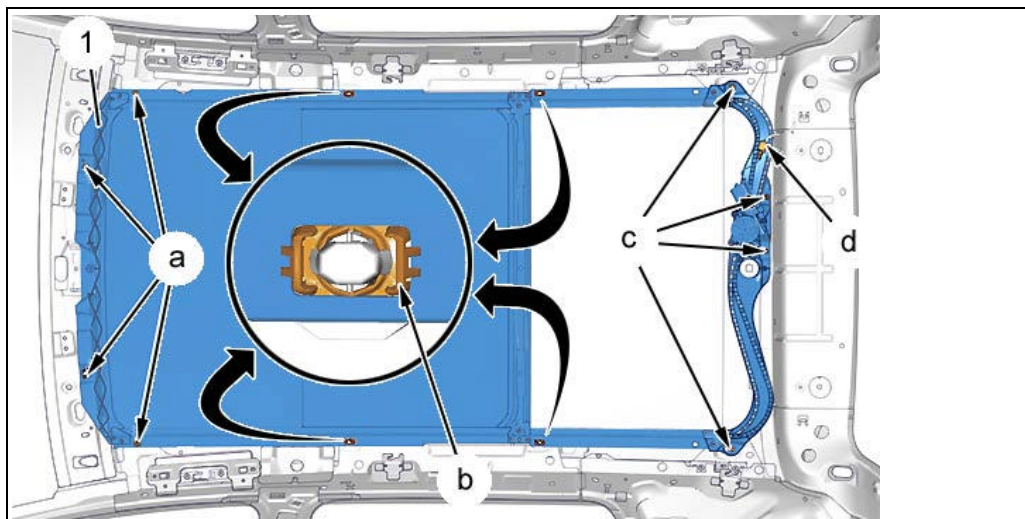
REMOVE - REFIT : BLIND SUB-ASSEMBLY :*5 DOOR ESTATE***1. Removing****Remove the roof lining**  (with panoramic roof) .

Figure : C4DM05AD

Remove :

- The bolts (at " a ")
- Nuts (at " c ")

Disconnect the connector (at " d ") .

2 operators are necessary to carry out the following operations .

Unclip : The blind sub-assembly (1) (at " b ") ; Using pliers .

URGENT : When unclipping do not pull on the blind sub-assembly to prevent distorting the frame .

Release the blind sub-assembly through the tailgate .

Remove : The blind sub-assembly (1) .

2. Refitting

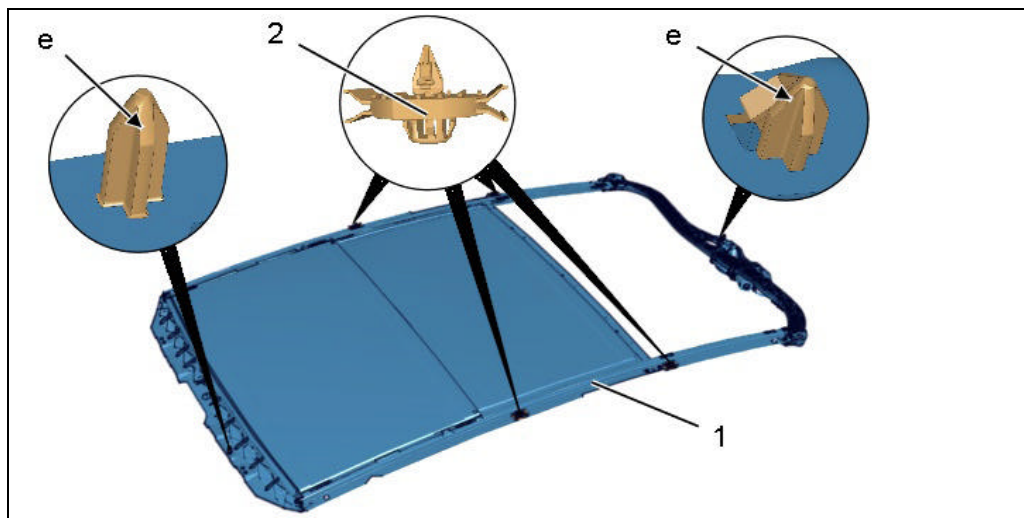


Figure : C4DM05BD

N.B. : Always replace the clips (2) .

Pre-position the blind sub-assembly (1) ; Using the pilot holes (at " e ") .

Clip the blind sub-assembly (1) onto the clips (2) .

Pre-tighten the fixings (at "a" and "c") .

URGENT : Push hard onto the clips (2) .

The screws ; Tighten to $0,2 \pm 0,05$ daNm (at " a ") .

Nuts ; Tighten to $0,75 \pm 0,2$ daNm (at " c ") .

Connect the connector (at " d ") .

N.B. : Check the operation of the blind before refitting the headlining .

Proceed in the reverse order to removal .

Check the electrical operation of the equipment .