



STEERING WHEEL HEIGHT ADJUSTMENT

When stationary, lower the handle to unlock the steering wheel. Adjust to the desired height and lift the handle to lock the steering wheel.



OPENING THE BONNET

From inside the vehicle : pull the handle.



From the outside: lift the catch and raise the bonnet. Secure the strut to hold the bonnet open.

