


23/03/07 65H05A

CHECKING STAND AND FUSE BOX

5 DOOR SALOON OR FIRM 5 DOOR SALOON OR 5 DOOR ESTATE OR 4 DOOR SALOON

NOTA:THE FUSE BOX INTEGRE THE HARNESS UP TO DAM 9062

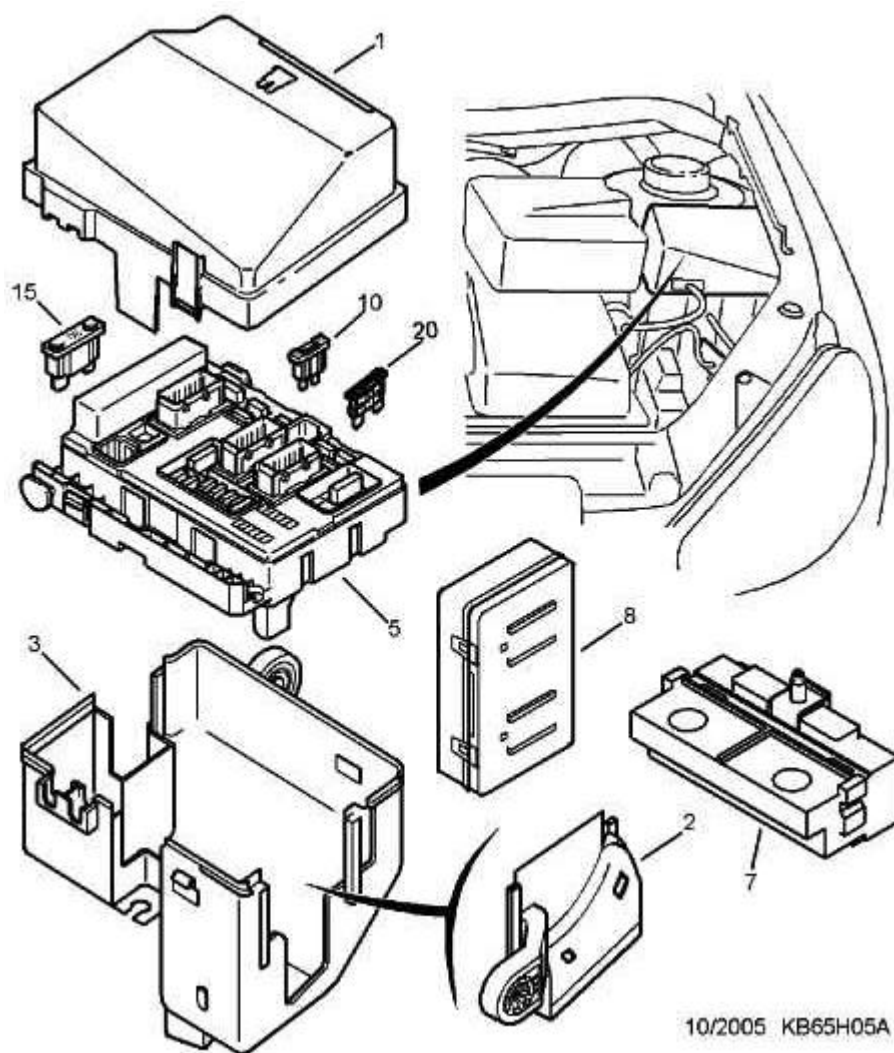

01	6547 NQ 6556 Z1	01 01	FUSE BOX COVER - WITHOUT MULTIPLEXING - MULTIPLEXING ASSEMBLY
02	6547 SY	01	FUSE BOX BRACKET - WITHOUT MULTIPLEXING
03	6547 SZ 6556 X7 6556 KZ	01 01 01 01	FUSE BOX PROTECTOR - WITHOUT MULTIPLEXING - MULTIPLEXING ASSEMBLY UNTIL DAM 0951977 OR UNTIL DAM 0951978 OR UNTIL DAM 0945681 OR UNTIL DAM 0945683 OR UNTIL DAM 0945688 - SINCE DAM 10458UW OR SINCE DAM 10584YN OR SINCE DAM 10584YQ OR SINCE DAM 0952077 OR SINCE DAM 0952078 OR SINCE DAM 0945781 OR SINCE DAM 0945783 OR SINCE DAM 0945788
05	6500 T7 6500 Y1	01 01 01	FUSE BOX - MULTIPLEXING ASSEMBLY SINCE RPO No. 09062 UNTIL RPO No. 10234 - SINCE RPO No. 10234
07	6500 Z1	01	MAXI FUSES BOX
08	6547 SB	01	RELAY BOX
10	6504 29 6504 30 6504 23 6504 49	01 01 01 01	FUSE 5 AMP 10 AMP 20 AMP 30 AMP
15	6500 G2 6500 G3 6500 G4 6500 K5 6500 K6 6500 K2	01 01 01 01 01 01	FUSE 30 AMP 40 AMP 50 AMP 60 AMP 70 AMP 80 AMP
20	6500 N8 6500 N9 6500 P0 6500 P1 6500 P2	01 01 01 01 01	MINI FUSE 5 A 10 A 15 A 20 A 30 A