

: 28 FUSE BOX (PASSENGER COMPARTMENT) (WITHOUT REAR ELECTRIC WINDOW) (BH28-1)

LEFT HAND DRIVE SINCE RPO NO. 08576 UNTIL RPO NO. 08882

Passenger compartment fuse box (BFH28/1)			
Fuses	A	Electrical supply	Matching

R1 : 5A - R2 : 10A - R3 : 30A - R4 : 20A - R5 : 15A .

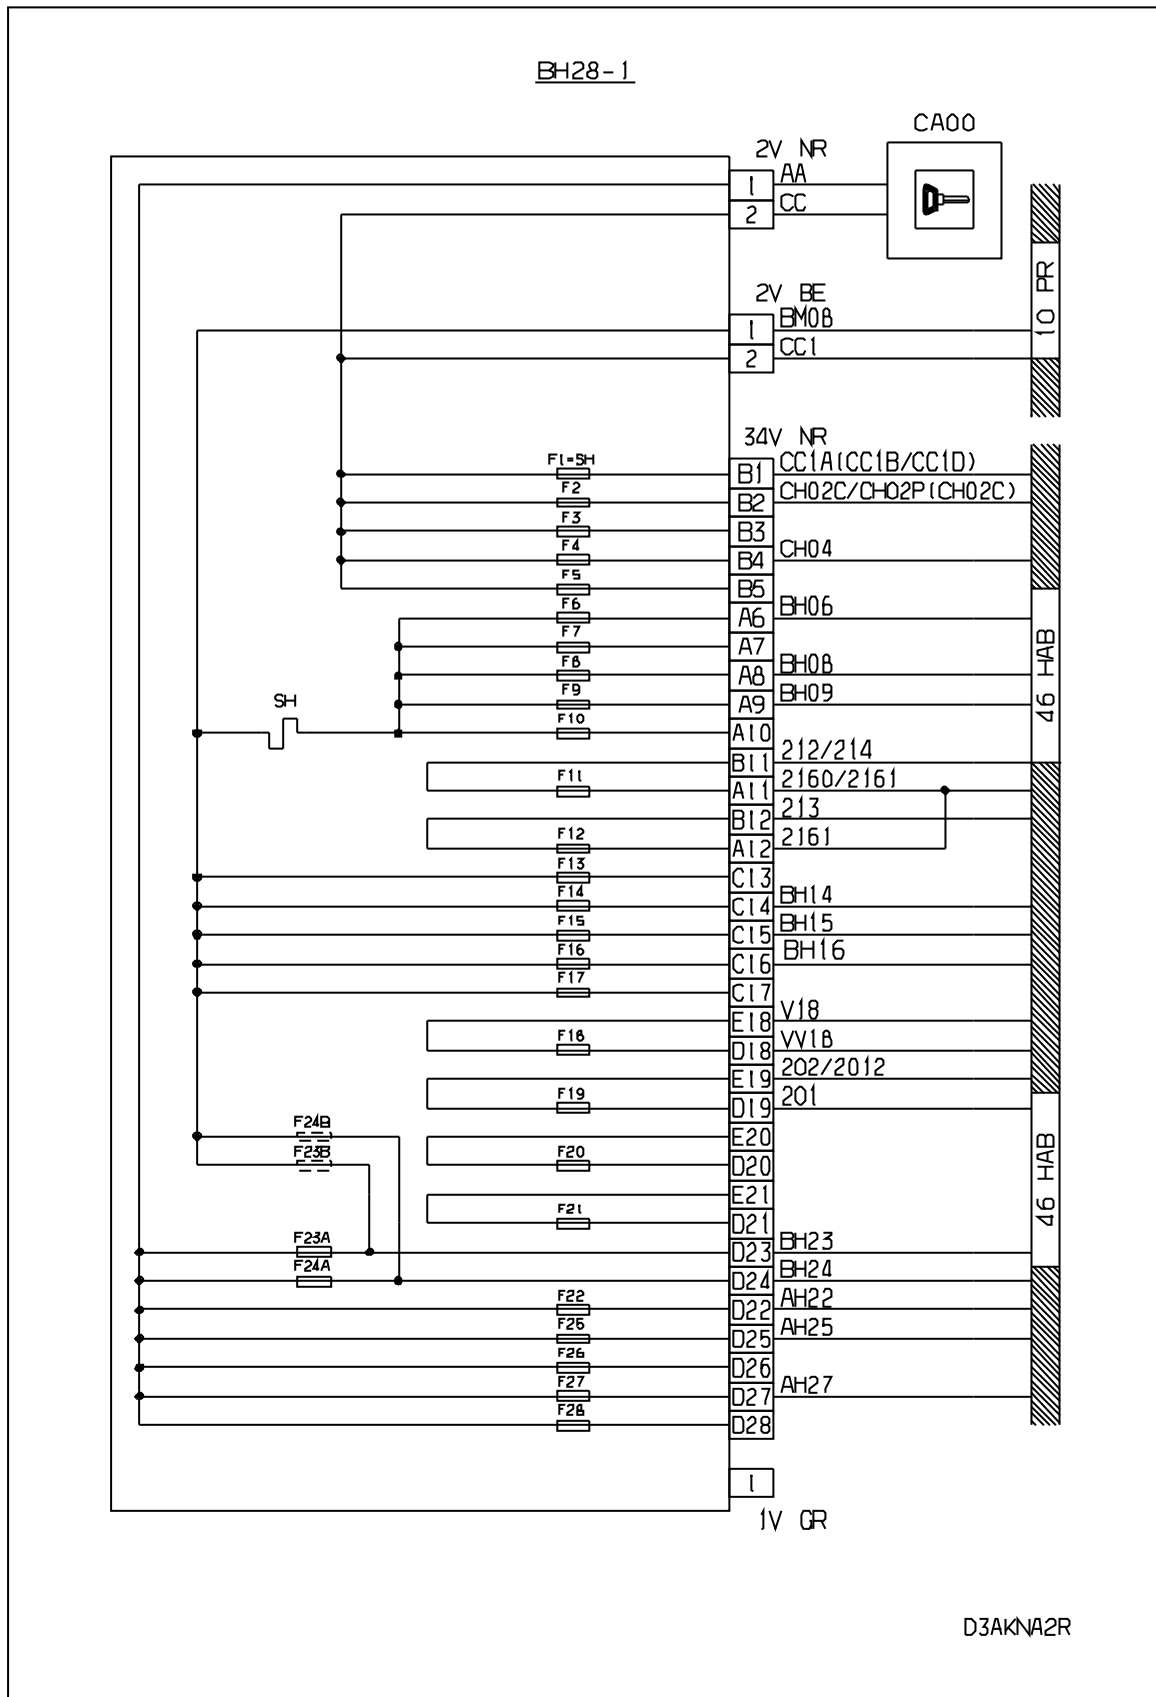


Figure : D3AKNA2R

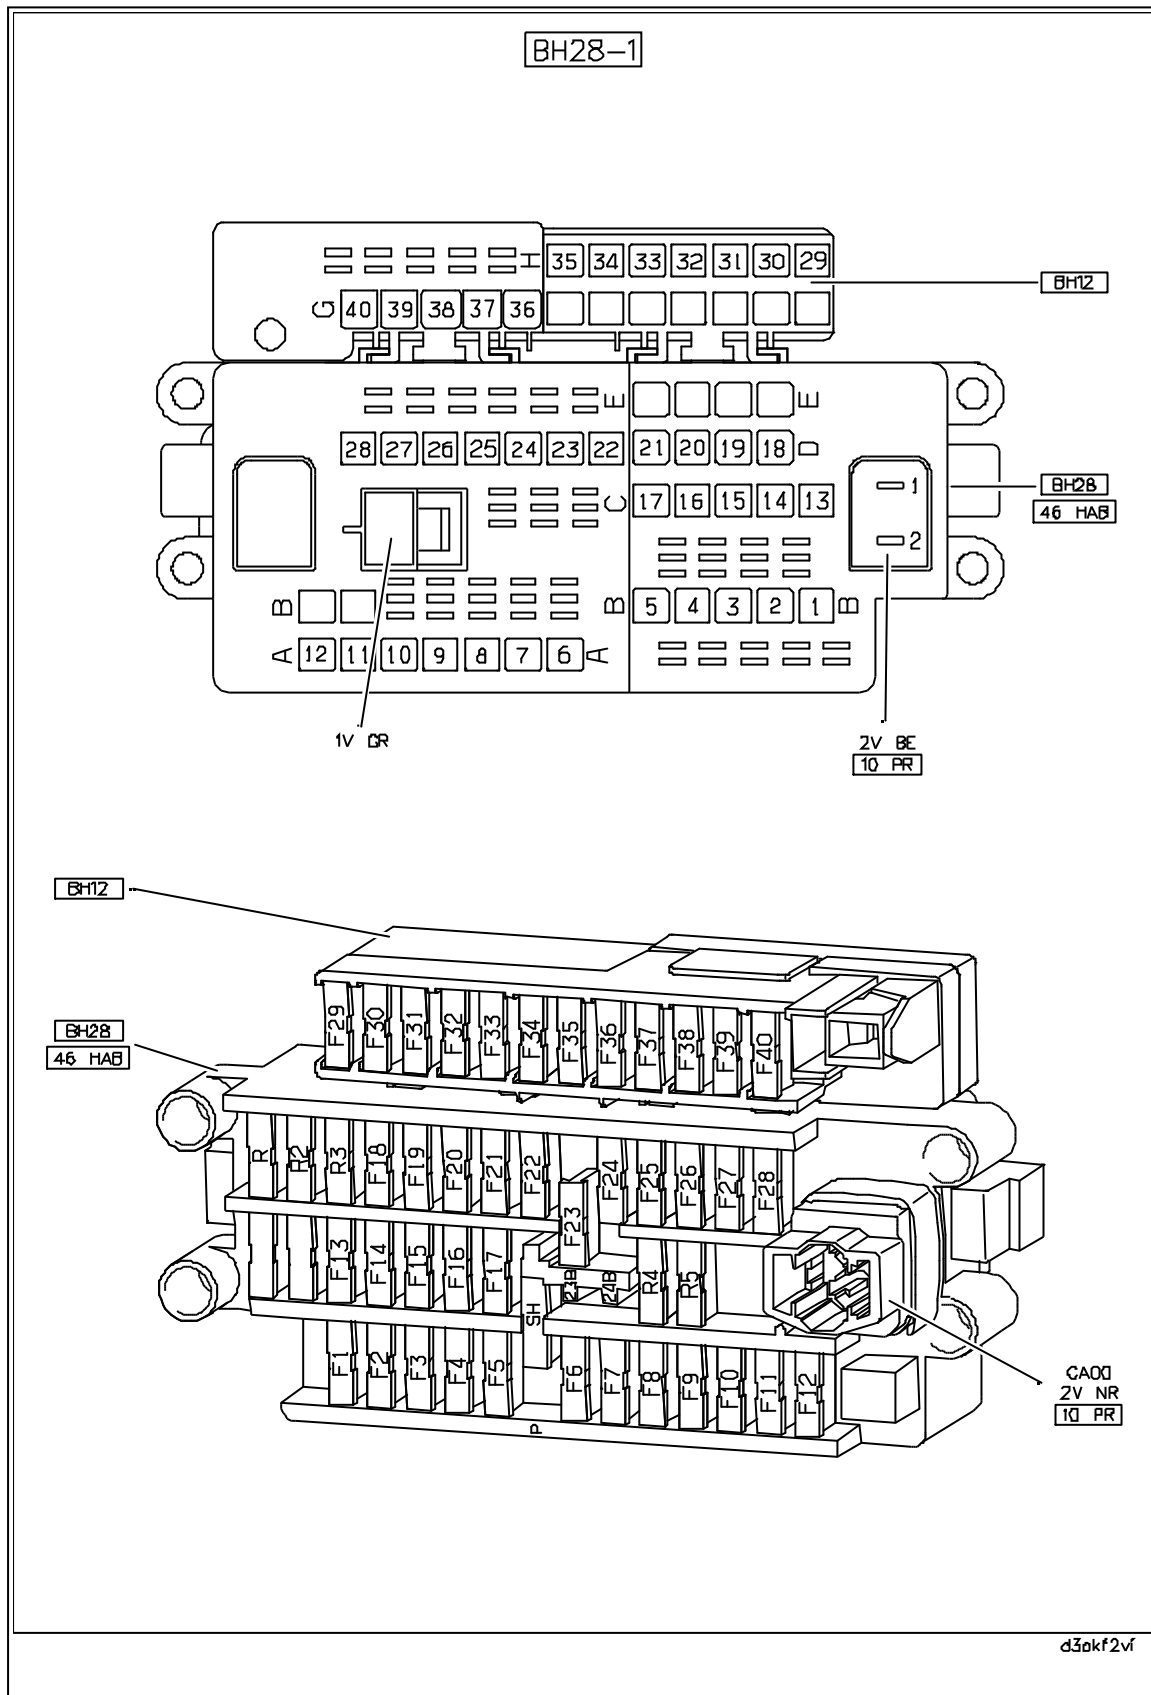


Figure : D3AKF2VI

RIGHT HAND DRIVE SINCE RPO NO. 08576 UNTIL RPO NO. 08882

Passenger compartment fuse box (BFH28/1)

Fuses	A	Electrical supply	Matching
-------	---	-------------------	----------

R1 : 5A - R2 : 10A - R3 : 30A - R4 : 20A - R5 : 15A .

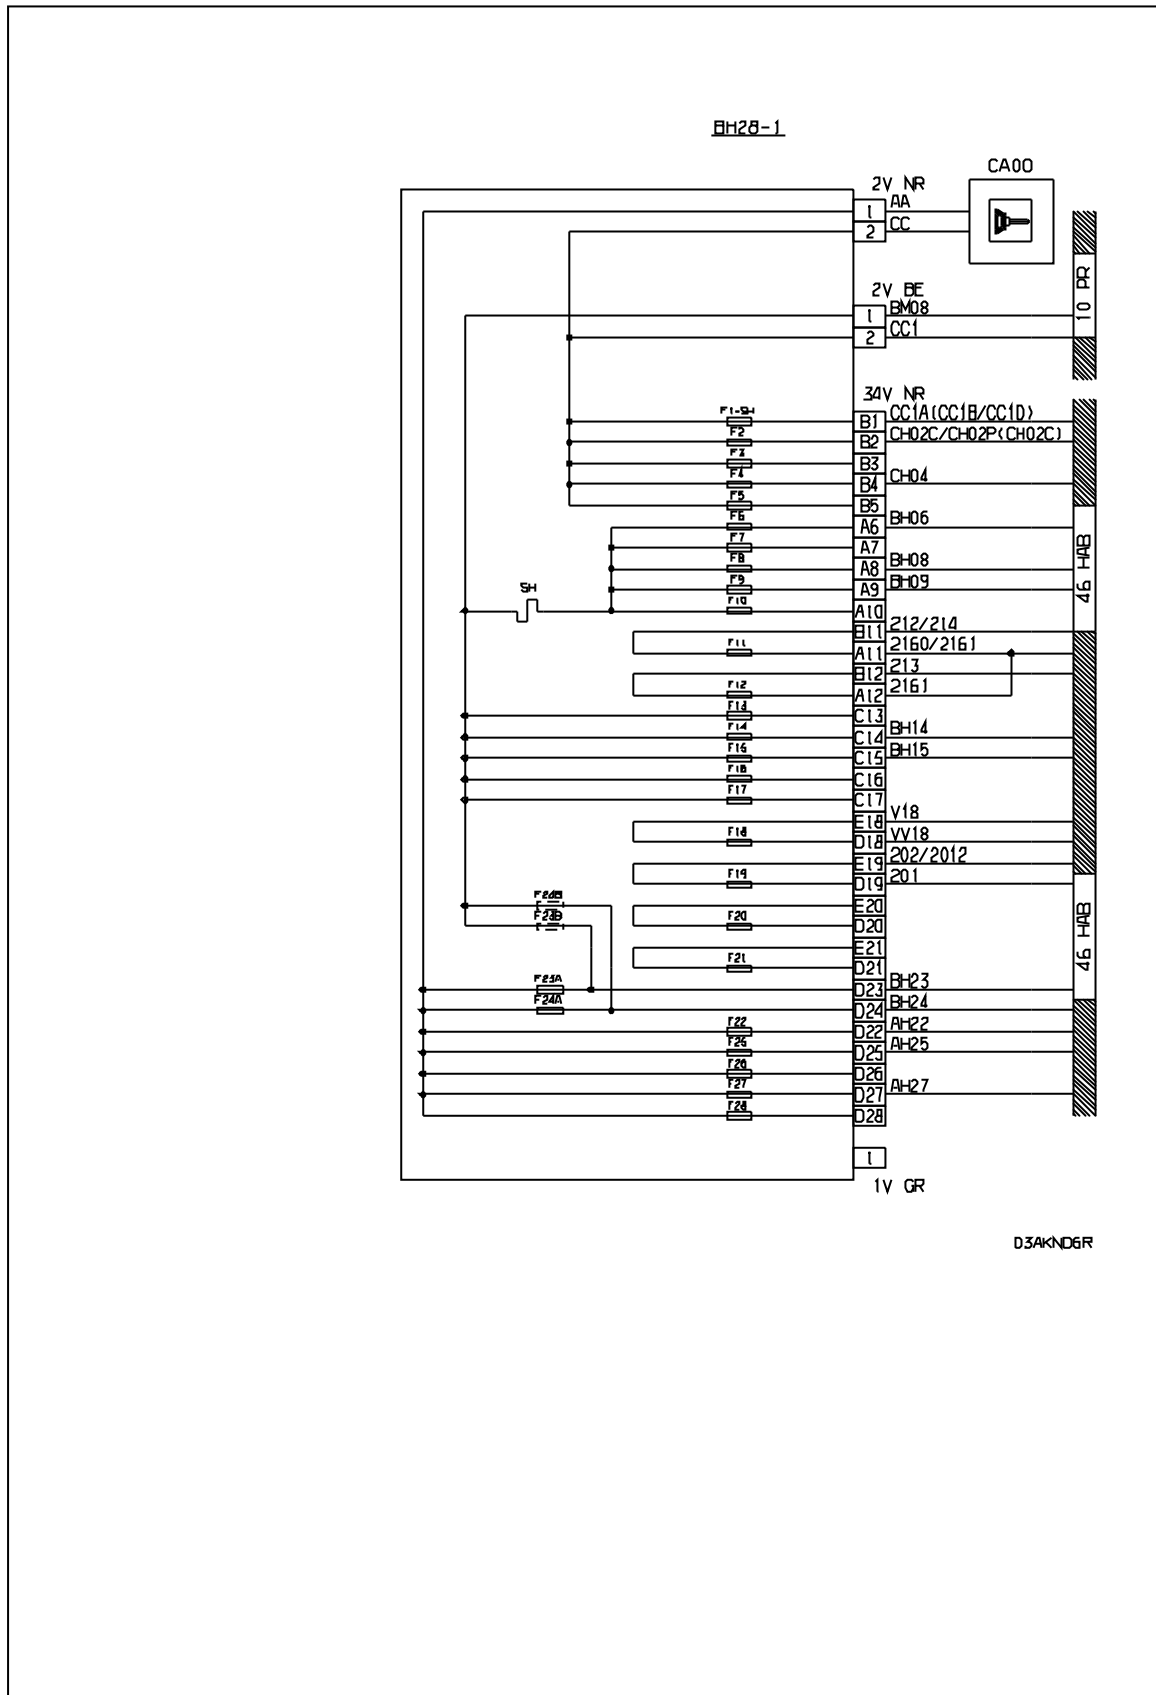


Figure : D3AKND6R

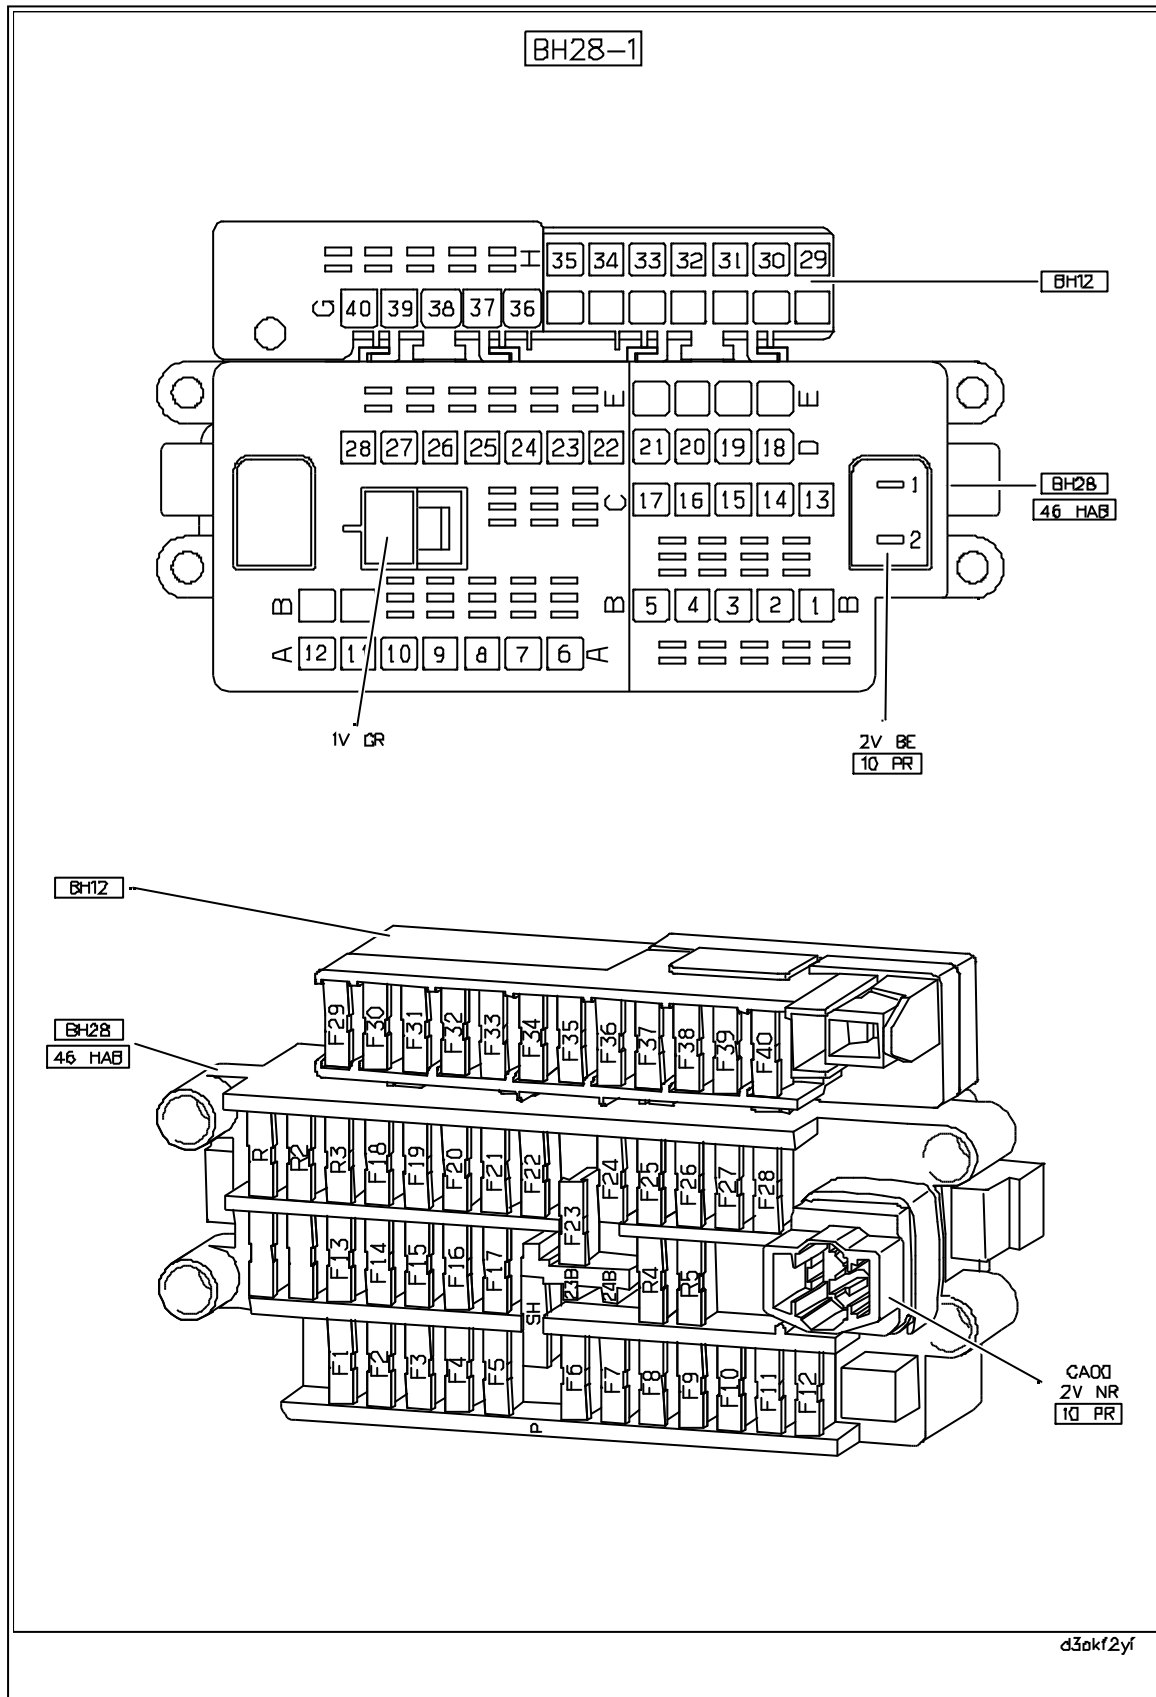


Figure : D3AKF2YI

LEFT HAND DRIVE SINCE RPO NO. 08883

Passenger compartment fuse box (BFH28/1)			
Fuses	A	Electrical supply	Matching

R1 : 5A - R2 : 10A - R3 : 30A - R4 : 20A - R5 : 15A .

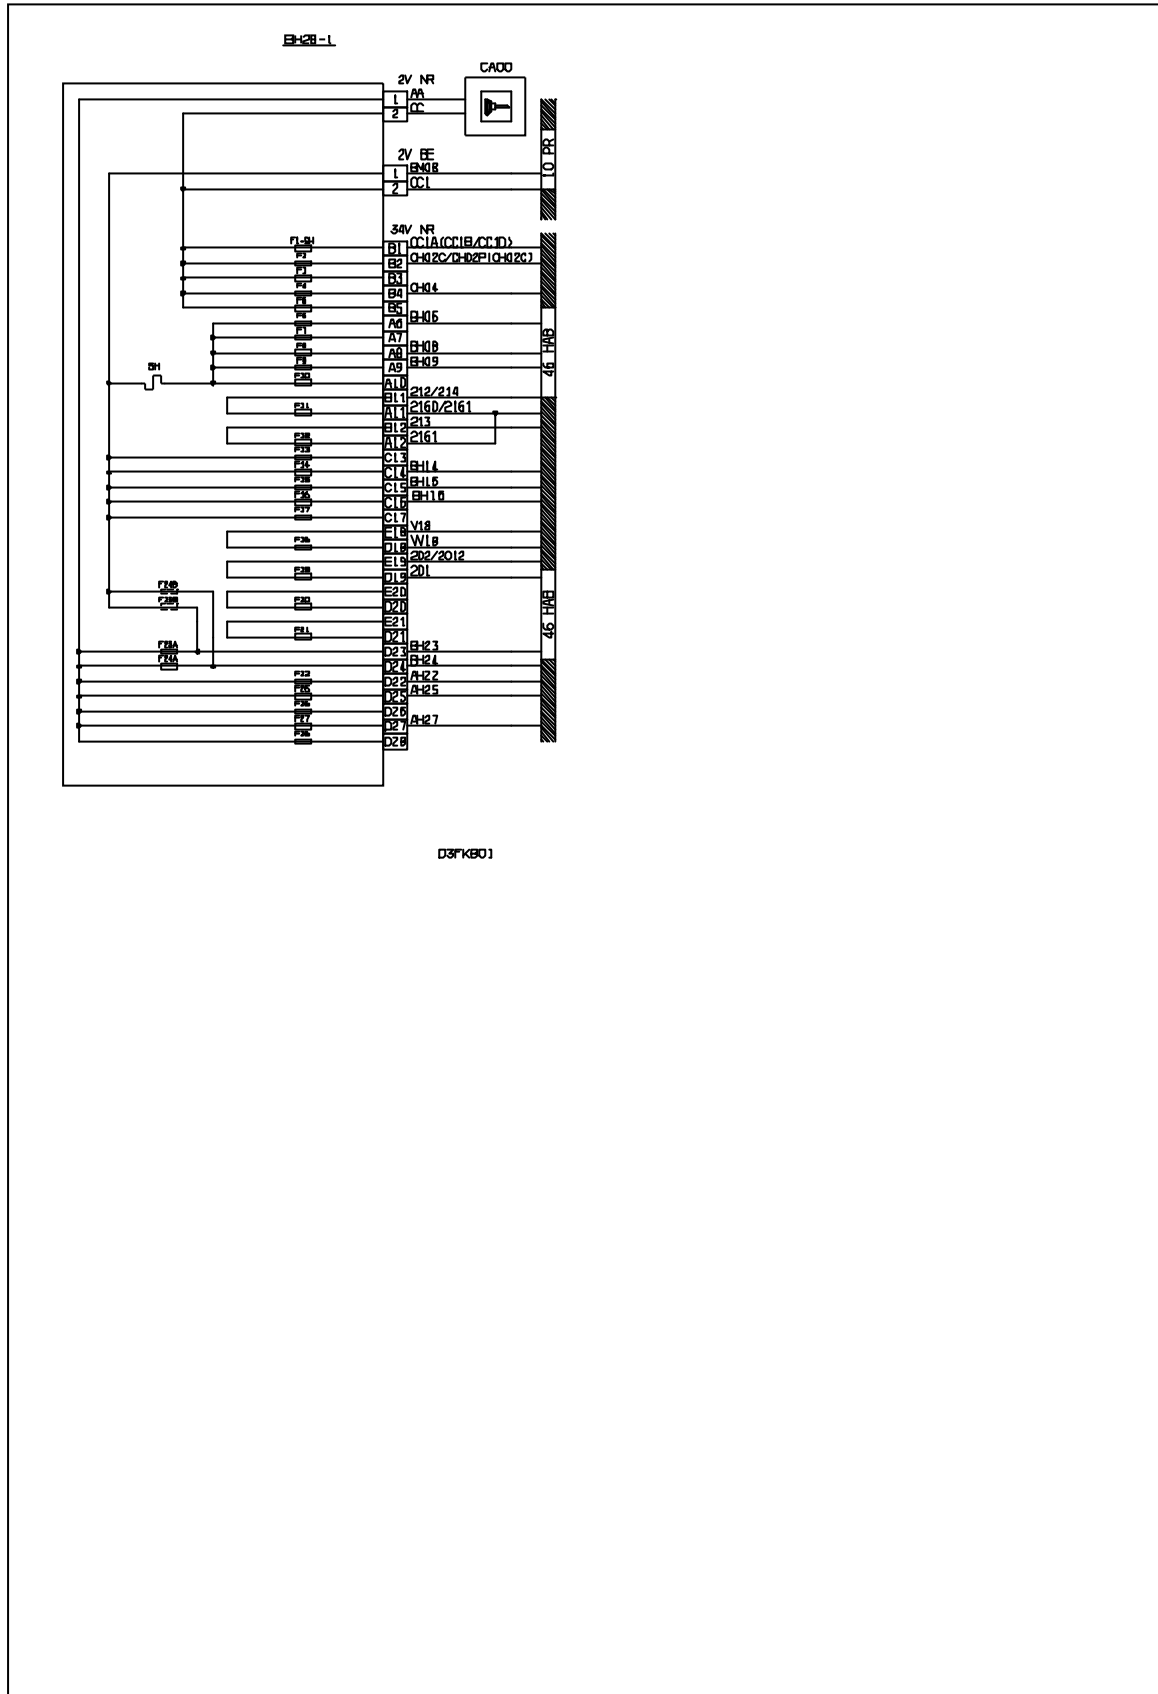


Figure : D3FKB01R

Fuses	A	Electrical supply	Matching
-------	---	-------------------	----------

R1 : 5A - R2 : 10A - R3 : 30A - R4 : 20A - R5 : 15A .

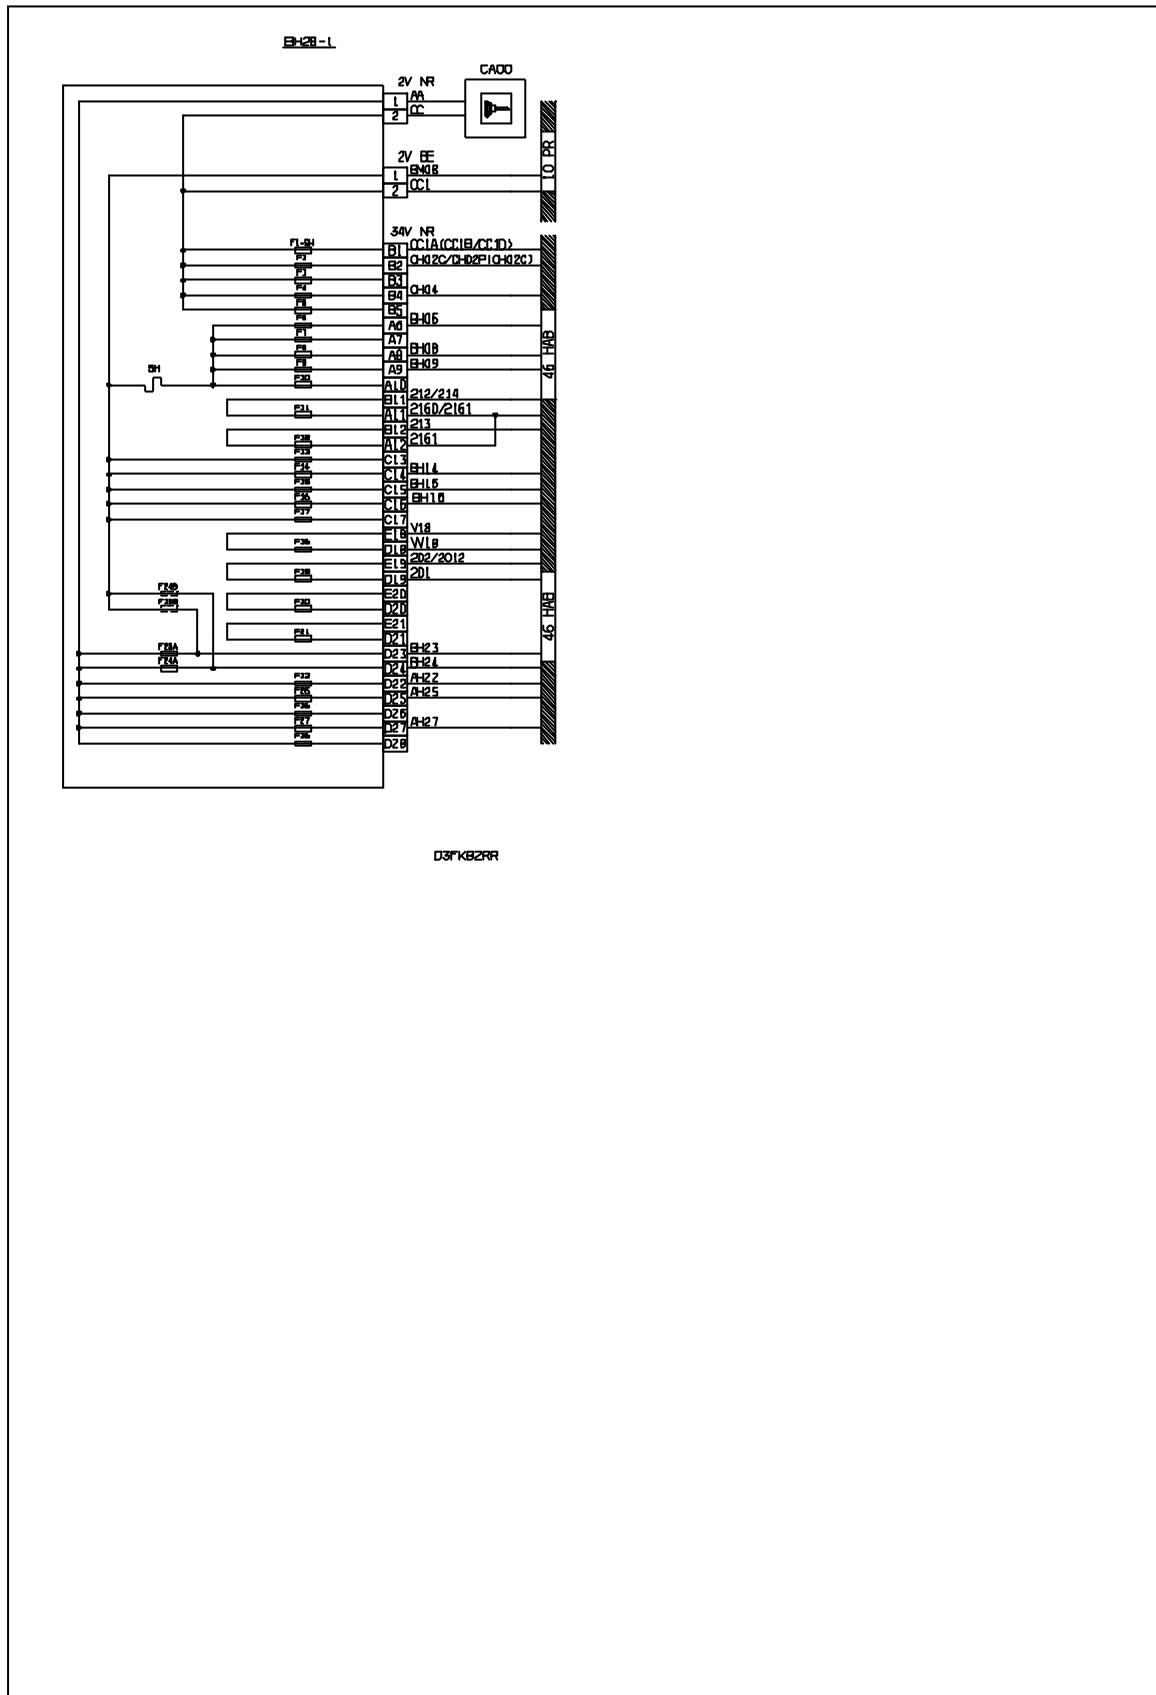


Figure : D3FKB2RR

