

REMOVAL / REFITTING : FASCIA :

1. Tools

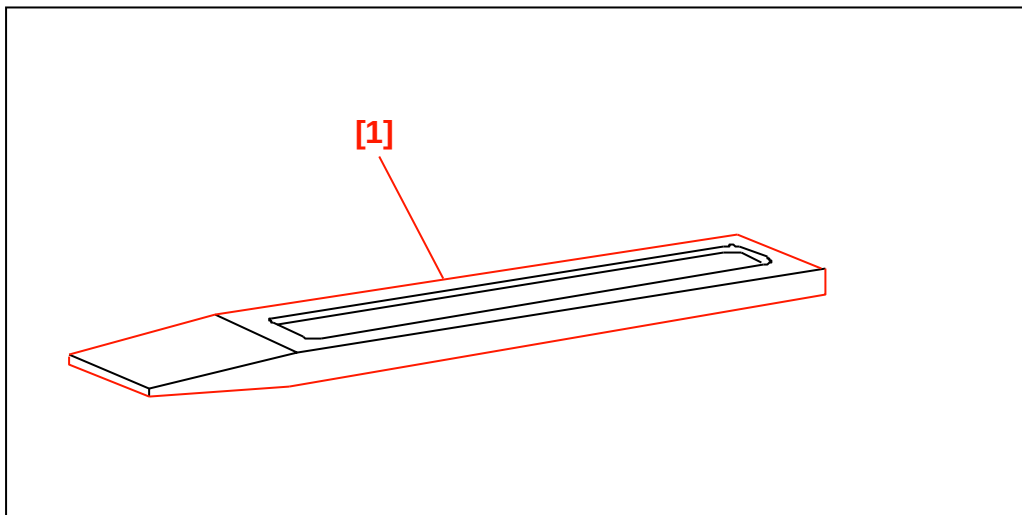


Figure : E5AP2S0D

[1] Spatula (-).1350 .

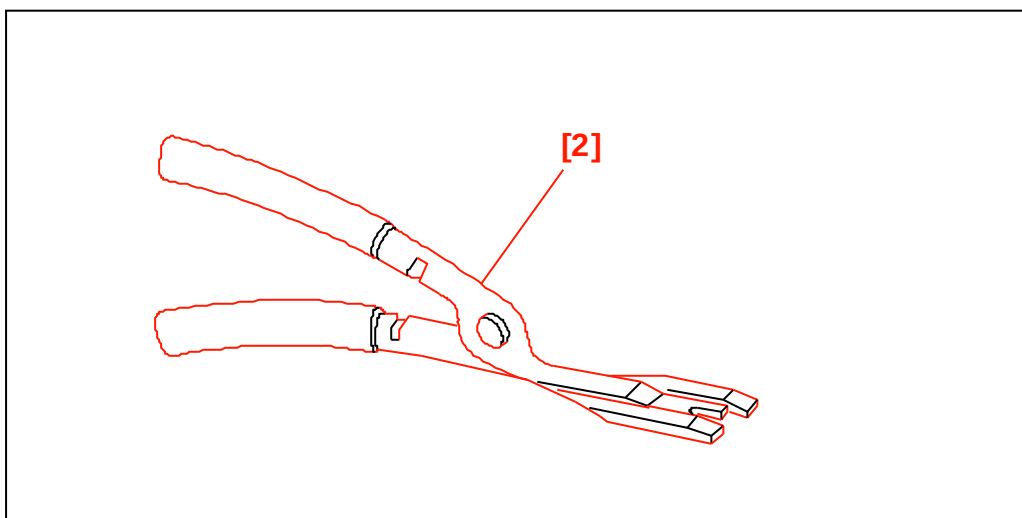


Figure : E5AP2S1D

[2] Trim pliers (-).1311 .

2. Removal

URGENT : Apply the safety recommendations for air bags ⓘ .

Disconnect the battery .

Remove :

- The central console ⓘ

- The steering column ⓘ
- The driver's steering column air bag ⓘ
- The fascia panel storage compartment ⓘ
- The fascia panel vents ⓘ
- The instrument panel ⓘ
- The fascia panel central panel ⓘ
- The fascia panel upper panel ⓘ

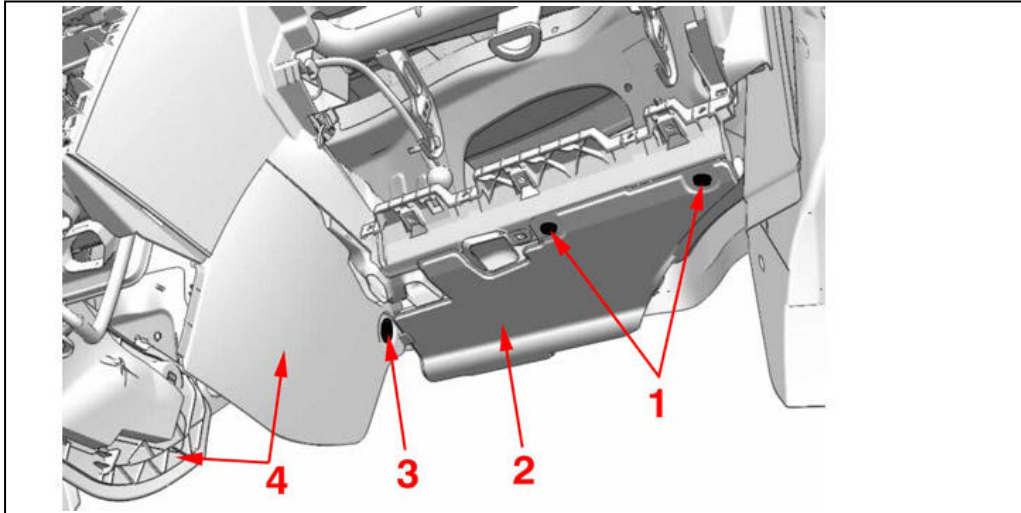


Figure : C5FP0WQD

Remove :

- The clips (1) ; Using the tool [2]
- The sound insulation under the fascia (2)
- The clips (3) (On each side) Using the tool [2]
- The trim panels (4)

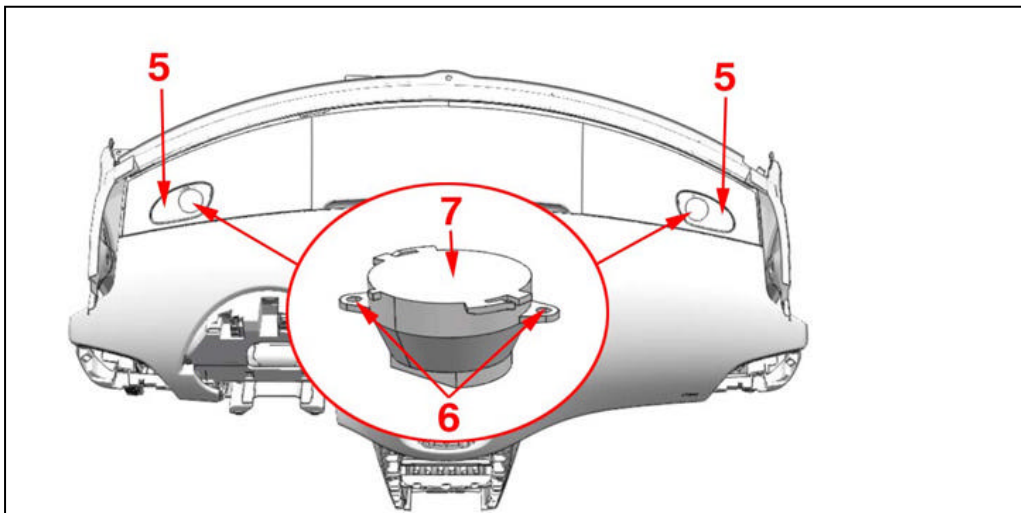


Figure : C5FP0WRD

Remove the front speaker grilles (5) ; Using the tool [1] .

Remove the bolts (6) .

On each side :

- Disconnect the speaker connector

- Remove the front speaker (7)

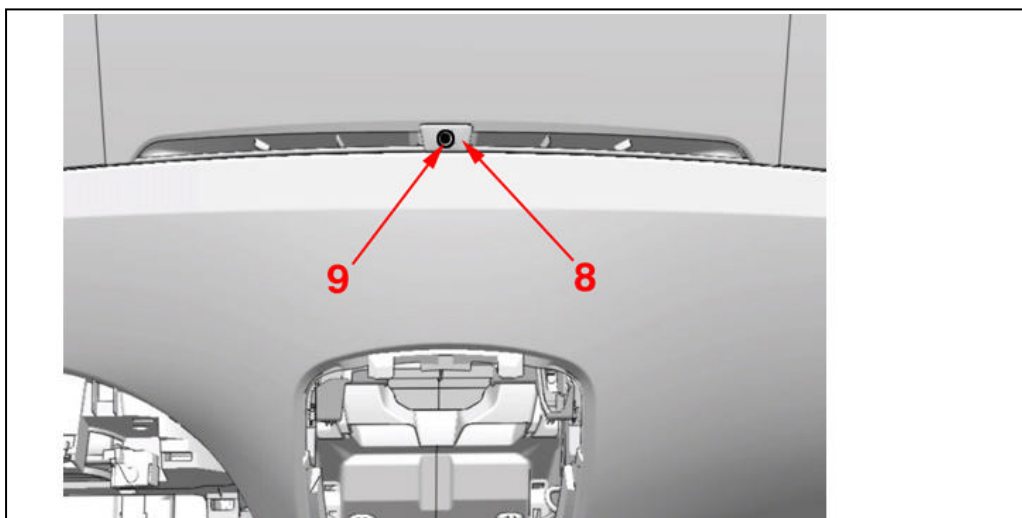


Figure : C5FP0WSD

Unclip the closer (8) ; Using the tool [1] (*) .
 Disconnect the sunshine sensor connector (9) (*) .
 Remove the closer and sunshine sensor assembly (*) .

N.B. : (*) According to specification .

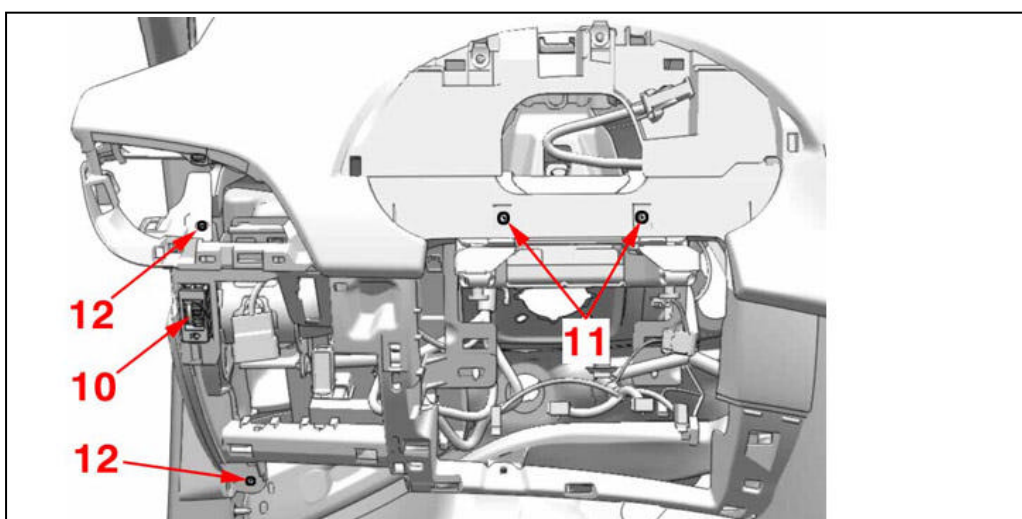


Figure : C5FP0WTD

Unclip the headlamp adjuster control (10) .
 Disconnect the control connector .
 Remove the headlamp adjuster control (10) .
 Remove :

- The bolts (11)
- The bolts (12) (On each side)

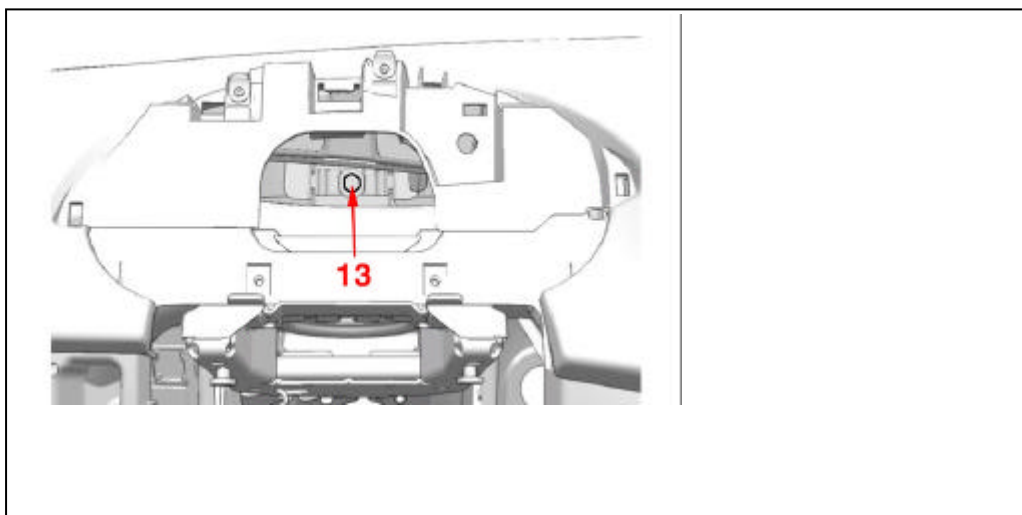


Figure : C5FP0WUD

Remove the bolt (13) .

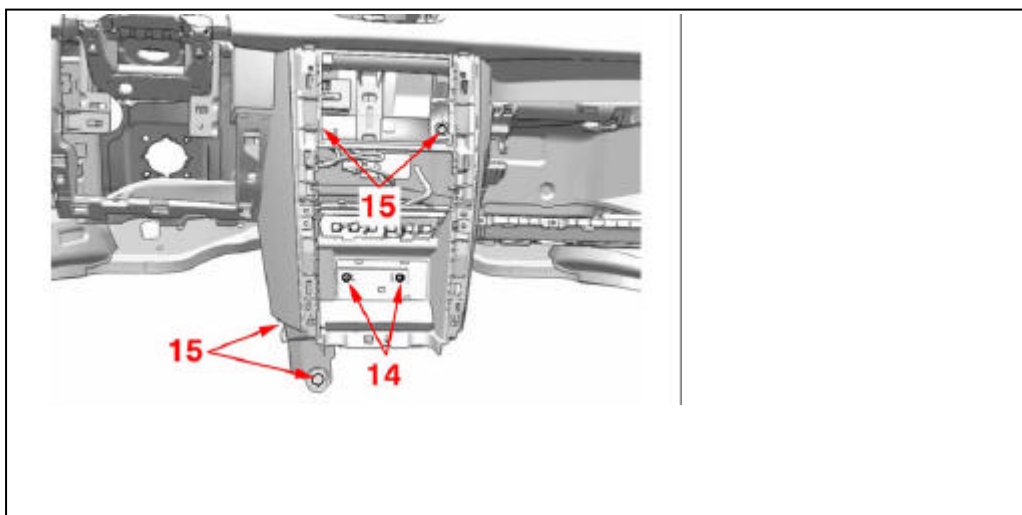


Figure : C5FP0WVD

Remove :

- The bolts (14)
- The bolts (15)

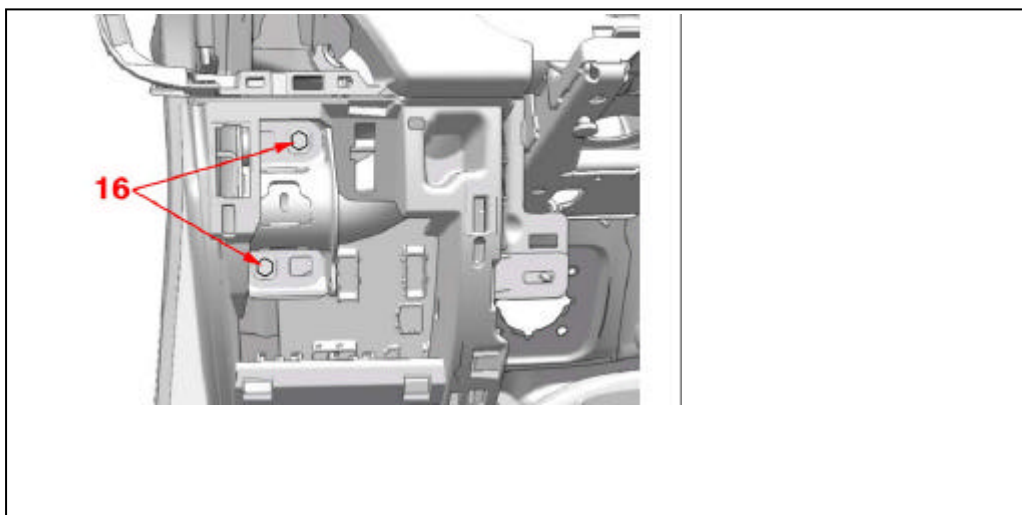


Figure : C5FP0WWD

Remove the bolts (16) (On each side) .

GEARBOX MA PILOTE

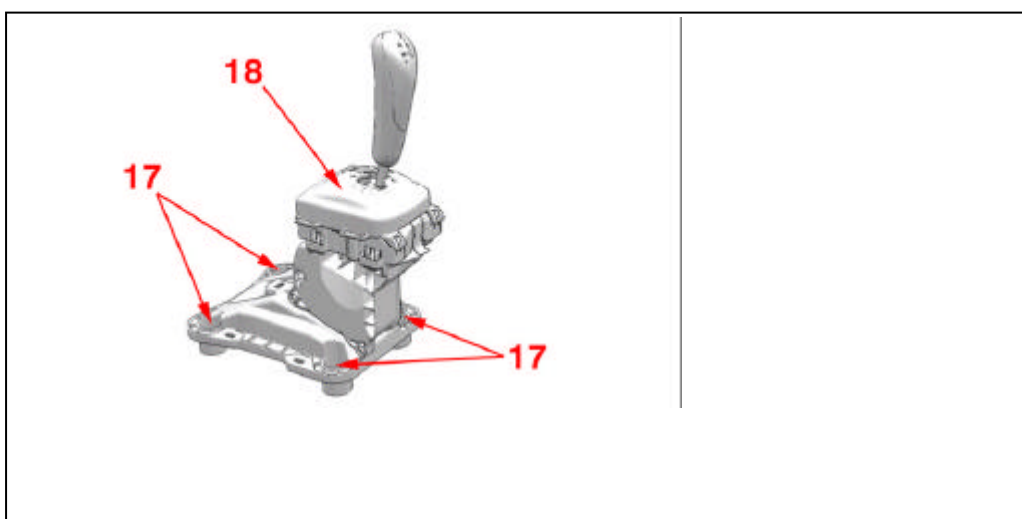


Figure : B2CP46PD

Remove the bolts (17) .

Detach the gear shift control assembly (18) .

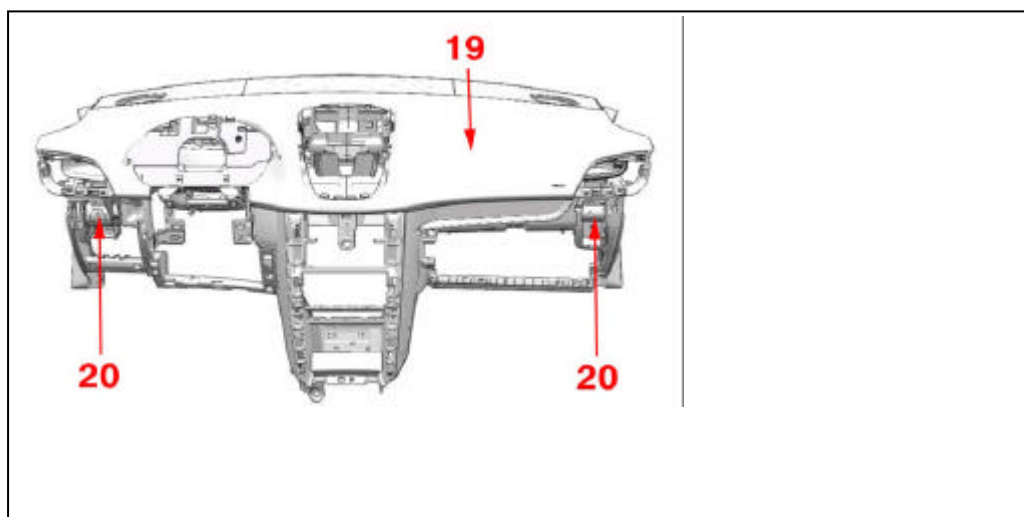


Figure : C5FP0WXD

Detach the electrical harnesses .

Remove the fascia panel (19) and crossmember (20) assembly .

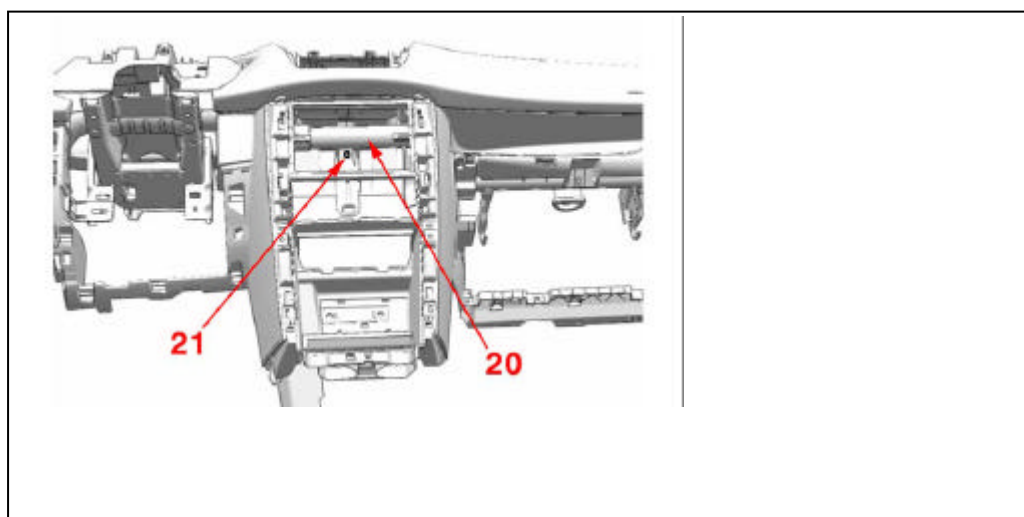


Figure : C5FP0WYD

Remove :

- The bolt (21)
- **The passenger air bag** ⓘ

Detach and remove the fascia panel (19) .

3. Refitting

Proceed in the reverse order to removal .

Tighten :

- The bolts (6 - 11 - 12 - 14 - 21) to 0.3 da.Nm
- The bolts (17) to 0.8 da.Nm
- The bolts (13 - 15 - 16) to 1.0 da.Nm

Check the electrical operation .