

REMOVE - REFIT : REAR WINDOW MECHANISM :*5 DOOR SALOON OR 5 DOOR ESTATE***1. Removing**

Remove the rear door window ⓘ .

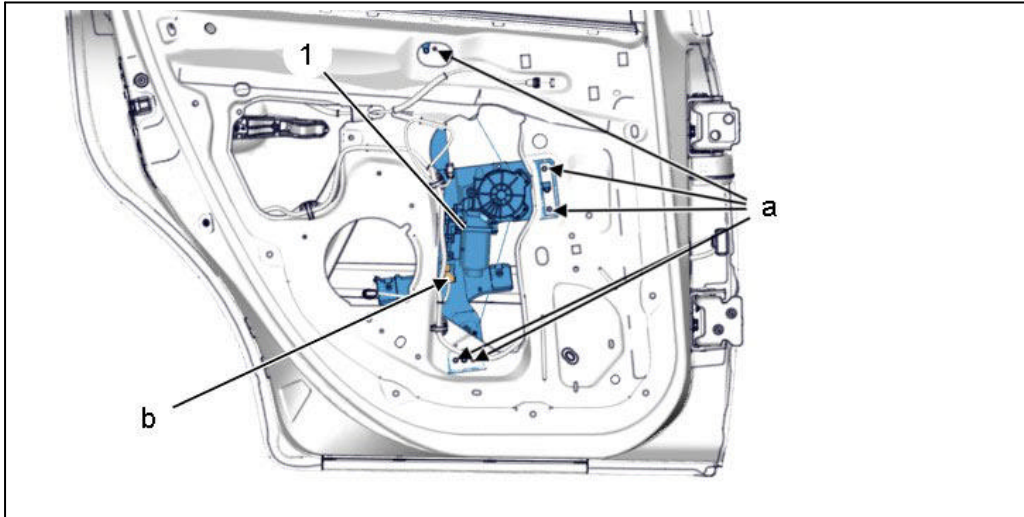


Figure : C5DM01BD

Disconnect the connector (at " b ") (4 -way grey) .
 Drill out the rivets with a 6 mm drill (at " a ") .

N.B. : Drive out the nails from the rivets before drilling .

Liberate window winder mechanism (1) through opening .
 Remove the window mechanism (1) .
 Drill the bodies of the remaining rivets .

2. Refitting

Proceed in the reverse order to removal .

N.B. : Vacuum in the bottom of the door to remove remnants of rivets . When replacing the rear window mechanism : Initialise the rear window mechanism ; Using the diagnostic tool (PP 2000) . Check the operation of the mechanism before refitting the door sealing sheet .

Check the electrical operation of the equipment .