REMOVAL - REFITTING : PASSENGER AIR BAG :

1. Preliminary operations

Apply the safety recommendations for air bags .
Apply the procedure for switching off the central airbag system .
Remove : **The glove box** (**Passenger**) .

2. Removal

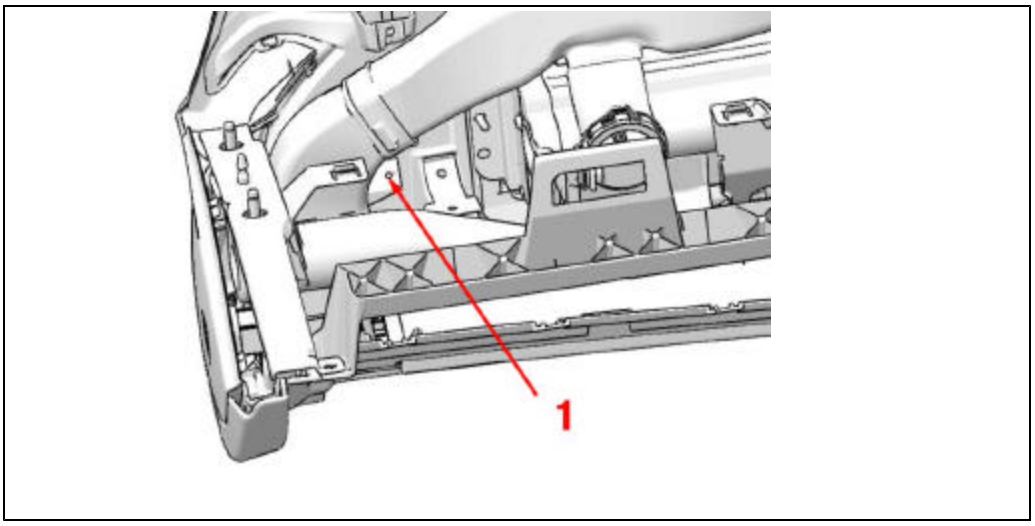


Figure : C5FK13TD

Remove the bolt (1) .

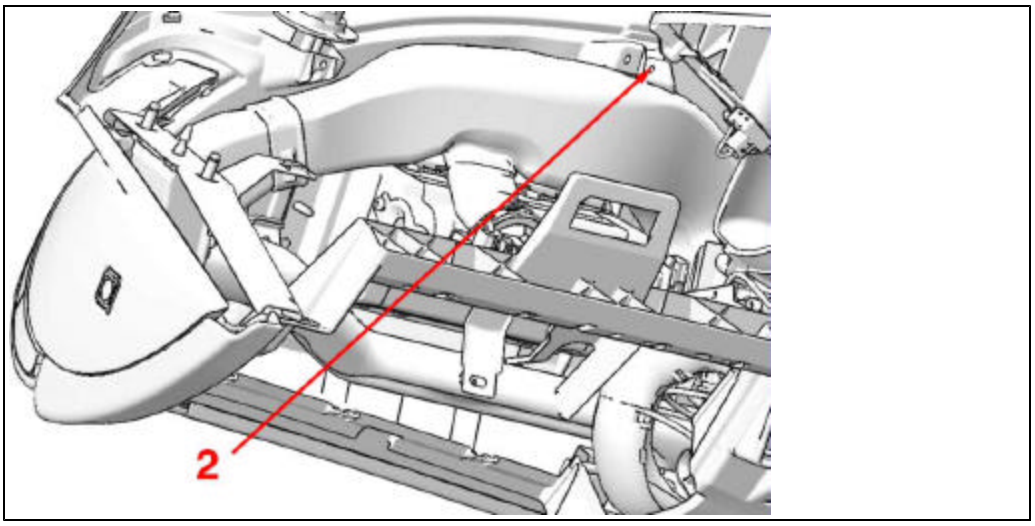


Figure : C5FK13UD

Remove the bolt (2) .

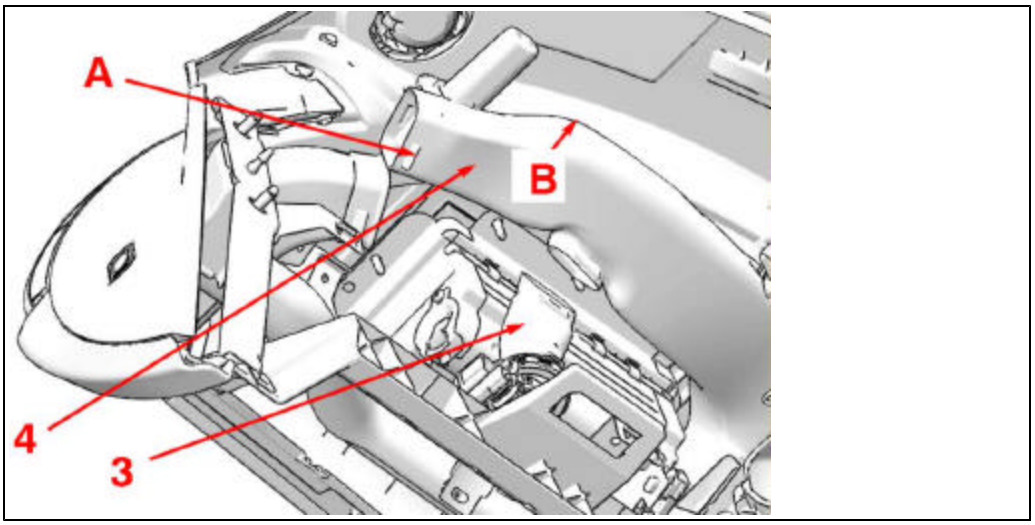


Figure : C5FK13VD

Unclip and remove : The air duct (3) .
Unclip the air duct (A) at (4) and push it back at (B) to clear the access to the passenger air bag fixing bolts .

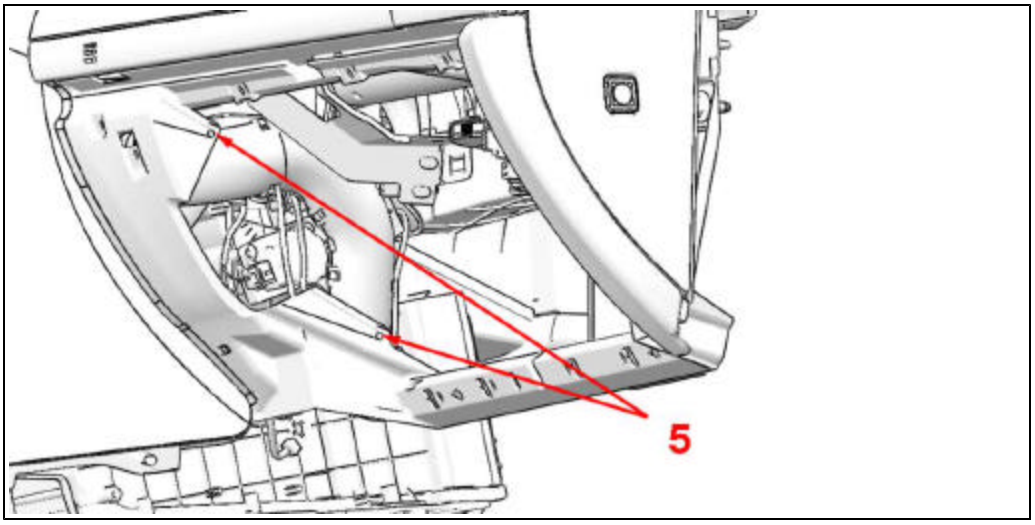


Figure : C5FK13WD

Remove the bolts (5) (Sheathing fixing) .

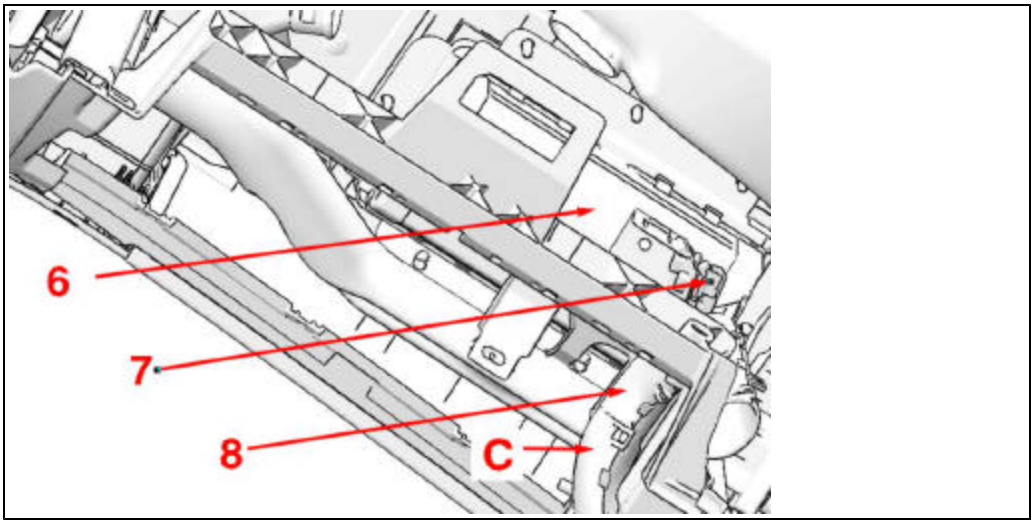


Figure : C5FK13XD

Disconnect the connectors (7) (Airbag (6)) .
Push back the sheathing (C) at (8) to clear the access to the air bag side fixing (Passenger) .

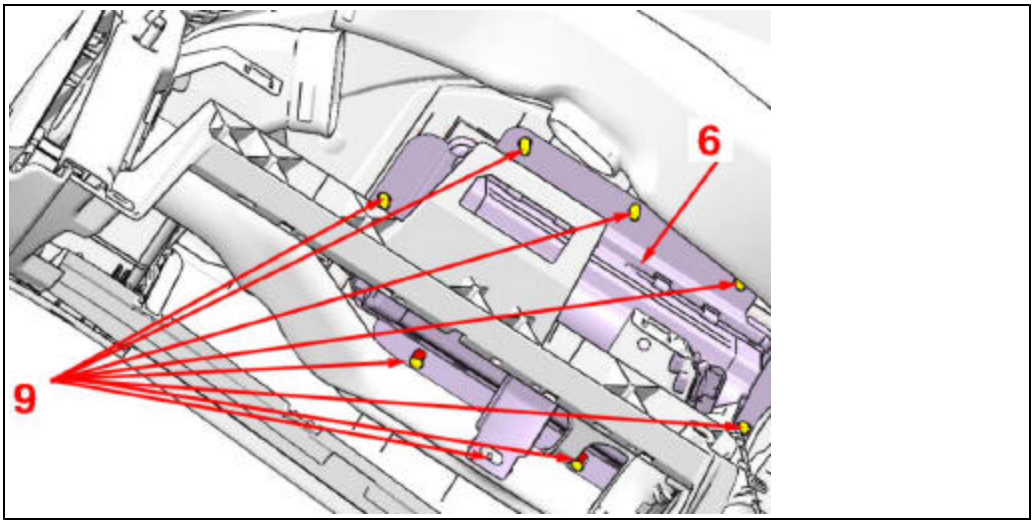


Figure : C5FK13YD

Remove the mountings (9) .
Remove the passenger's airbag (6) .
Apply the scrapping procedure : **In the event of the air bag being replaced** .
Replacement of the pretensioning components following triggering of the air bags and seat belts .

3. Refitting

Proceed in the reverse order to removal .
Tighten the fasteners (9) to 0.3 da.Nm .

URGENT : **Apply the procedure for switching on the central airbag system** .