


COURTESY LIGHTS

1 - Front courtesy light
2 - Map reading lights
3 - Rear courtesy light
4 - Rear reading lights (estate)

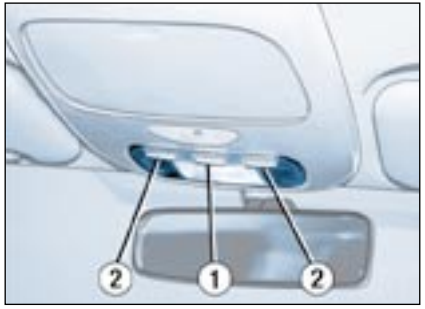


With the key in the accessories position (1st notch) or with the ignition on, operate the relevant switch.

The front and rear courtesy lights come on when the ignition key is removed, on unlocking the vehicle or on opening one of the doors.

They gradually go off after the ignition has been switched on or the vehicle is locked.

Note: the courtesy lights can be deactivated by pressing switch **1** for more than three seconds. A short press on switch **1** switches the front courtesy light on and off. The map reading lights are not affected by this and may be switched on.

☞ To re-activate the lights, press switch **1** for more than three seconds.

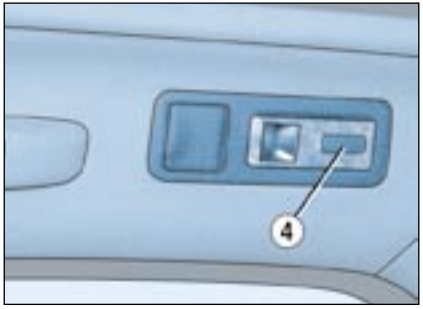

In addition, when the vehicle is moving, the front and rear courtesy lights flash if a door or the tailgate is not closed properly.

With the engine off:

☞ Pressing switch **1** switches on the front and rear courtesy lights for a duration of ten minutes.

☞ Pressing switch **3** or **4** switches on the rear courtesy light or the reading light concerned for a duration of ten minutes.