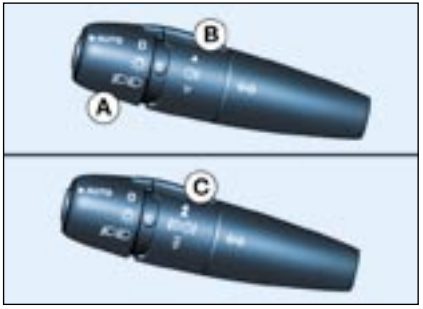


THE LIGHTS STALK

Front and rear lights

Selection is by turning ring **A**.

Lights off

Side lights

Dipped/Main beam headlamps

Automatic switching on of lights

Dipped/Main beam change

Pull the stalk towards you.

Note: with the ignition off and the automatic lighting function switched off, when the driver's door is opened, a buzzer sounds if you have left your lights on.

Front fog lamps and rear fog lamp

Rotate the ring forwards to switch on and backwards to switch off. The status is confirmed by the indicator light on the instrument panel.

Vehicles fitted with a rear fog lamp (ring B)

Rear fog lamp

This only operates with the dipped/ main beam headlamps.

Note: when the lights are switched off automatically, the rear fog lamp and the dipped headlamps remain on (turn the ring backwards to switch off the rear fog lamp. The dipped headlamps and side lights then switch off).

Vehicles fitted with front fog lamps and a rear fog lamp (ring C)

Front fog lamps (first rotation of the ring forwards)

The front fog lamps operate with the side lights and the dipped headlamps.

When the main beam headlamps are switched on, the front fog lamps are switched off. They are switched on again when the main beam headlamps are switched off.

Front and rear fog lamps (2nd rotation of the ring forwards).

Note: to switch off the rear fog lamp and the front fog lamps, turn the ring backwards twice in succession.

Note: when the lights are switched off automatically or when the dipped headlamps are switched off manually, the front fog lamps, the rear fog lamp and the side lights remain on (turn the ring backwards to switch off the front fog lamps. The side lights then switch off).

"Follow me home" lighting

When you leave your vehicle, the side lights and dipped headlamps can be left on for approximately 30 seconds.

To do this:

- place the key in the **STOP** position,
- place the lights stalk in the **0** position,
- flash the headlamps,
- get out of the vehicle and lock it.

In good or rainy weather, both day and night, the front fog lamps and the rear fog lamp are dazzling and are prohibited.

Do not forget to switch them off when they are no longer needed.

Direction indicators (flashers)



Left: downwards.
Right: upwards.

AUTOMATIC SWITCHING ON OF LIGHTS

The side lights and dipped beam headlamps switch on automatically if the light is poor and when the windscreen wipers operate continuously and switch off when the light becomes bright enough or the windscreen wipers are switched off.

In foggy weather or in snow, the brightness sensor can detect sufficient light, the lights will not come on automatically.

This function is active when the vehicle is supplied to the customer.

To disarm or activate the function:

- Place the key in the accessories position (1st notch),
- Place the lights stalk in the **AUTO/0** position,
- Press the end of the lights stalk for more than four seconds.

Do not cover the brightness sensor, coupled with the rain sensor, located in the centre of the windscreen, behind the interior mirror. It is used for automatic switching on of the lights.

Operating check

Activation

The activated function is accompanied by an audible signal and a message on the multifunction display.

Disarming

The disarmed function is accompanied by an audible signal.

When the driver uses the manual lighting controls, the function is temporarily disarmed.

If the brightness sensor does not function correctly, the lights come on accompanied by an audible signal and a message on the multifunction display.

Contact a PEUGEOT dealer.