
29/10/07 65H01A

CHECKING STAND AND FUSE BOX

5 DOOR SALOON OR FIRM 5 DOOR SALOON OR 5 DOOR ESTATE OR 4 DOOR SALOON

NOTE: THE FUSE BOX IS INTEGRAL WITH THE MAIN HARNESS

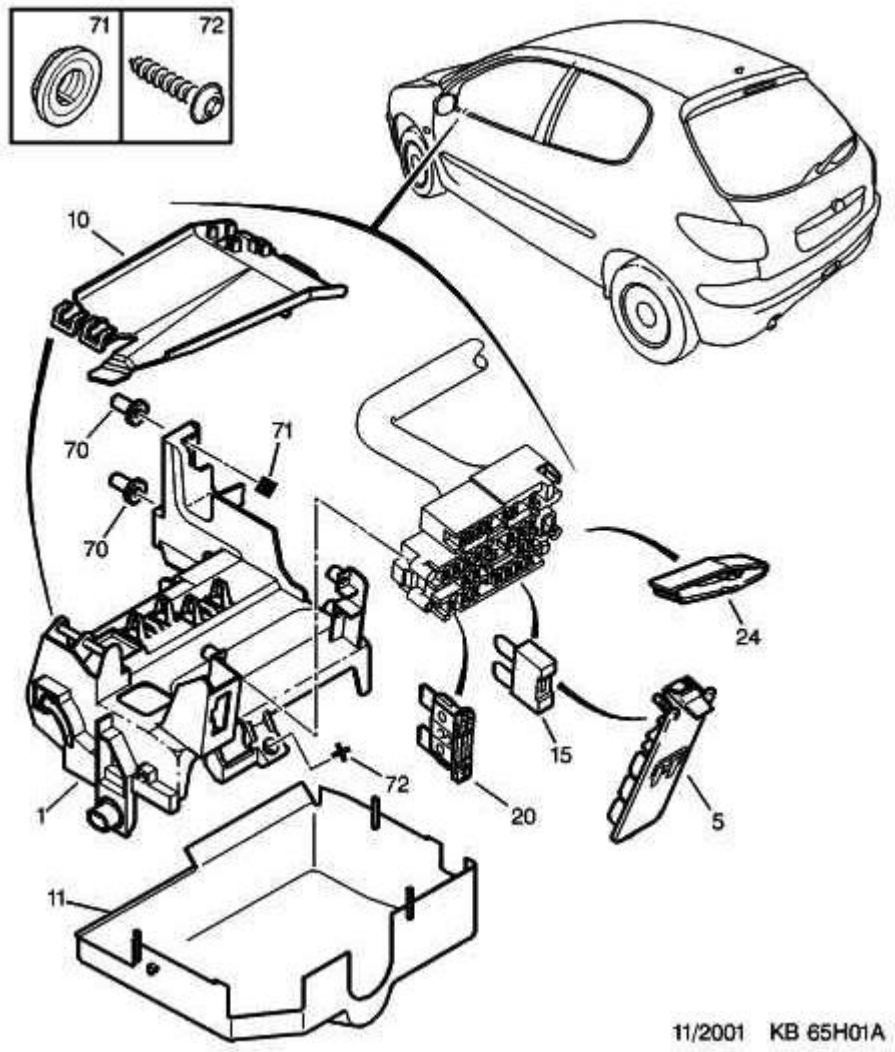

01			**FUSE BOX BRACKT**
	6547 NK	01	*- LEFT HAND DRIVE AND WITHOUT MULTIPLEXING*
			FUSE BOX SUPP
	6556 W6	01	*- LEFT HAND DRIVE AND MULTIPLEXING ASSEMBLY*
			FUSE BOX BRACKT
	6556 W8	01	*- RIGHT HAND DRIVE AND WITHOUT MULTIPLEXING*
			FUSE BOX SUPP
	6556 W7	01	*- RIGHT HAND DRIVE AND MULTIPLEXING ASSEMBLY*
	RP 6556 YV	01	
05			**FUSE SUPPORT**
	6556 G1	01	*- MULTIPLEXING ASSEMBLY*
10			**FUSE BOX COVER**
	6547 NN	01	*- LEFT HAND DRIVE*
	6547 NP	01	*- RIGHT HAND DRIVE*
11			**COVER FUSE BOX**
	6547 SC	01	*- (GB)*
15			**FUSE**
	6504 29	01	5 AMP
	6504 30	01	10 AMP
	6504 22	01	15 AMP
	6504 23	01	20 AMP
	6504 49	01	30 AMP
20			**SHUNT**
	6504 81	01	LARG 18 PC - GREEN
	6546 04	01	LARG 14,5 OR - ORANGE
24			**FUSE PLIERS**
	6500 25	01	
70			**SPACER**
	6950 39	02	*- LEFT HAND DRIVE*
		01	*- RIGHT HAND DRIVE*
71			**NUT WITH BASE**
	6936 62	03	6X100-7,4-10
	RP 6936 C9	01	
72			**SCREW RLX**
	6925 K1	01	DIAM 4,2X13