REMOVAL / REFITTING : EXTERIOR MIRROR :

5 DOOR ESTATE OR 3 DOOR SALOON OR 5 DOOR SALOON

1. Recommended tools

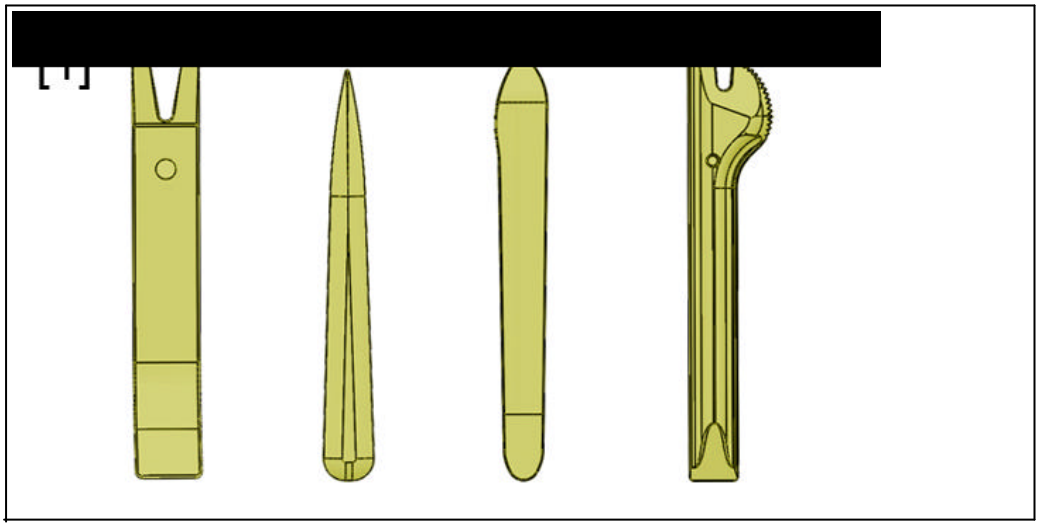


Figure : E5AP30WD

[1] Stripping tool (-).1350-ZZ .

2. Removal

Remove the door trim pad .

2.1. Electric mirror

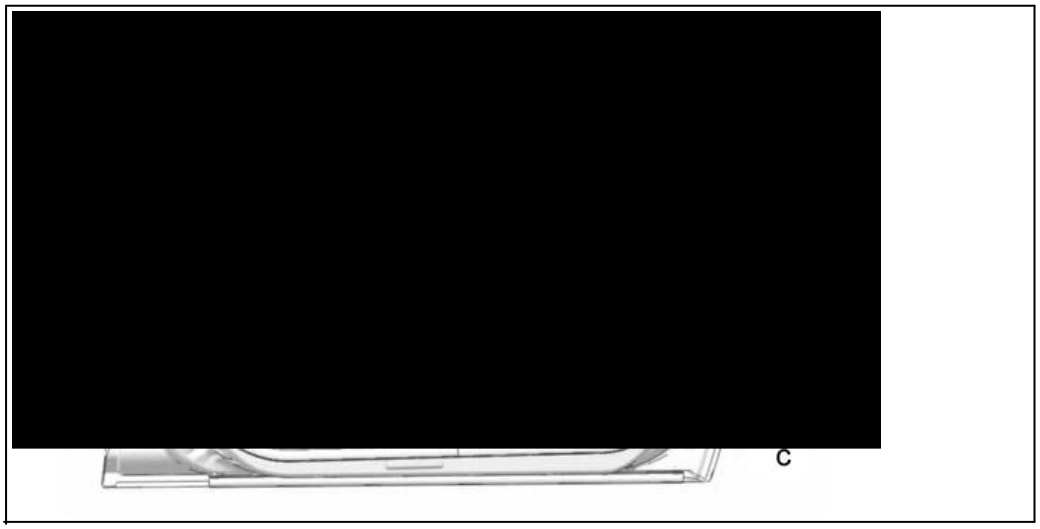


Figure : C4CM0GVD

Partially detach the sealing sheet (At "c") .
Unclip the clip (1) ; Using the tool [1] .
Disconnect (According to specification) :

- The connector (At " b ") (2 -way green)

- The connector (At " d ") (5 -way black)
- The connector (At " a ") (2 -way brown)

2.2. Manual rear view mirror

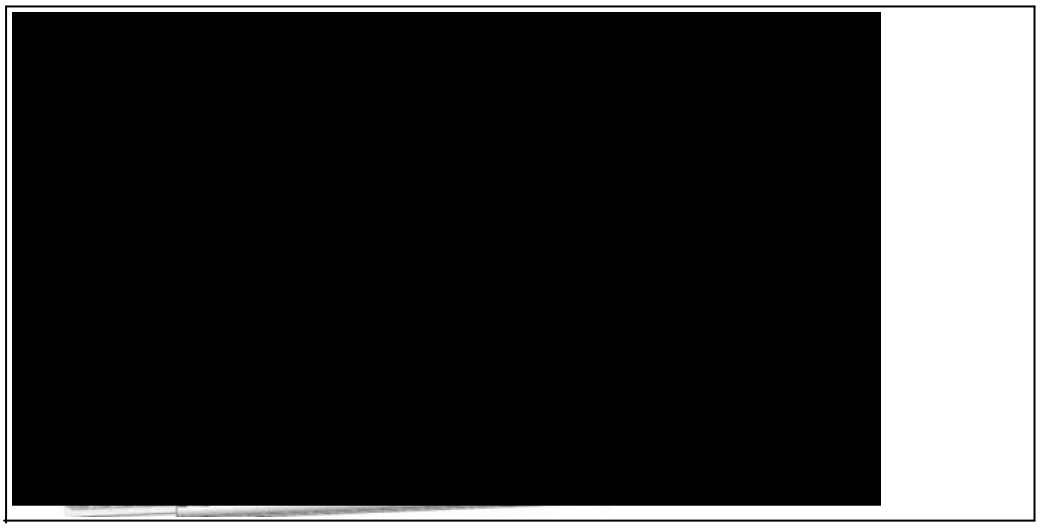


Figure : C4CM0GWD

Release the manual adjustment control cable (2) (At "e") (According to specification) .

2.3. Removal (Continued)

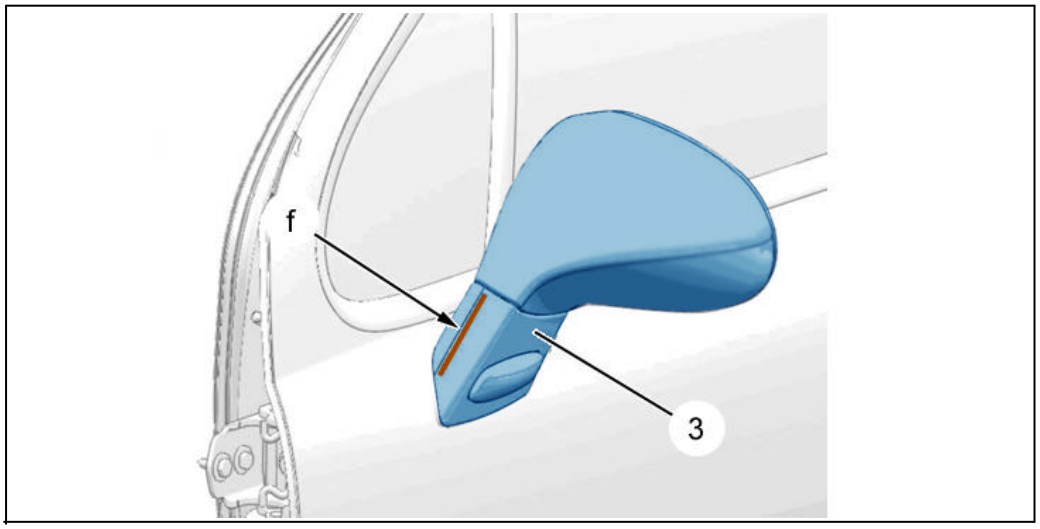


Figure : C4CM0GXD

Unclip the outer cover from the base of the exterior rear view mirror (3) (At "f") ; Using the tool [1] .

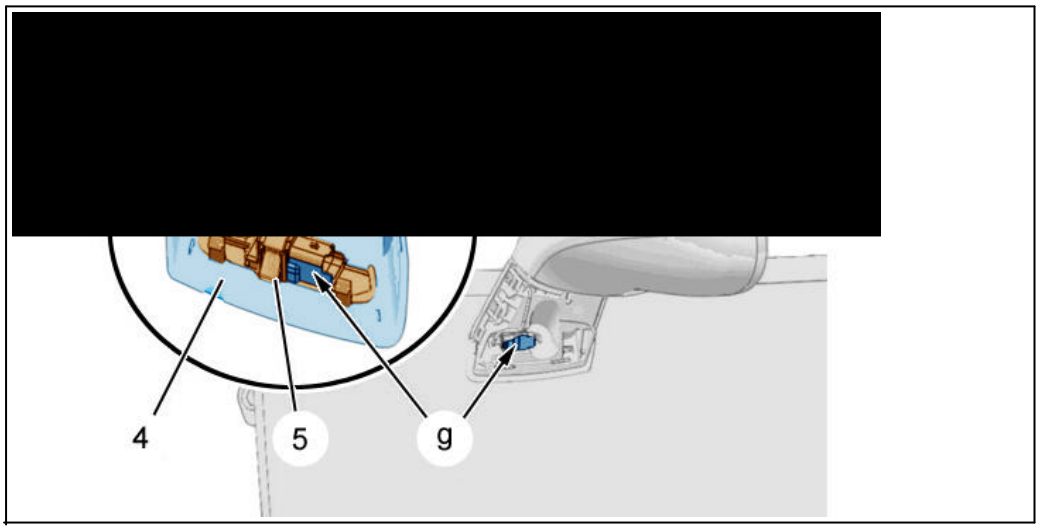


Figure : C4CM0GYD

Disconnect the connector (At " g ") .
Remove the whole outer cover from the base of the exterior rear view mirror (4) and the side repeater (5) .

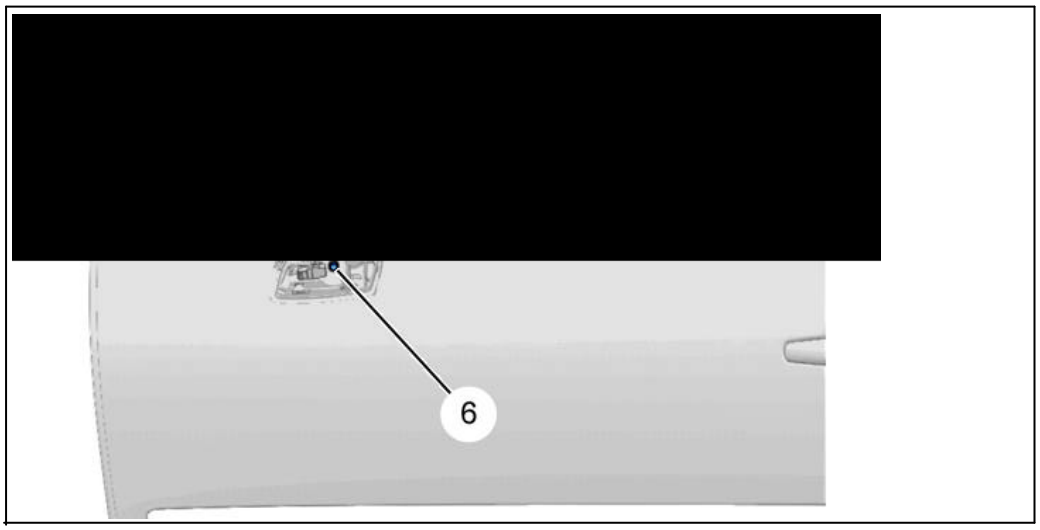


Figure : C4CM0GZD

Remove the bolt (6) .

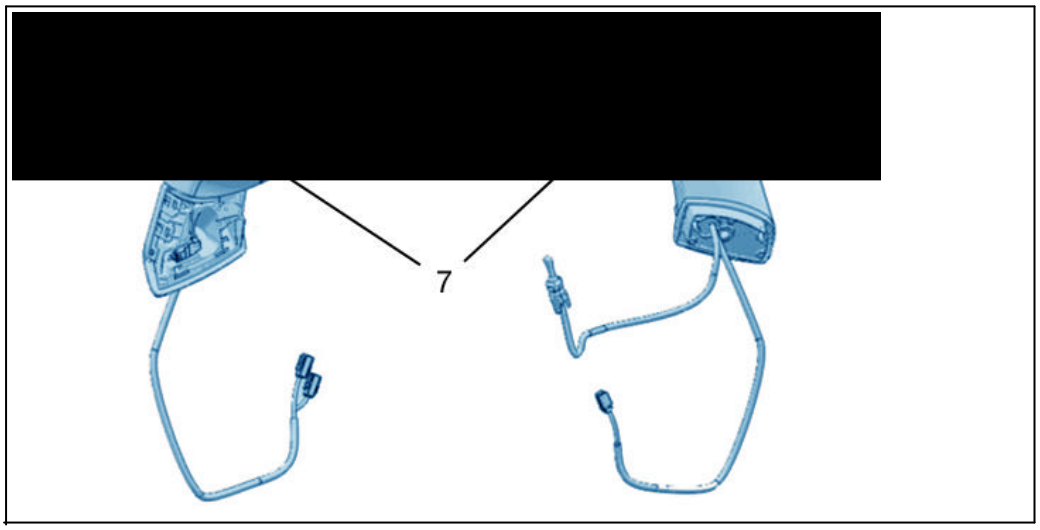


Figure : C4CM0H0D

(7a) : Electric exterior rear view mirror .
(7b) : Manual exterior rear view mirrors .
Release and remove the exterior rear view mirror (7) (According to specification) .

3. Refitting

Proceed in the reverse order to removal .
Check the electrical operation of the equipment .