REMOVAL - REFITTING : FRONT BUMPER :

1. Special tools

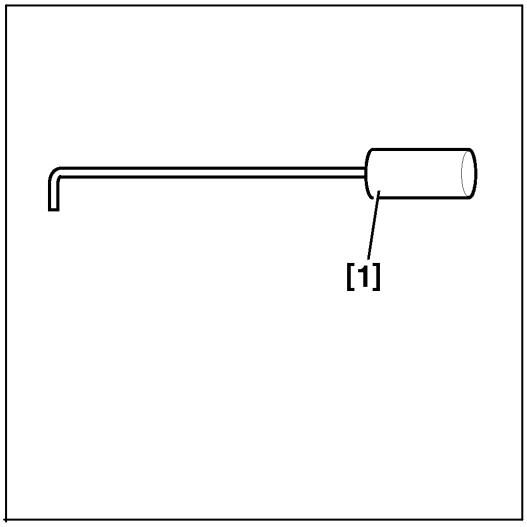


Figure : C4AF16GC

[1] Clip removal hook (-).1339} .

2. Removal

Remove :

- The front wheels
- **The headlamp wash jet assemblies** (**According to specification**)

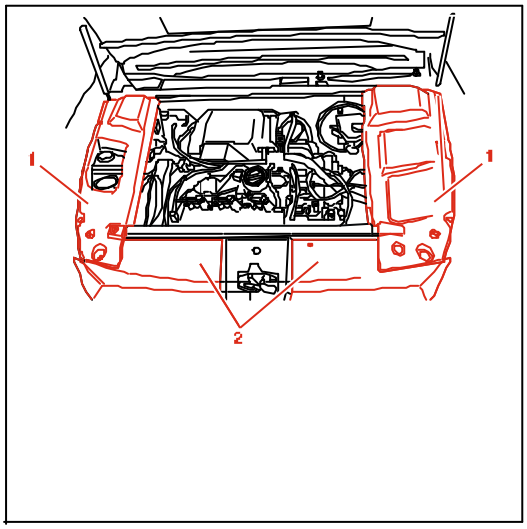


Figure : C5JF062C

Remove :

- The style covers (1)
- The upper radiator grille half-grilles (2)

Disconnect the battery .

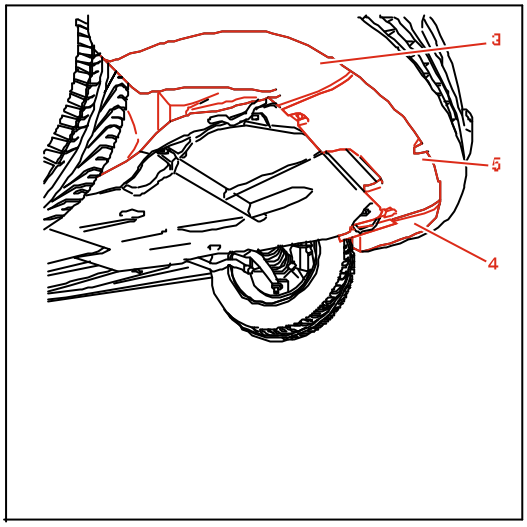


Figure : C5JF063C

Remove the spoilers (3 - 4 - 5) .

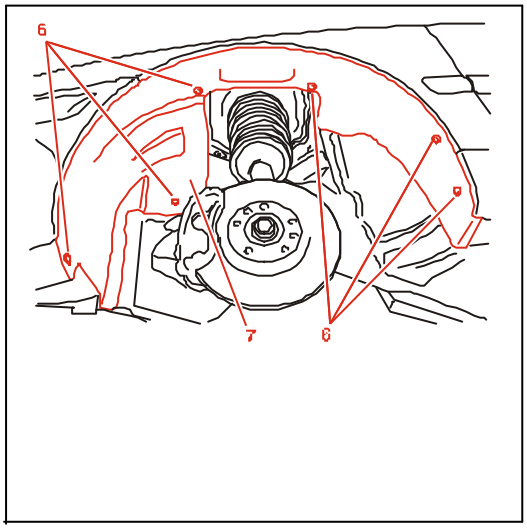


Figure : C5JF064C

Remove (On each side) :

- The securing pins (6)
- The mud shield (7)

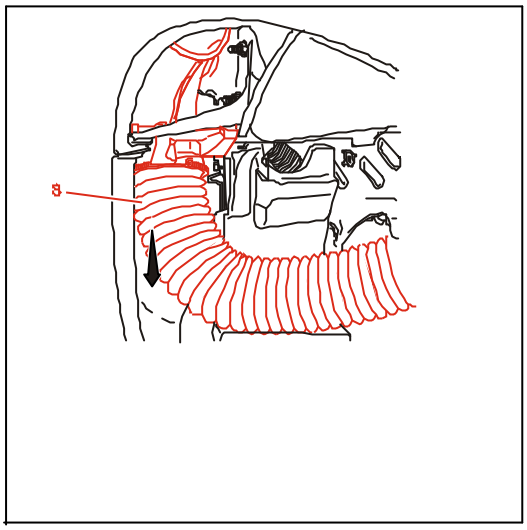


Figure : C5JF065C

Pull the air pipe assembly (8) downwards to unclip it .
Detach the pipe from its location .

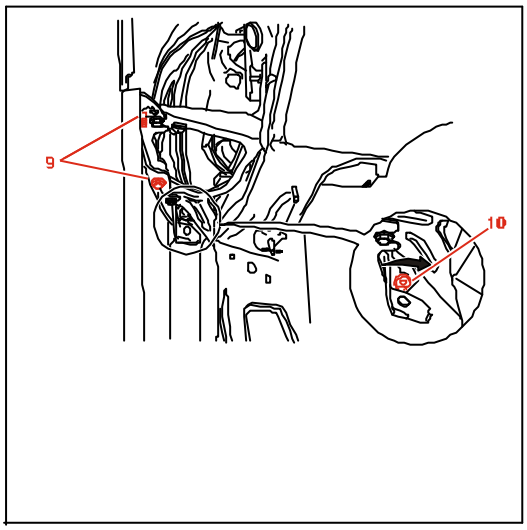


Figure : C5JF066C

On each side :

- Remove the side fixings (9)
- Using the tool [1], release the fastening a quarter turn (10) under the headlamp

Disconnect the fog lamps .

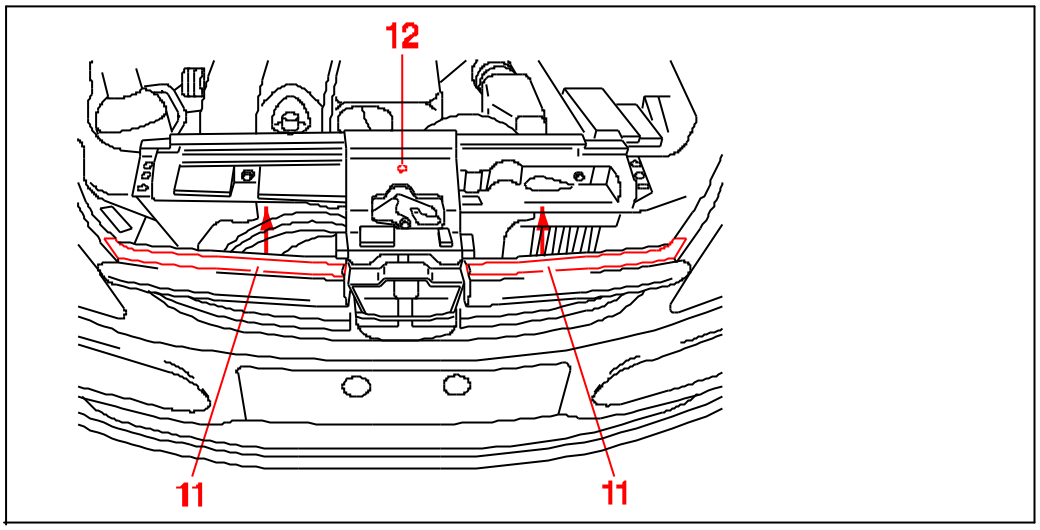


Figure : C5JK0K8D

Detach the trims (11) rearwards, then upwards and remove them .
Remove : The fastener (12) .

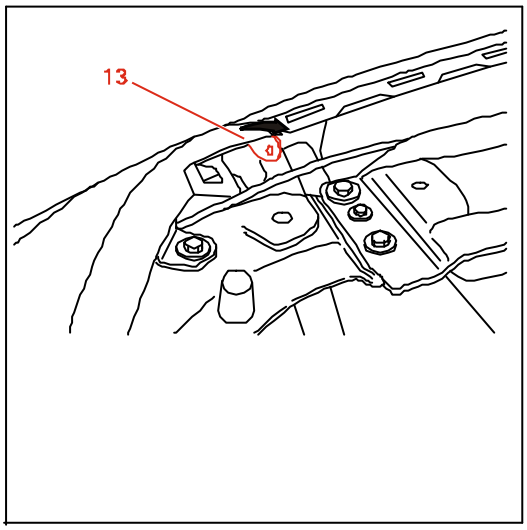


Figure : C5JF068C

On each side : Using the tool [1], unscrew the mounting (13) by a quarter turn .
Remove the bumper .

3. Refitting

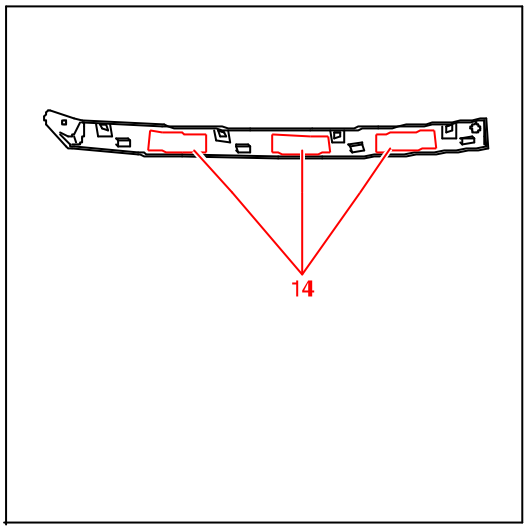


Figure : C5JK0K9C

URGENT : Apply pieces of double-sided adhesive tape (14) to absorb the vibrations .

Proceed in the reverse order to removal .
Check the operation of the equipment .