REMOVING - REFITTING : STEERING WHEEL :

1. Preliminary operations

Apply the procedure for putting the centralised pyrotechnic components system out of service .
Remove the driver's airbag .

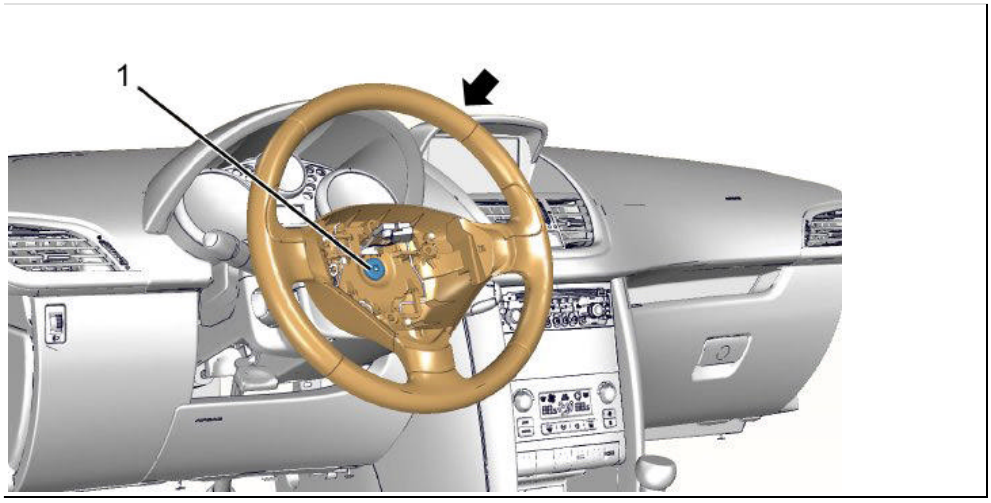


Figure : B3EP1DCD

URGENT : Place the front wheels in the straight ahead position .

Remove the fixing screw (1) .
Mark the position of the steering wheel .

CAUTION : Take care with the airbag supply connector .

Remove the steering wheel .

2. Refitting

Proceed in the reverse order to removal .
Tighten the bolt (1) to 3,3 ± 0,5 daNm .
Apply the procedure for putting the centralised pyrotechnic system into service .
Check that the electrical equipment is working correctly .

3. Vehicle with ESP (Electronic Stability Program)

Calibrate the steering wheel angle sensor ; Using the diagnostic tool PP 2000 .
To perform this operation, select the menu "ABS (ABS/ESP)" .