CHECK - ADJUSTMENT : HANDBRAKE :

1. Check

N.B. : Adjustment of the handbrake is not necessary following replacement of the brake discs or brake pads .

N.B. : The check is only necessary in the case of replacement of a handbrake cable, replacement of a rear brake caliper or replacement of the handbrake lever .

Lift the vehicle, wheels suspended .
Check that pad friction begins from the first notch .
Check that the normal travel does not exceed 4 notches .
If the checks are not correct :

- Check that all the cables are routed correctly
- Check that the cables are not constrained (incorrect hooking of inner or outer cables, incorrect adjustment)
- Check that all the handbrake control components slide or move freely
- Adjust the handbrake

2. Adjustment

Lift the vehicle, wheels suspended .

CAUTION : The main brake circuit must be bled .

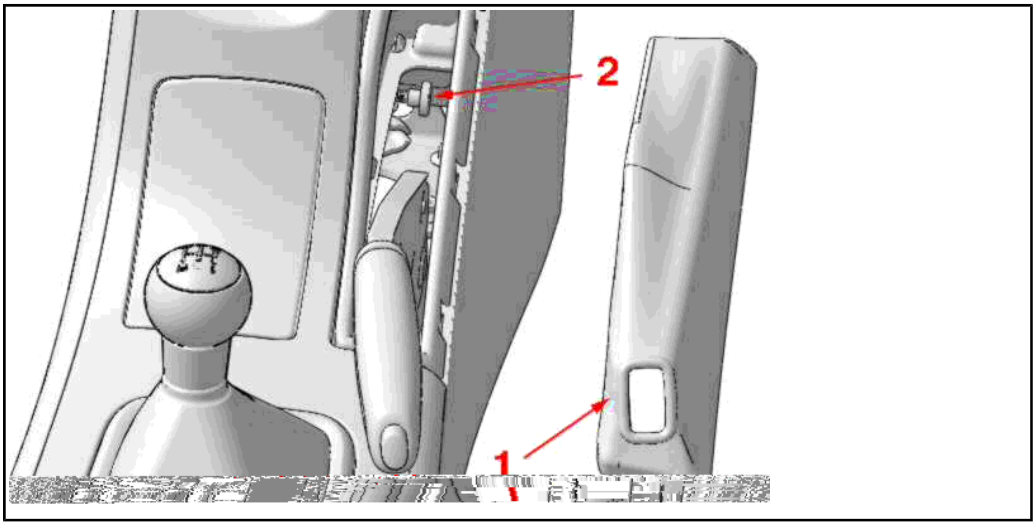


Figure : B3FK80BD

Unclip : The handbrake lever gaiter (1) .
Release the handbrake lever in the passenger compartment .
Apply a finishing compound (2) .
Check that the normal travel does not exceed 4 notches .
With the handbrake released, check that the rear wheels turn freely by hand .
Check that the handbrake warning light comes on from the 1st notch of the total travel of the lever .
Fit : The handbrake lever gaiter (1) .