: 28 FUSE BOX (PASSENGER COMPARTMENT) (WITH REAR ELECTRIC WINDOW) (BH28-2)

LEFT HAND DRIVE SINCE RPO NO. 08576 UNTIL RPO NO. 08882

Passenger compartment fuse box (BFH28/2)			
Fuses	**A**	**Electrical supply**	**Matching**

R1 : 5A - R2 : 10A - R3 : 30A - R4 : 20A - R5 : 15A .

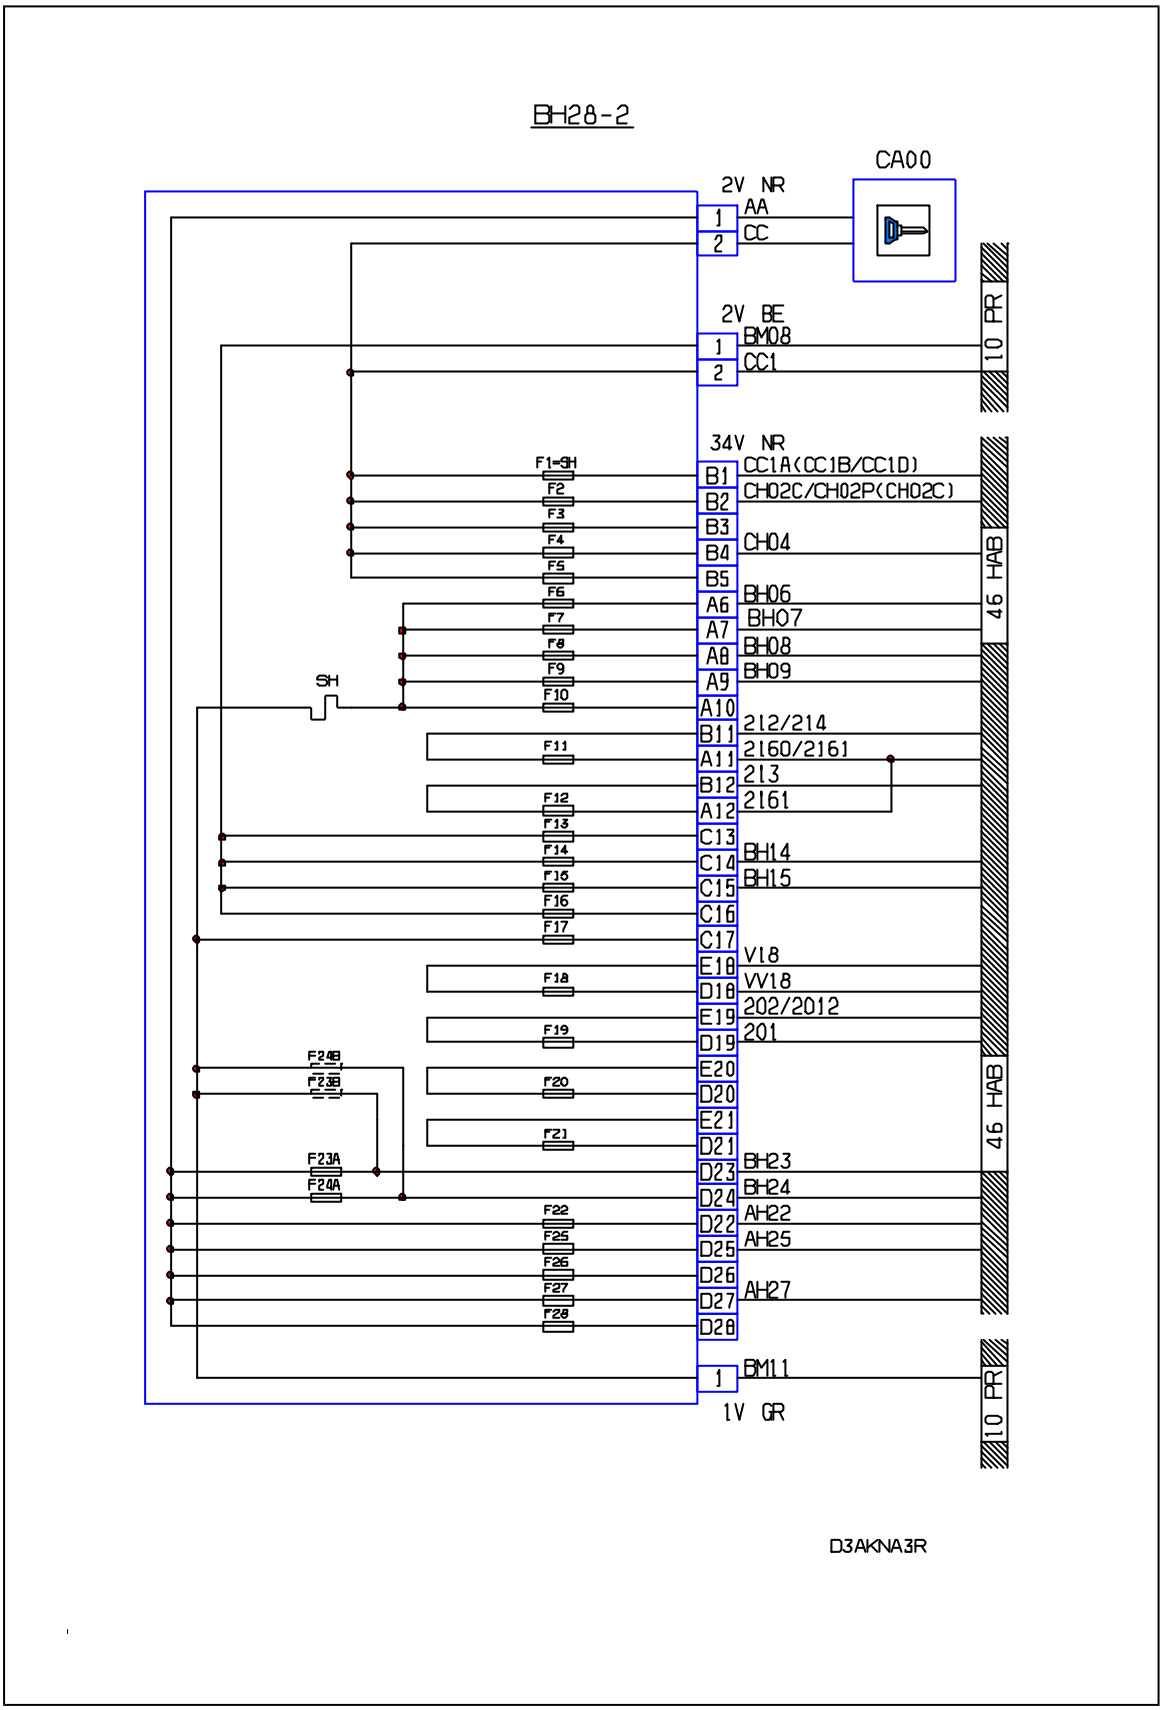


Figure : D3AKNA3R

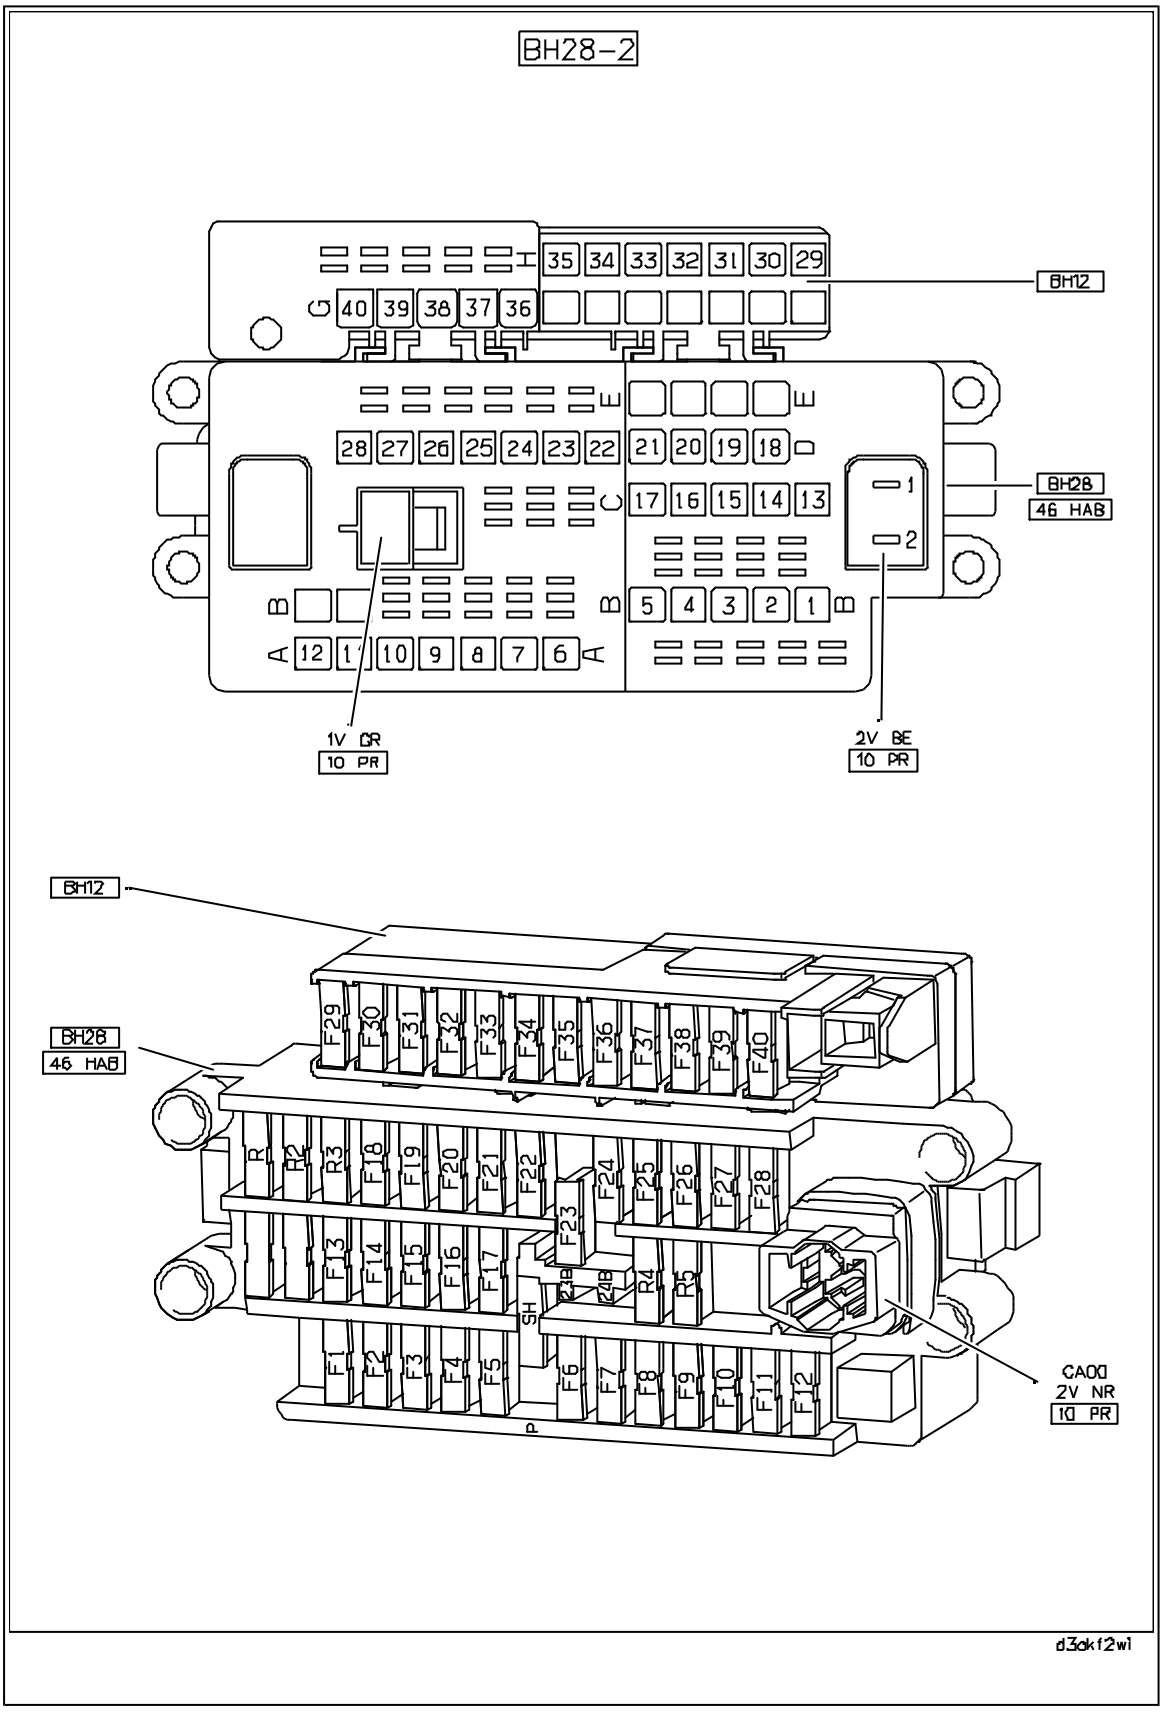


Figure : D3AKF2WI

RIGHT HAND DRIVE SINCE RPO NO. 08576 UNTIL RPO NO. 08882

Passenger compartment fuse box (BFH28/2)

Fuses	A	Electrical supply	Matching

R1 : 5A - R2 : 10A - R3 : 30A - R4 : 20A - R5 : 15A .

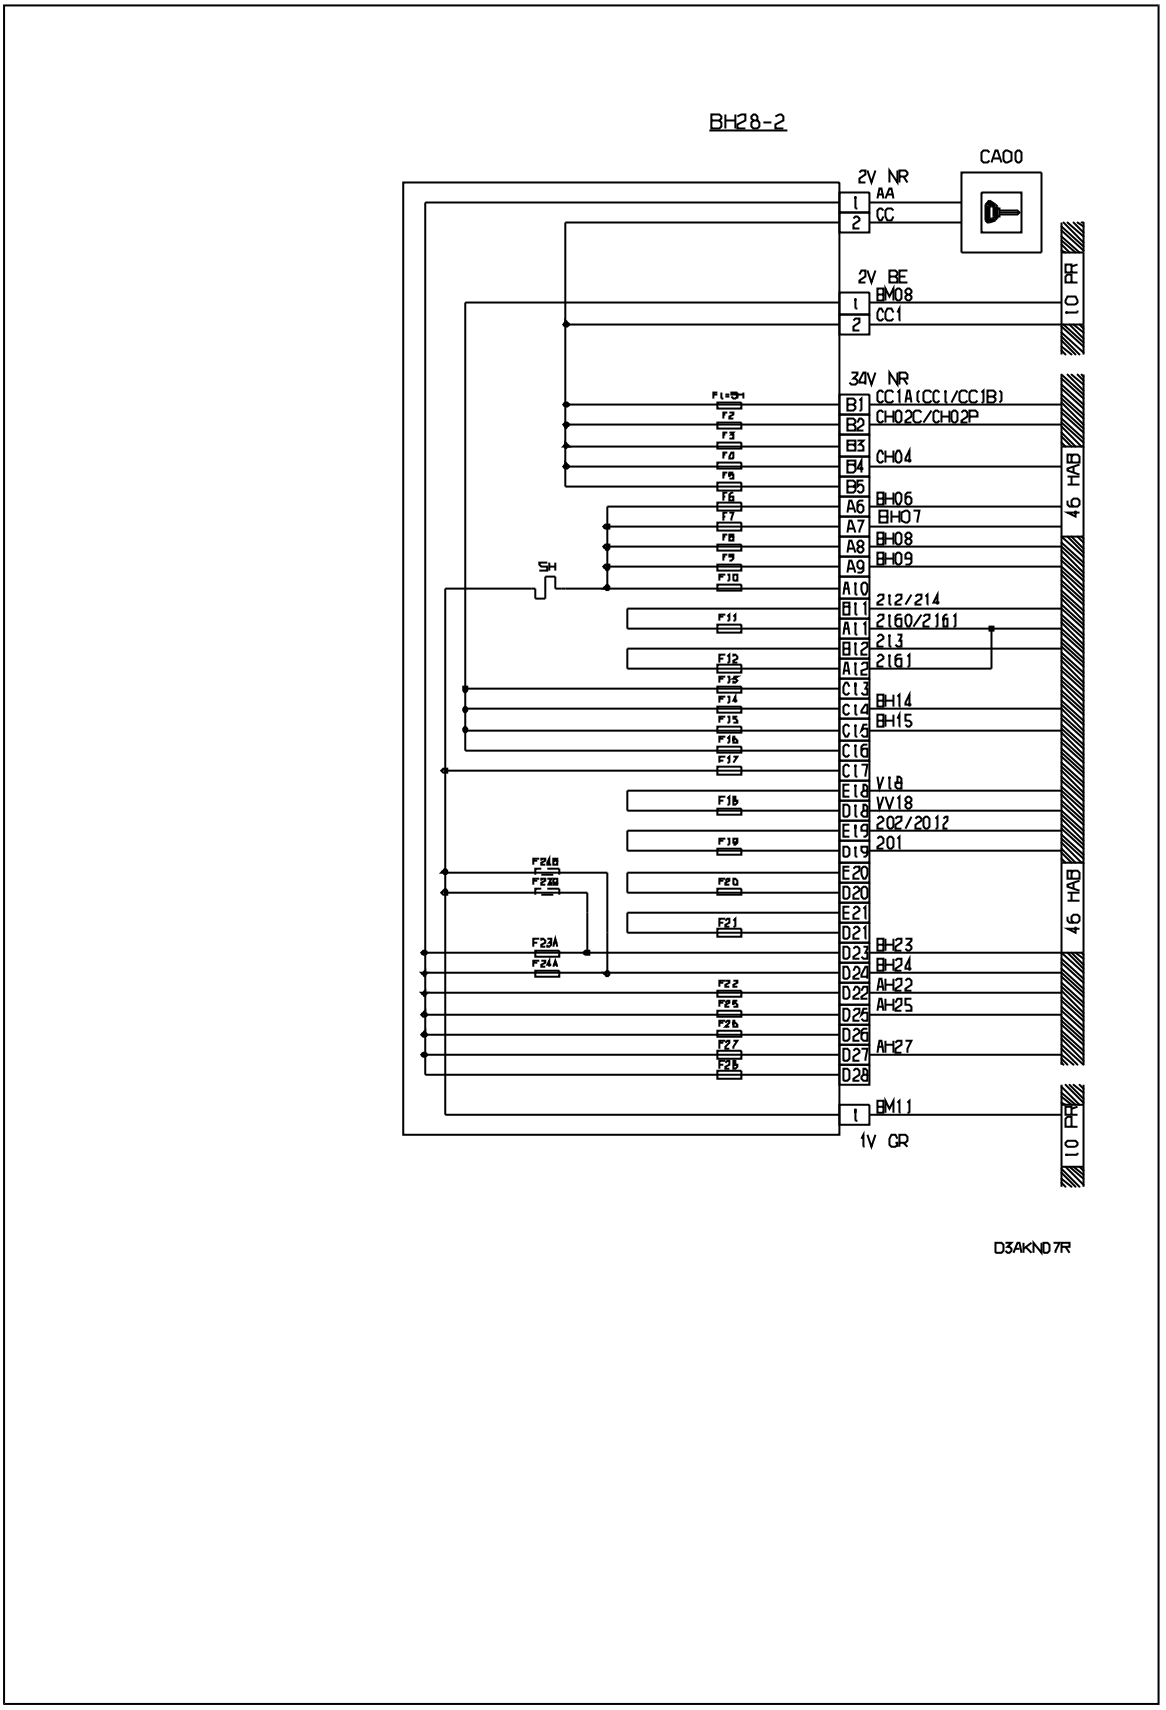


Figure : D3AKND7R

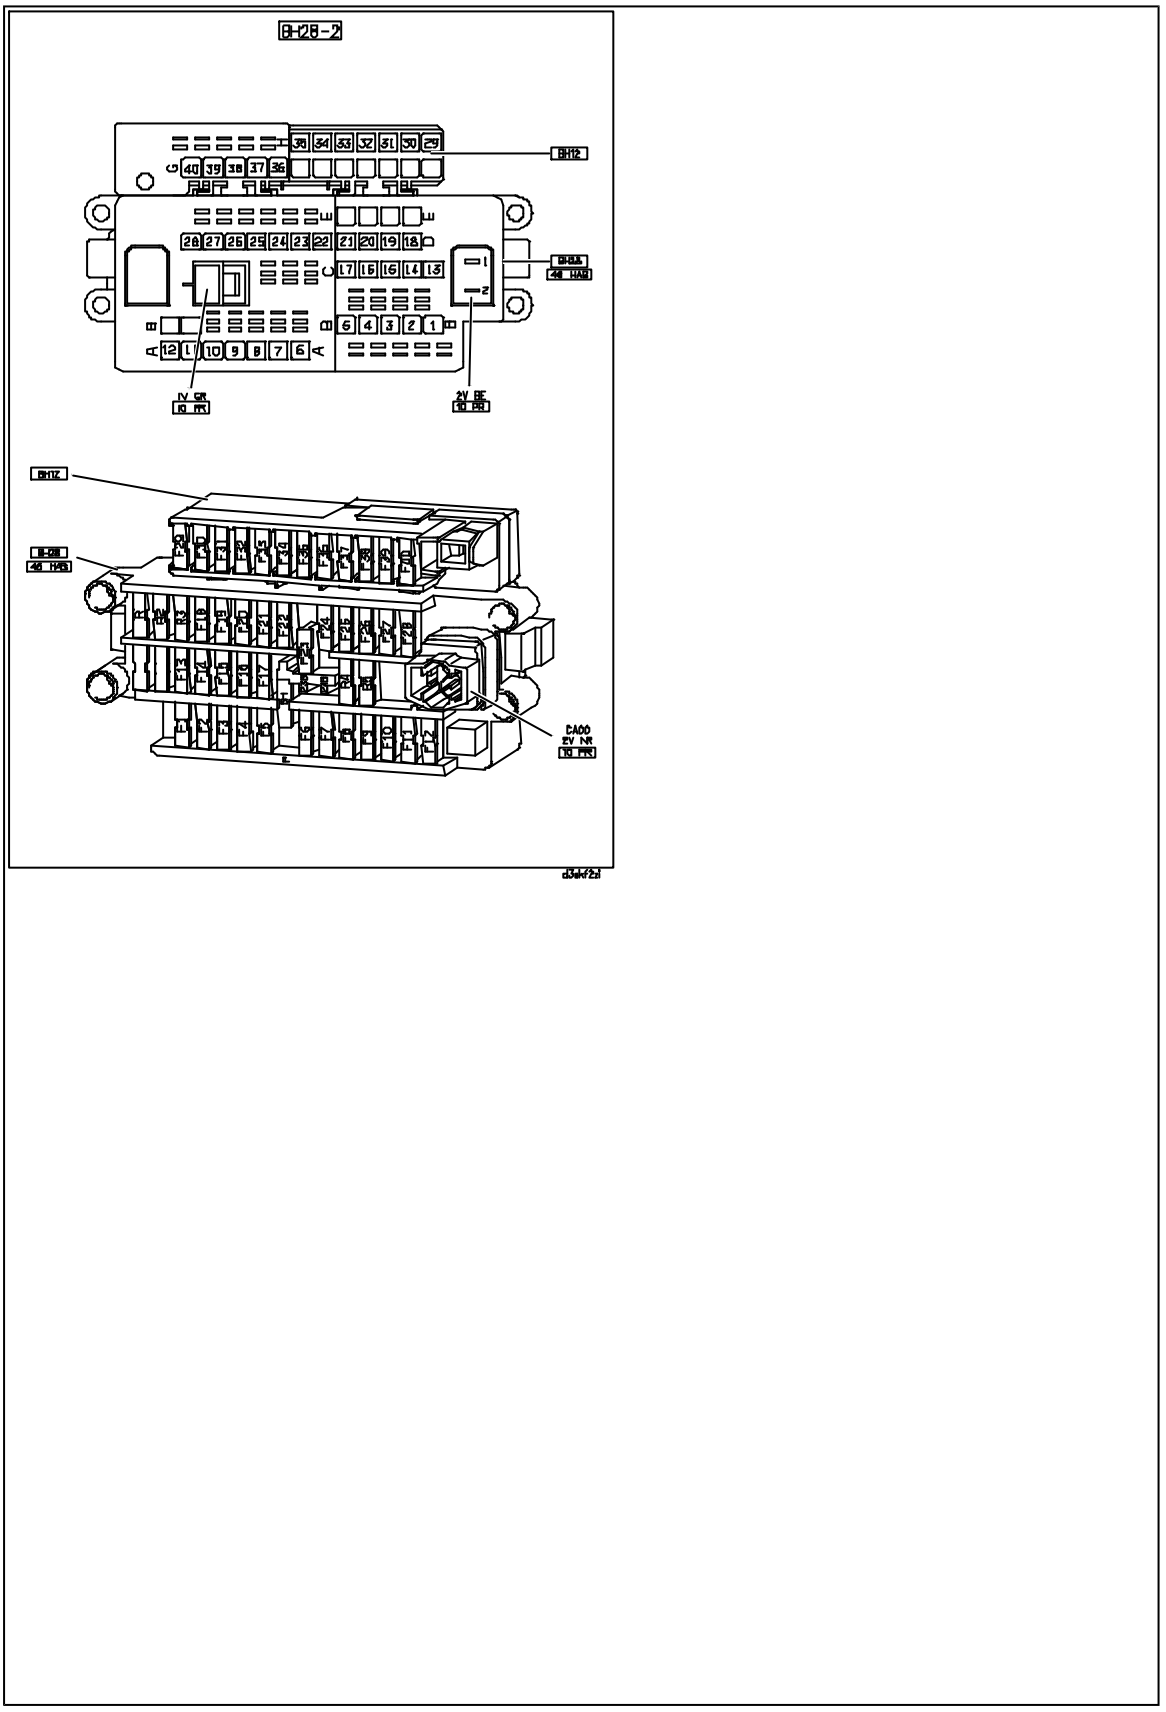


Figure : D3AKF2ZI

LEFT HAND DRIVE SINCE RPO NO. 08883

Passenger compartment fuse box (BFH28/2)			
Fuses	**A**	**Electrical supply**	**Matching**

R1 : 5A - R2 : 10A - R3 : 30A - R4 : 20A - R5 : 15A .

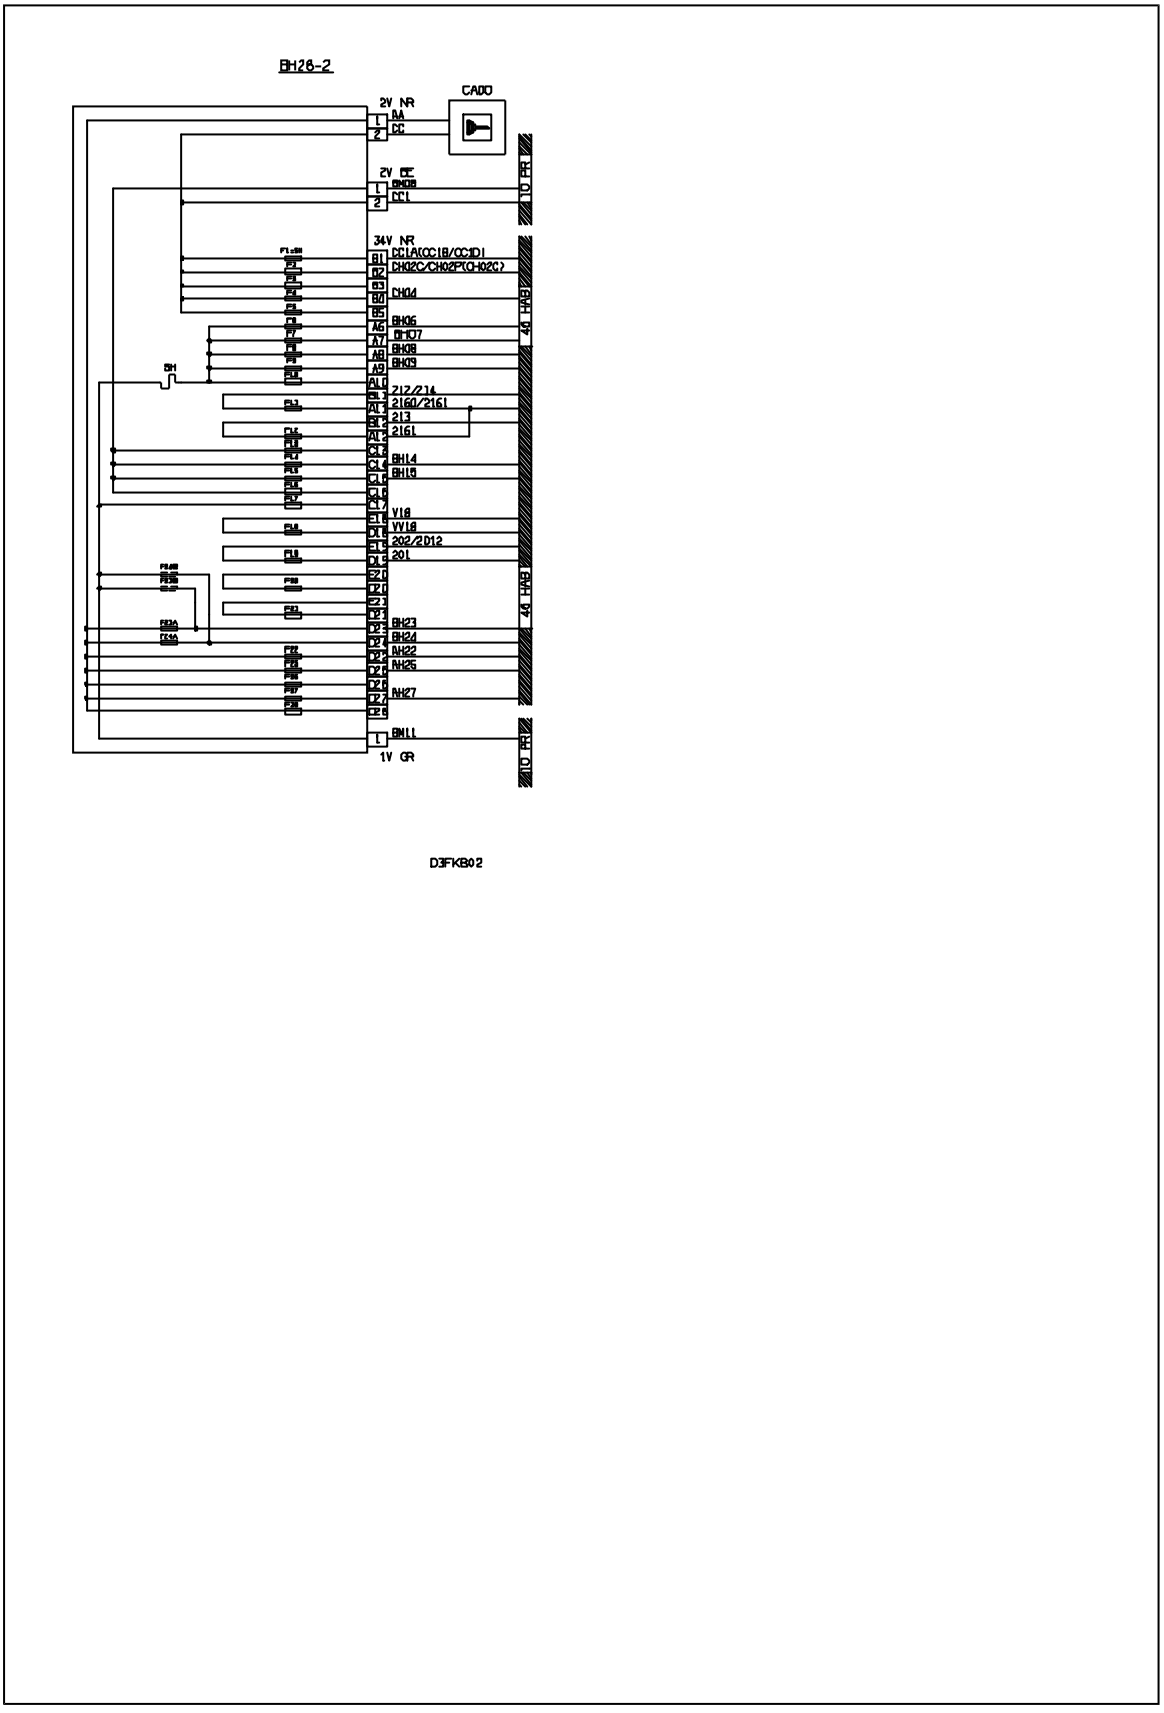


Figure : D3FKB02R

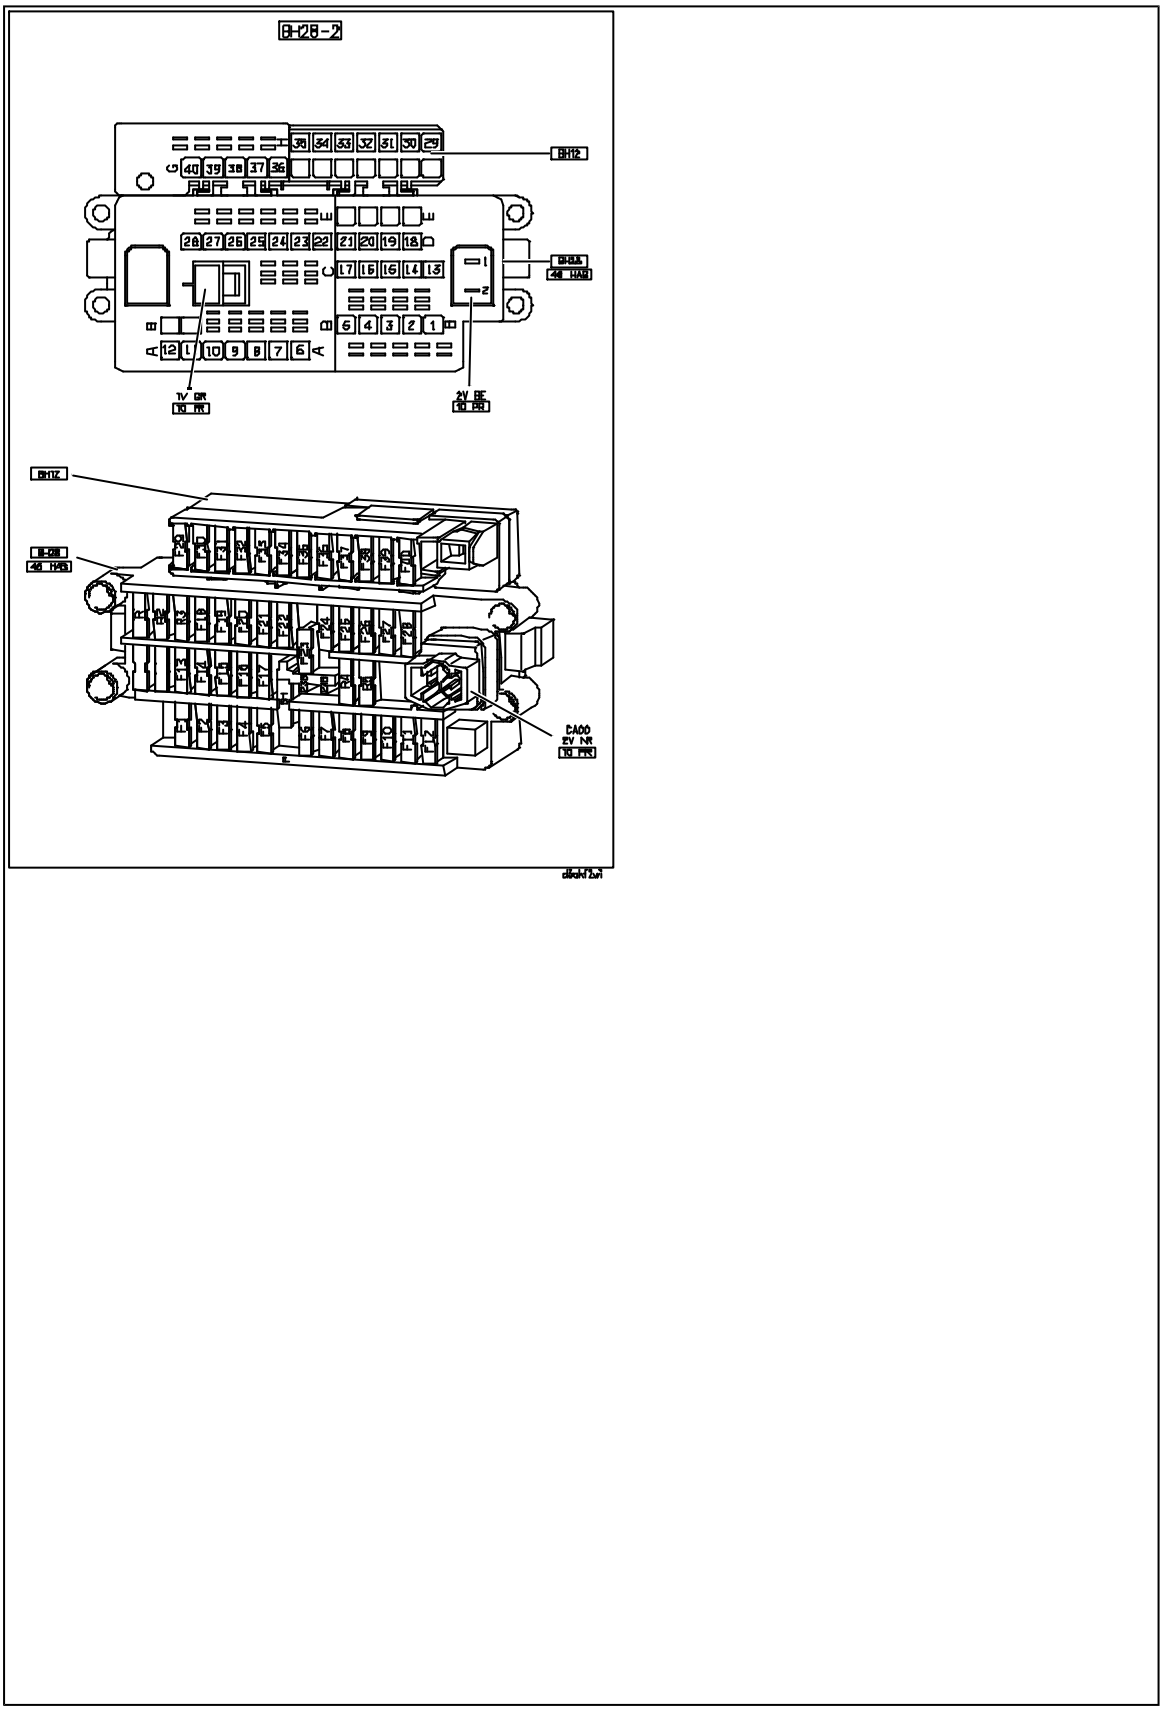


Figure : D3AKF2WI

RIGHT HAND DRIVE SINCE RPO NO. 08883

Passenger compartment fuse box (BFH28/2)

Fuses	A	Electrical supply	Matching

R1 : 5A - R2 : 10A - R3 : 30A - R4 : 20A - R5 : 15A .

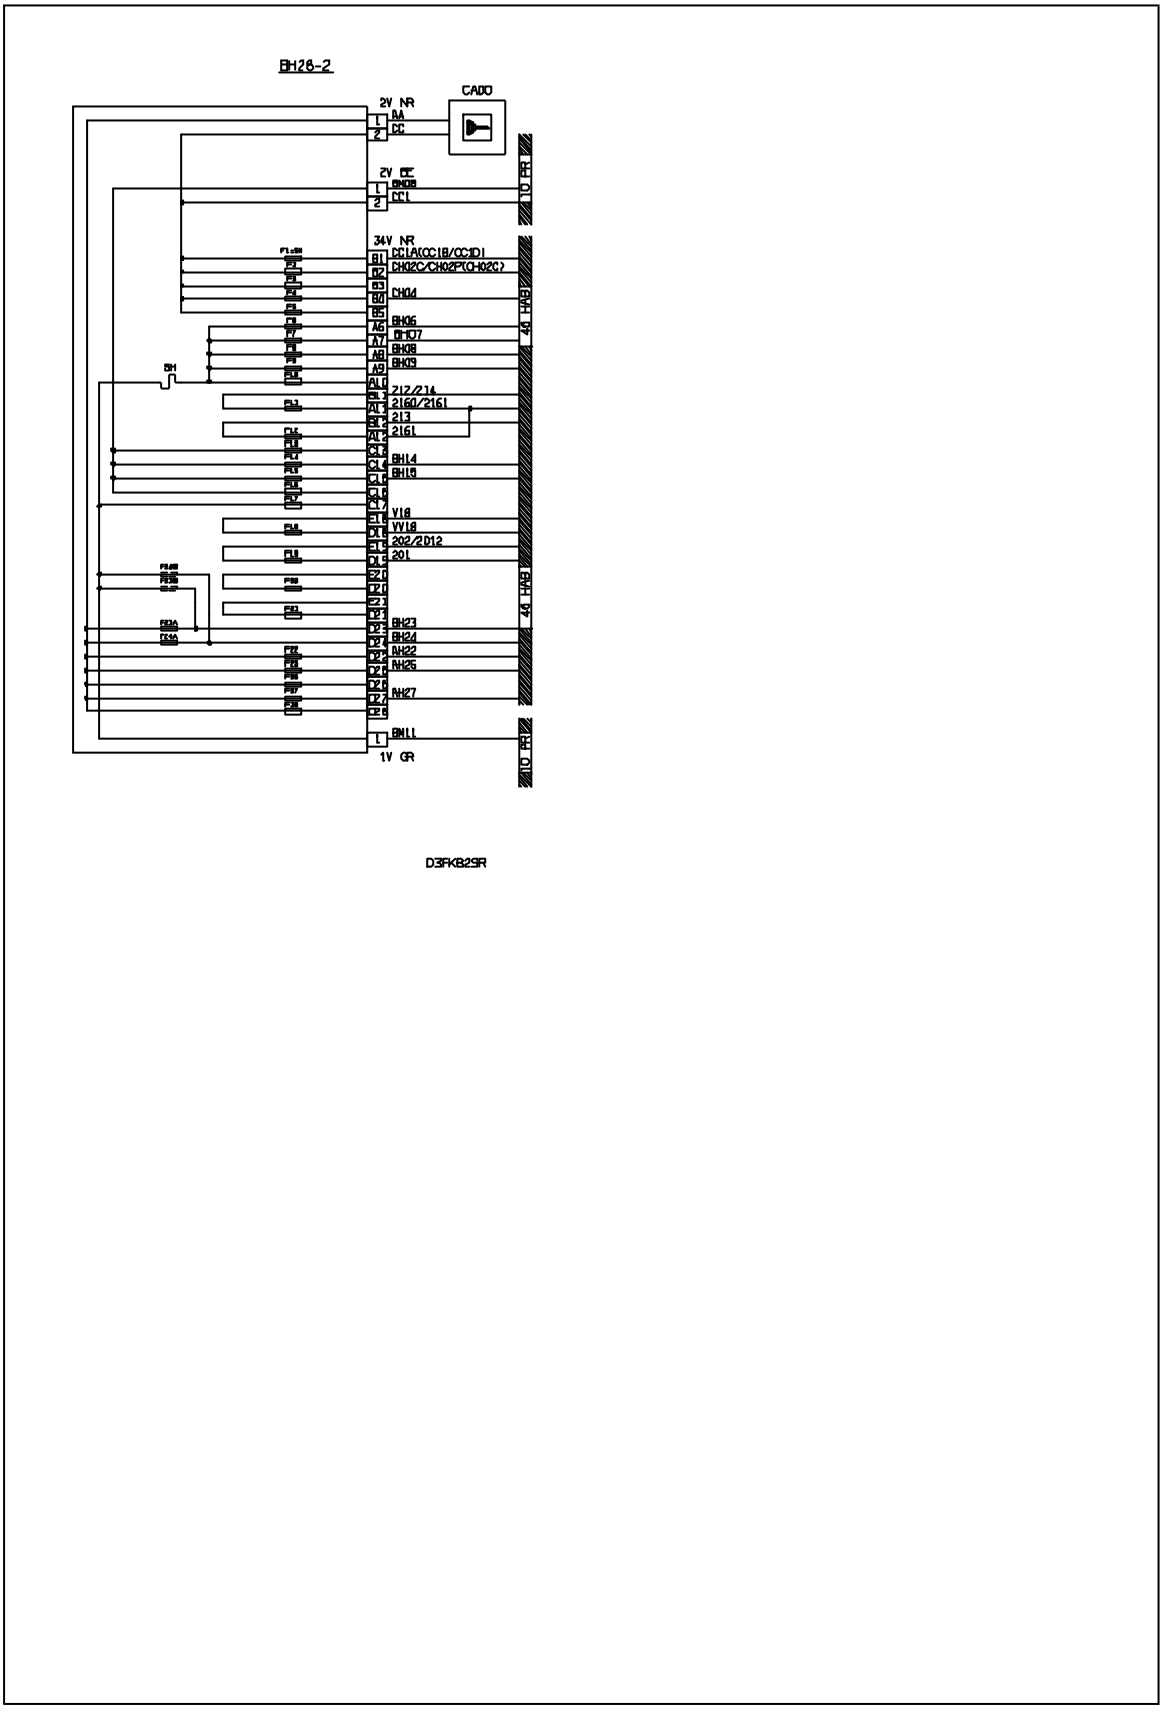


Figure : D3FKB2SR

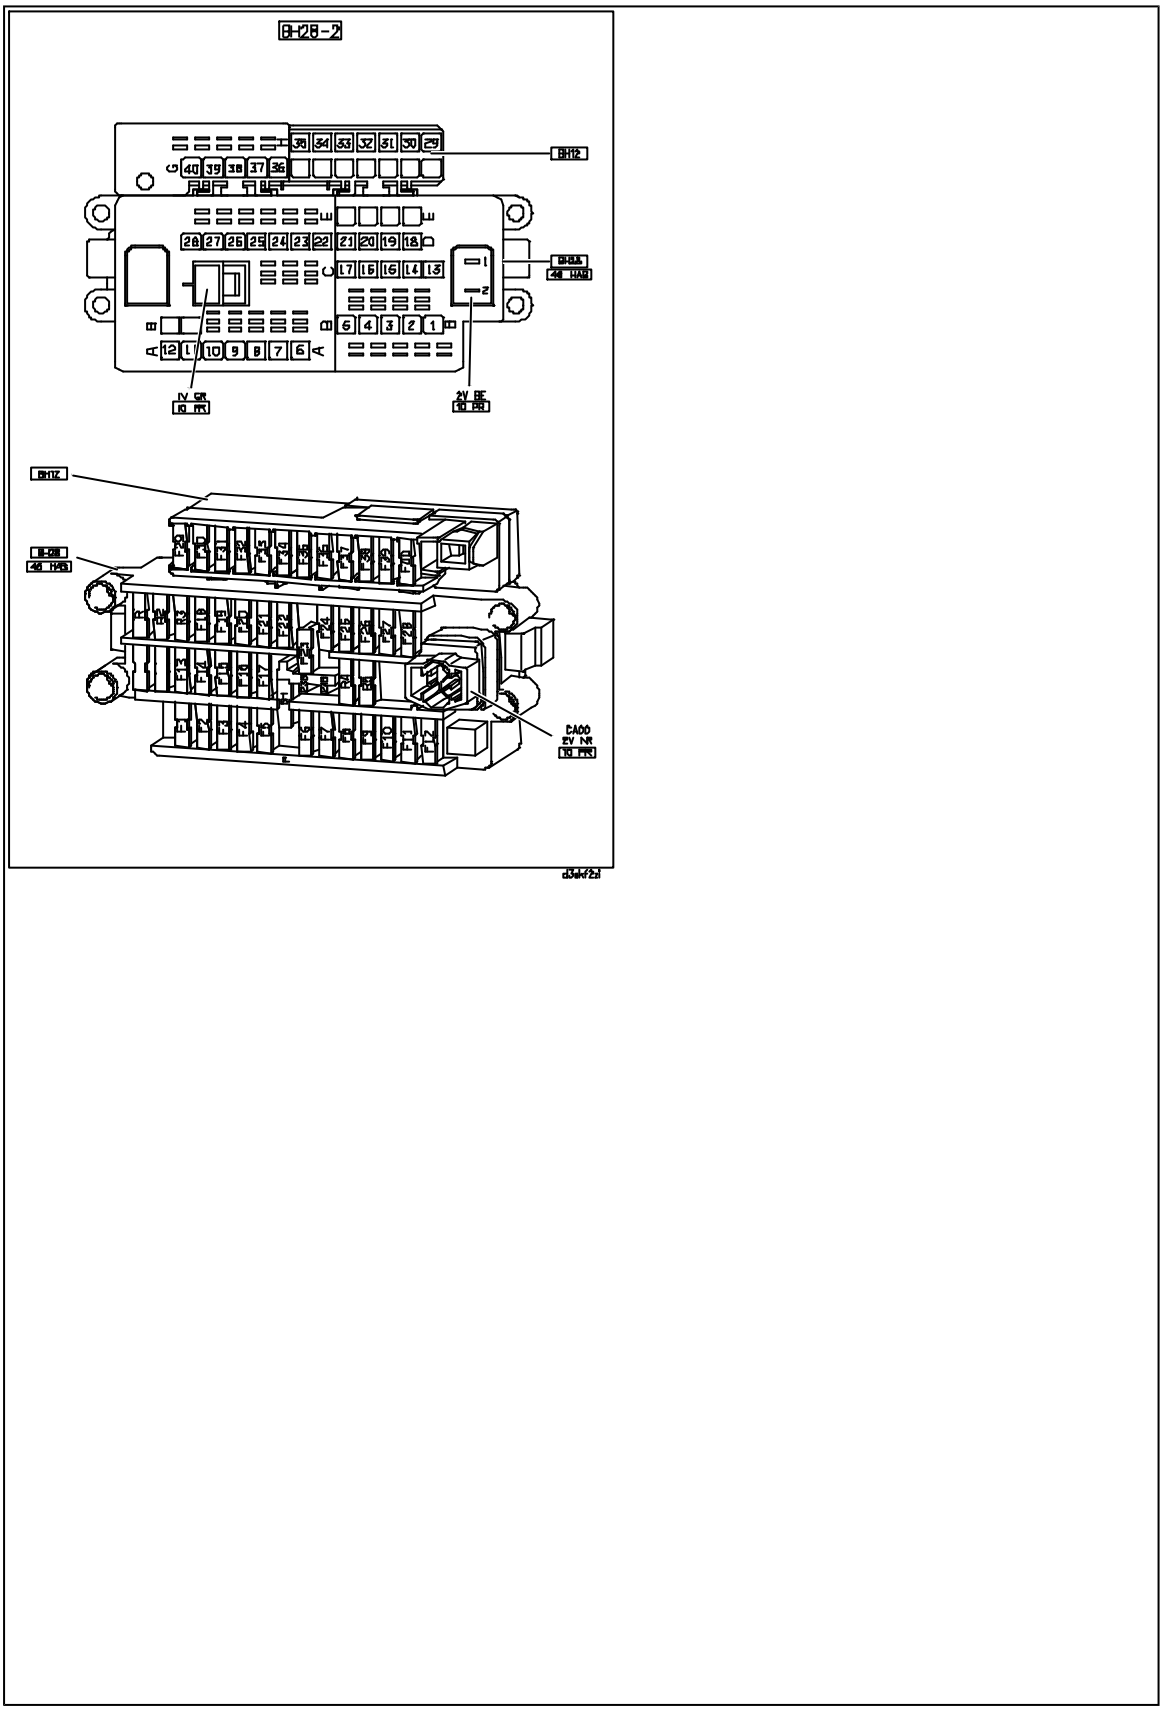


Figure : D3AKF2ZI