REMOVAL - REFITTING : DRIVER'S AIR BAG :

Apply the safety recommendations for air bags .

URGENT : **Apply the procedure for switching off the central airbag system** .

1. Removal

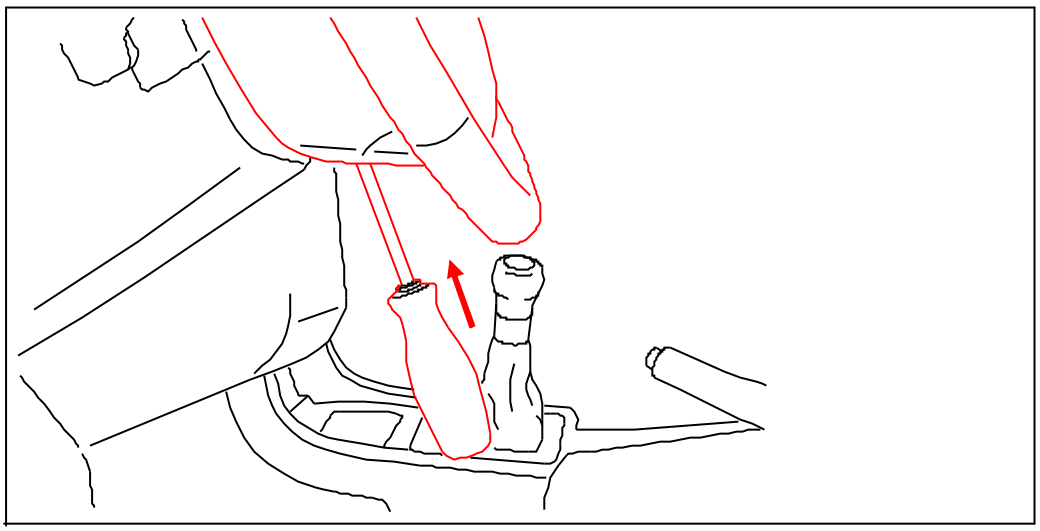


Figure : C5JK0KSD

Insert a torx screwdriver 6 into the hole under the steering wheel and exert pressure on the screwdriver after pressing firmly on the centre of the air bag with the palm of the hand .
Release the steering wheel air bag; the air bag is then unclipped .

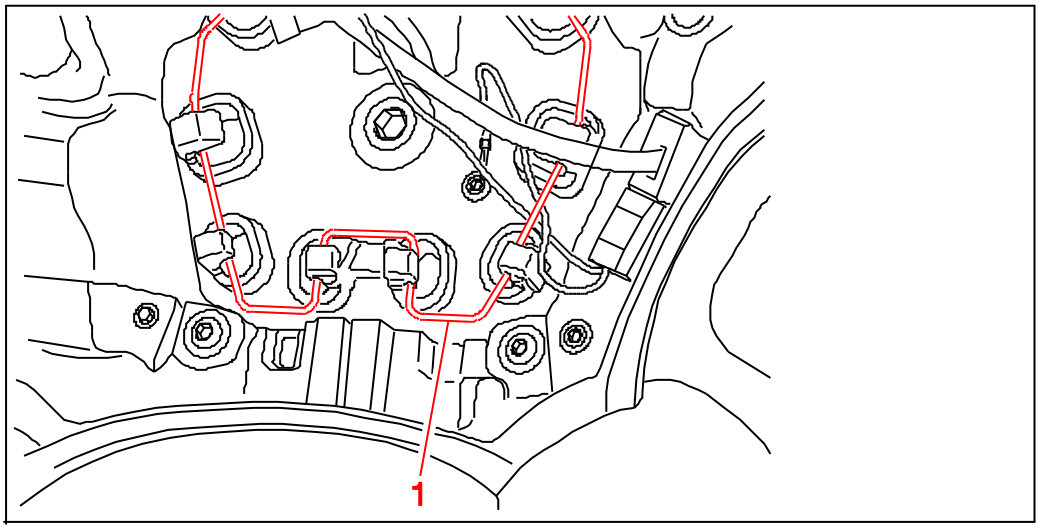


Figure : C5JK0KTD

Uncouple the spring on the right-hand side (1) to pass through the horn harness .

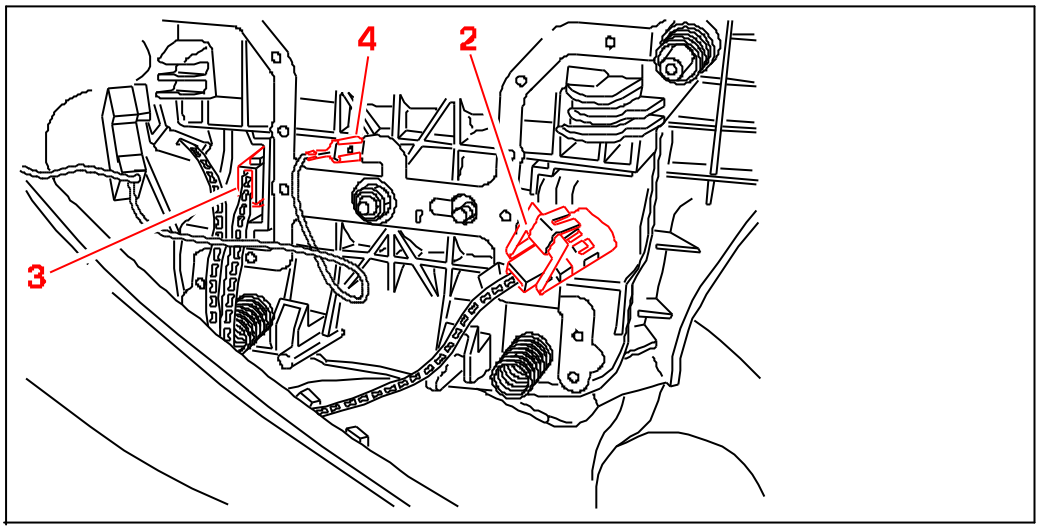


Figure : C5JK0KUD

Disconnect the connectors (2) - (3) - (4) .
Remove the airbag .

URGENT : **Apply the scrapping procedure** : .

In the event of the air bag being replaced .
Replacement of the pre-tensioning components after triggering of the airbag and the belts .

2. Refitting

Connect the connectors (4) - (3) - (2) .

CAUTION : Check the colour of the connections (2) - (3) before connecting them .

Pass the horn harness under the spring on the right-hand side (1) and clip the spring .
Position the airbag and press the top to clip it .
Apply the procedure for switching on the central airbag system .
Check the electrical operation .