REPLACEMENT : FOG LAMP BULB (FRONT) :

4 DOOR SALOON

URGENT : Ensure that the precautions relating to safety and cleanliness are adhered to .

1. Removal

Place the vehicle on a 2 -post lift .

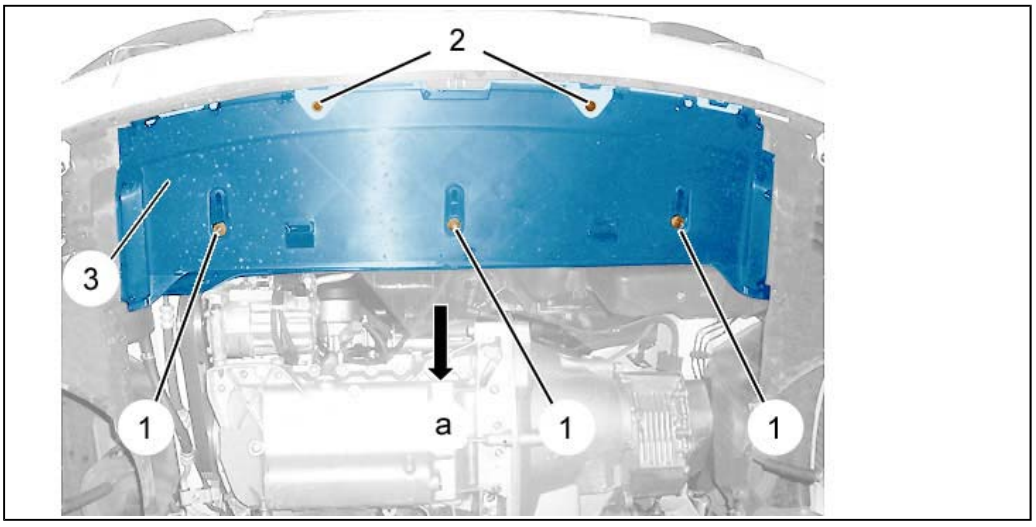


Figure : C5EM050D

Remove :

- The screws (2)
- The nuts (1)

Detach : The front deflector (3) under the bumper (following "a") .
Remove : The front deflector (3) under the bumper .

1.1. LH side

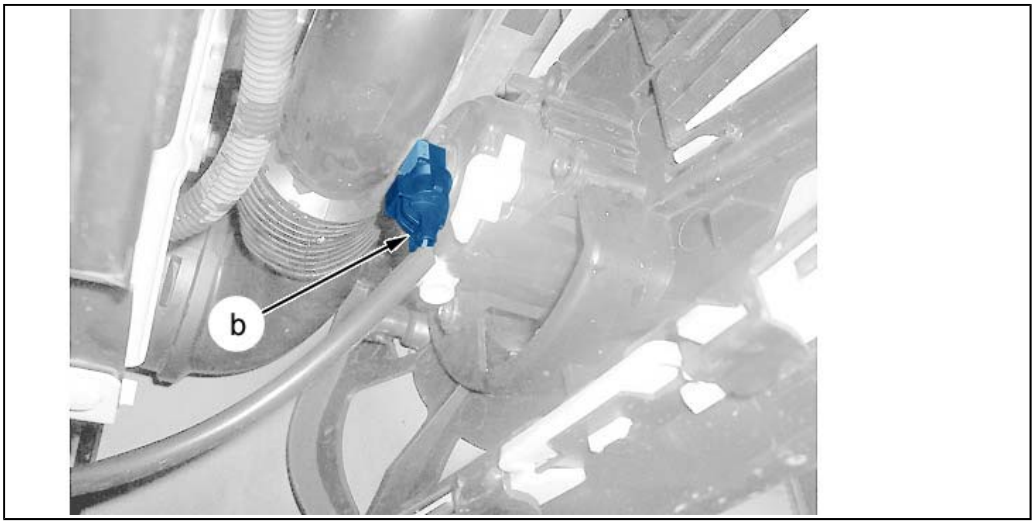


Figure : C5EM051D

Disconnect the connector (at " b ") .

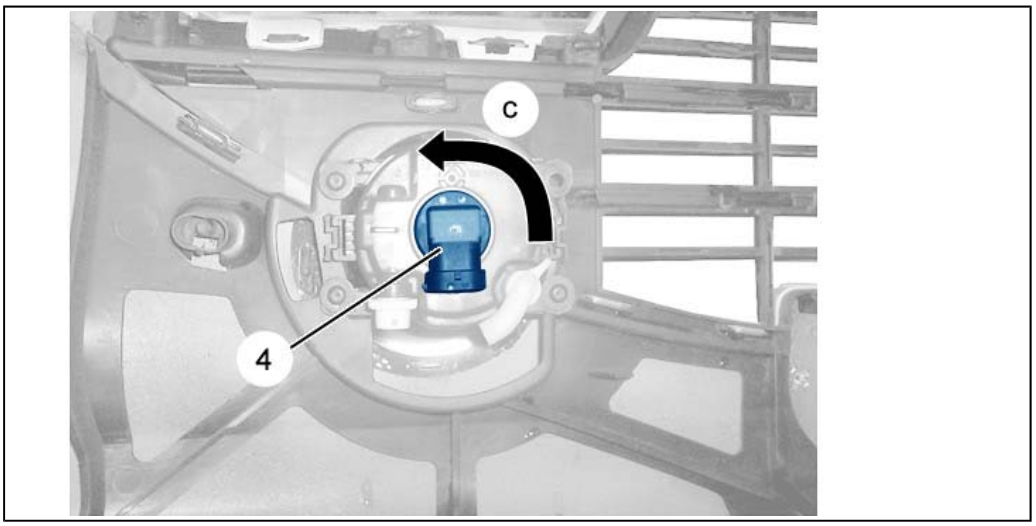


Figure : C5EM052D

Turn the bulb (4) a quarter of a turn (anti clockwise) (following "c") .

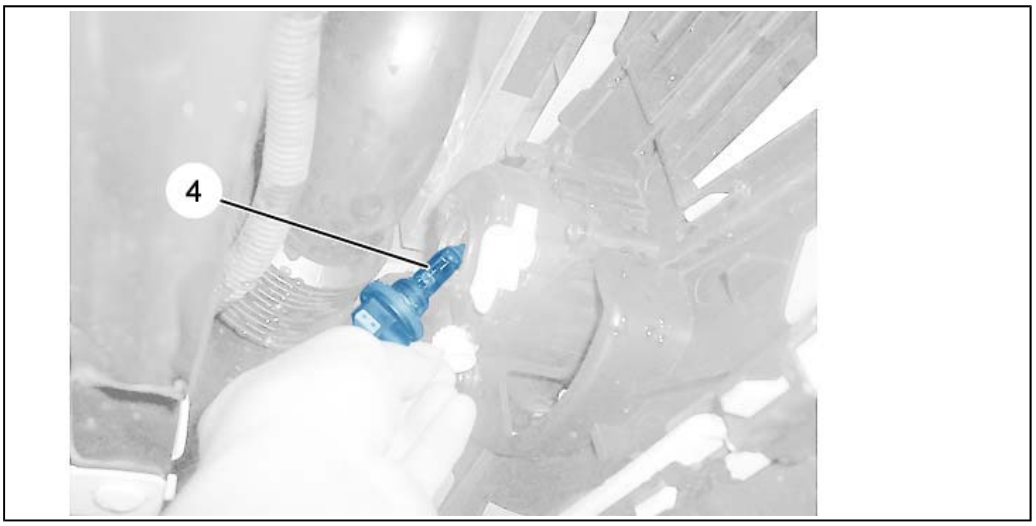


Figure : C5EM053D

Remove : The bulb (4) (Front fog lamp) .

1.2. RH side

Remove the right-hand front mudguard (On the front part) (refer to corresponding procedure) .

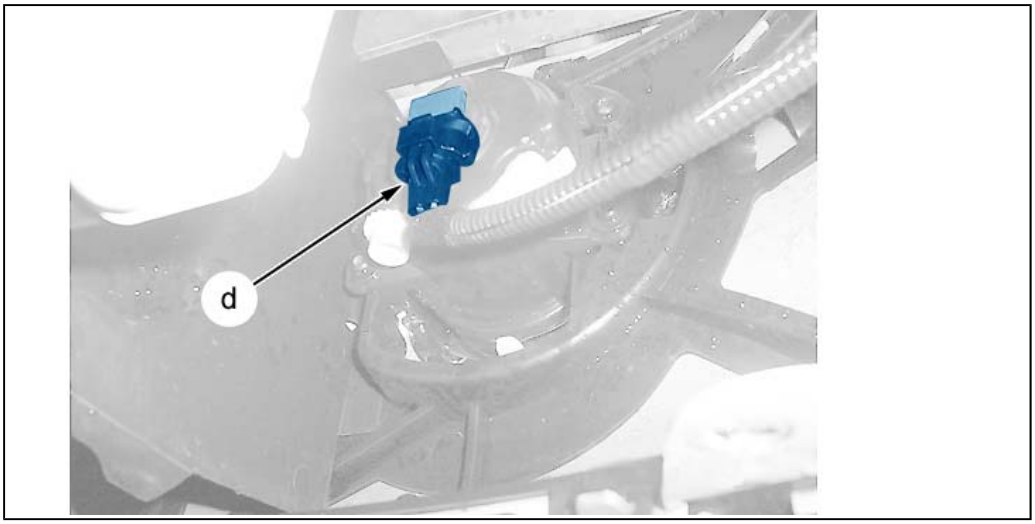


Figure : C5EM054D

Disconnect the connector (at " d ") .

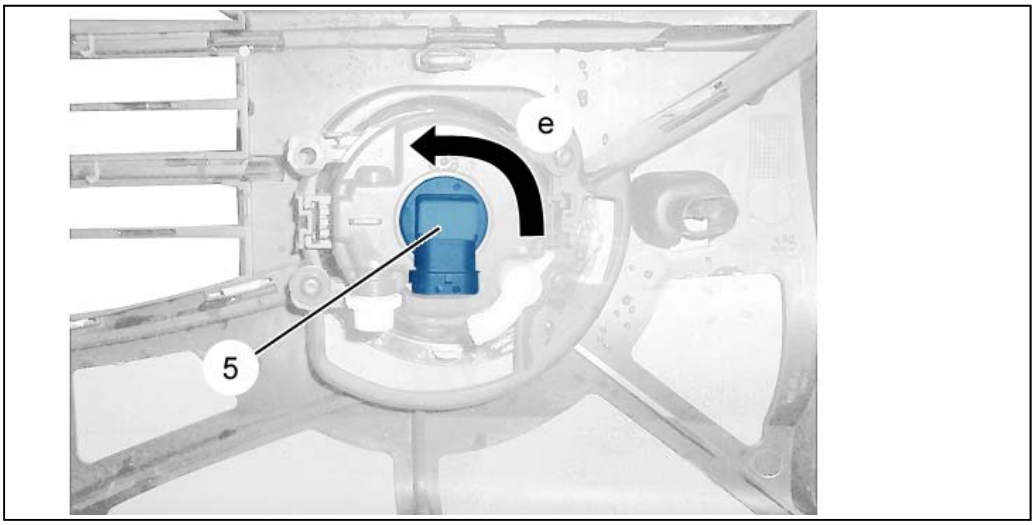


Figure : C5EM055D

Turn the bulb (5) a quarter of a turn (anti clockwise) (following "e") .

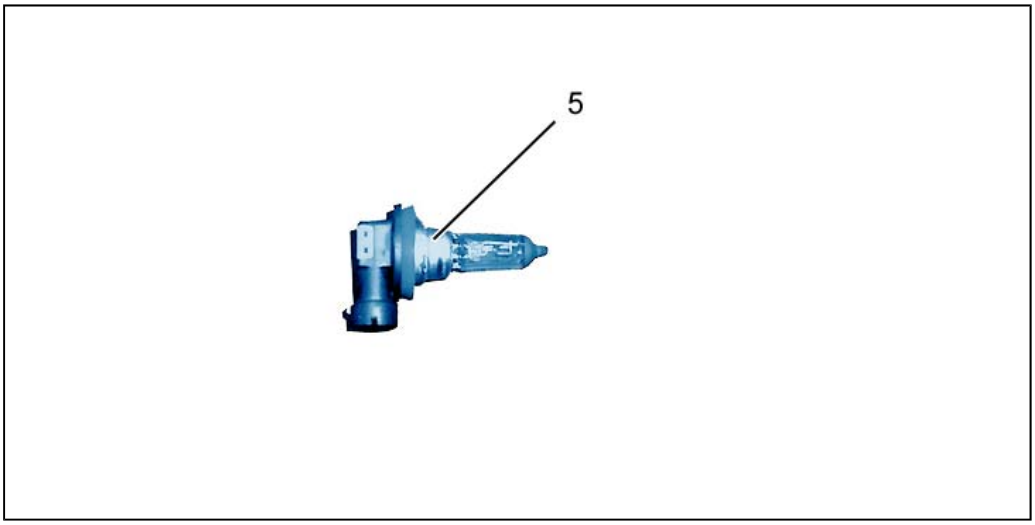


Figure : C5EM056D

Remove : The bulb (5) (Front fog lamp) .

2. Refitting

Proceed in the reverse order to removal .
Tighten :

- The nuts (1) to 0,25 ± 0,05 daNm
- The screws (2) to 0,25 ± 0,05 daNm

Check all the equipment works .