

REMOVAL - REFITTING : FASCIA CENTRE PANEL :

1. Recommended tools

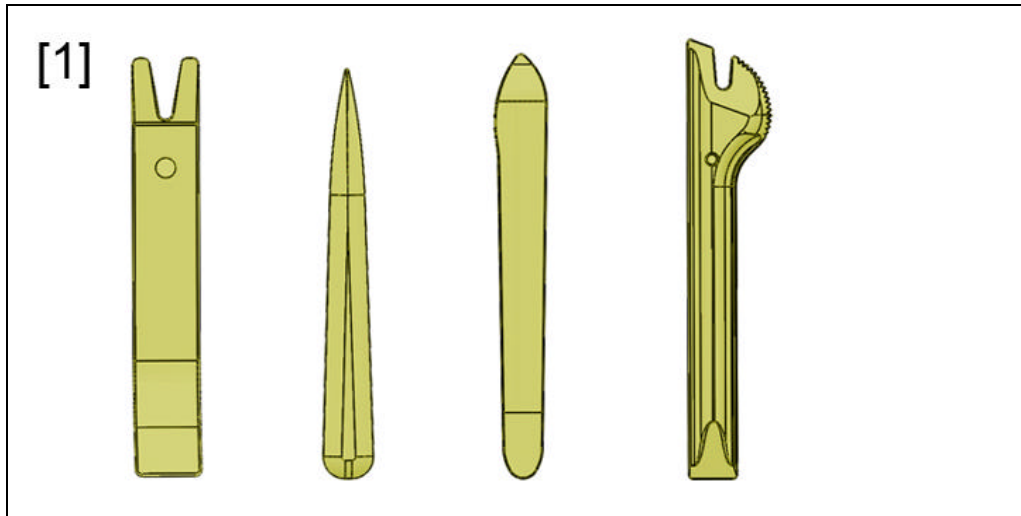


Figure : E5AP30WD

[1] Trim removal tools (-).1350-ZZ .

2. Preliminary operations

Perform the following operations :

- Take out the ignition key
- Wait at least 3 minutes before disconnecting the battery
- Disconnect the battery negative terminal

Remove :

- **The radio** ⓘ
- **The audio CD changer** ⓘ (according to specification)

3. Removal

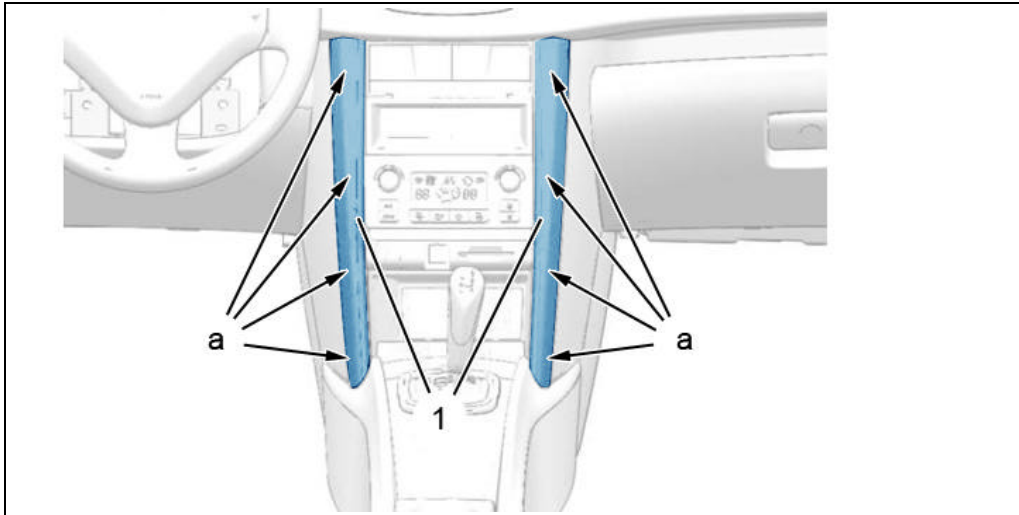


Figure : C5FP1CSD

Unclip the trims (1) (At " a ") ; Using the tool [1] .
Remove the trims (1) .

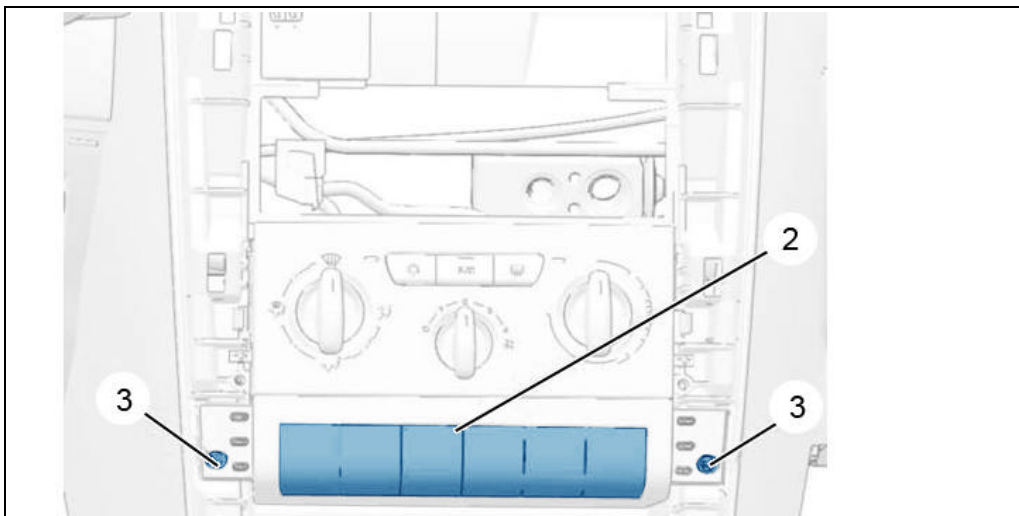


Figure : C5FP1CTD

Remove the bolts (3) .
Release all the controls (2) (ESP, central locking) by pulling towards you .

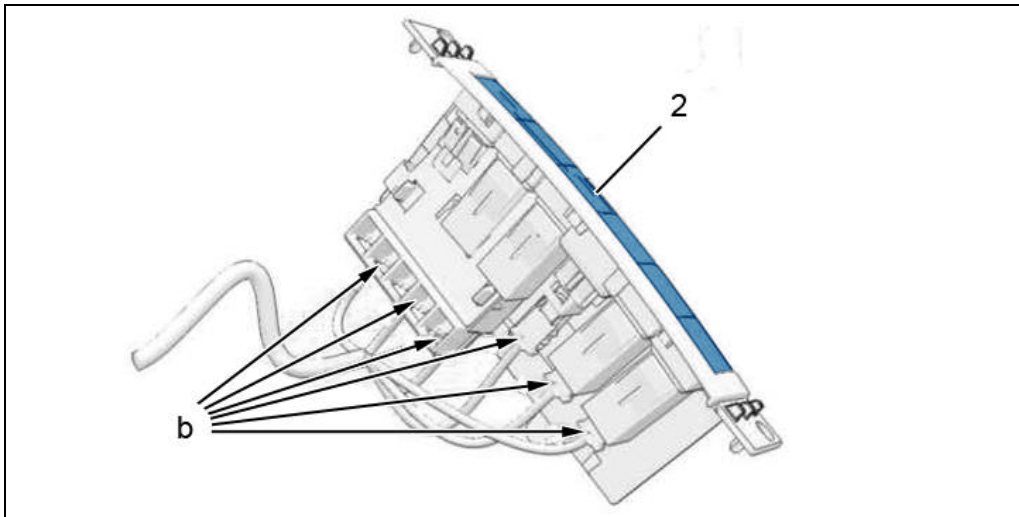


Figure : C5FP1CUD

Disconnect the connectors (At " b ") (according to specification) .
 Remove all the controls (2) (ESP / Central locking of the doors) .

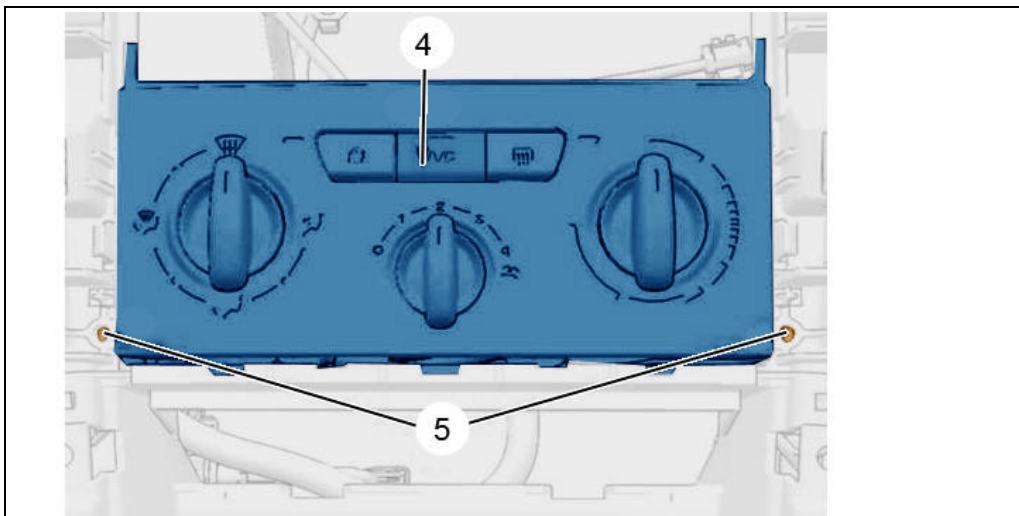


Figure : C5FP1CVD

Remove the bolts (5) .
 Release the air conditioning control (4) .

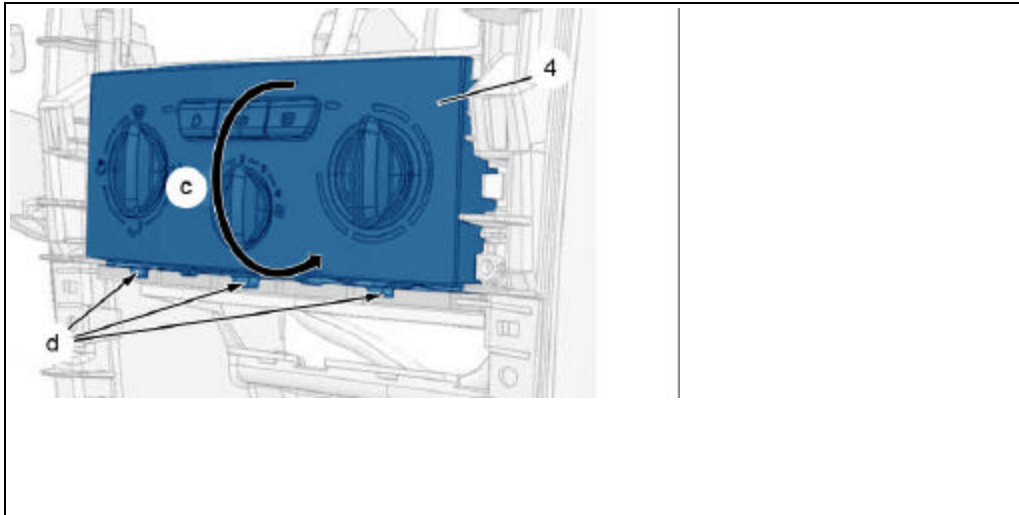


Figure : C5FP1CWD

Unclip at "d" by rotating (in "c") the air conditioning control (4) to access the connections .

3.1. Manual air conditioning control

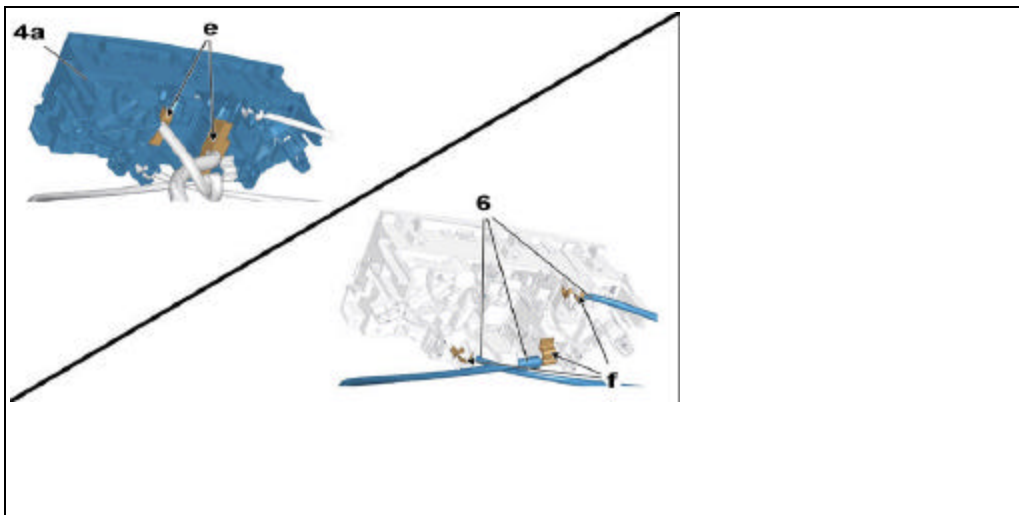


Figure : C5FP1CXD

CAUTION : Mark the position of the cables (6) before unclipping them .

Disconnect the connectors (At " e ") .

Unclip the cables (6) (At " f ") .

Remove : The manual air conditioning control (4a) .

3.2. Automatic air conditioning control

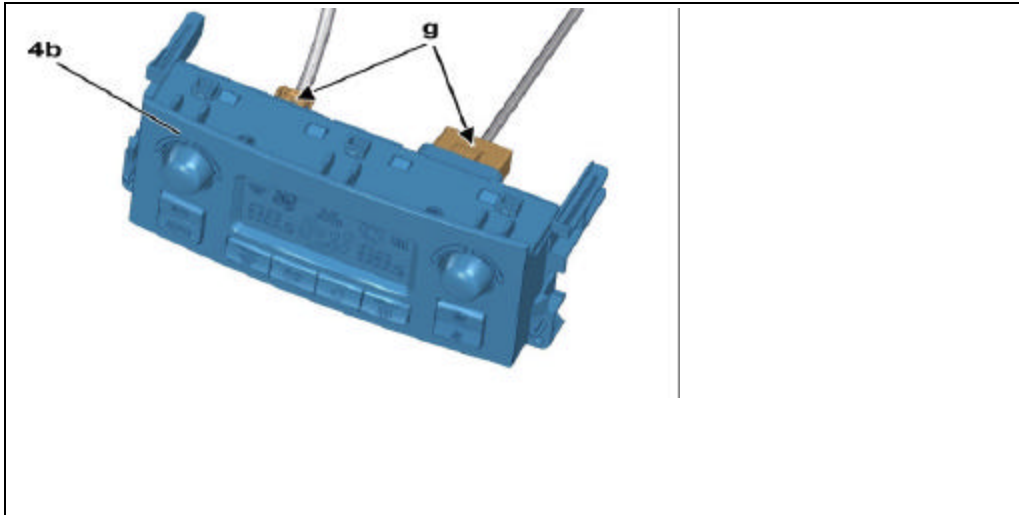


Figure : C5FP1CYD

Disconnect the connectors (At " g ") .

Remove : The automatic air conditioning control (4b) .

4. Refitting

Proceed in the reverse order to removal .

CAUTION : Perform the operations to be carried out following reconnection of the battery .

Connect the battery .

Check the operation of the electrical equipment .