REMOVE - REFIT : FRONT BRAKE PADS :

URGENT : Ensure that the precautions relating to safety and cleanliness are adhered to .

1. Recommended tools

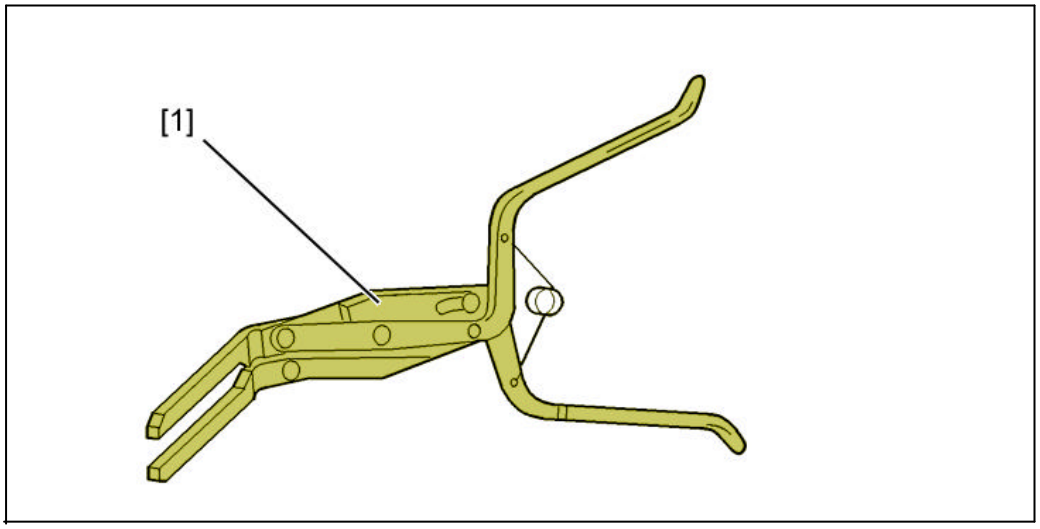


Figure : E5AP2X0D

[1] Pliers FACOM D60A .

2. Removing

If the brake fluid reservoir is at maximum level, remove its filter and partially drain the reservoir with the aid of a clean syringe in order to avoid it overflowing .
Release the front wheel bolts .
Lift and support the vehicle with the front wheels suspended .
Remove :

- The front wheel bolts
- The front wheels

2.1. TEVES assembly

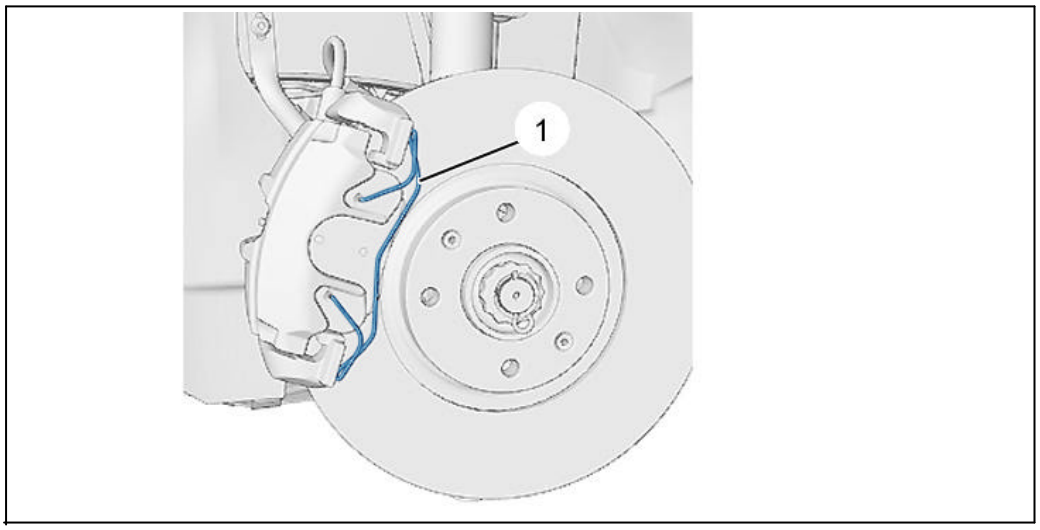


Figure : B3FP7QJD

Remove the spring (1) .

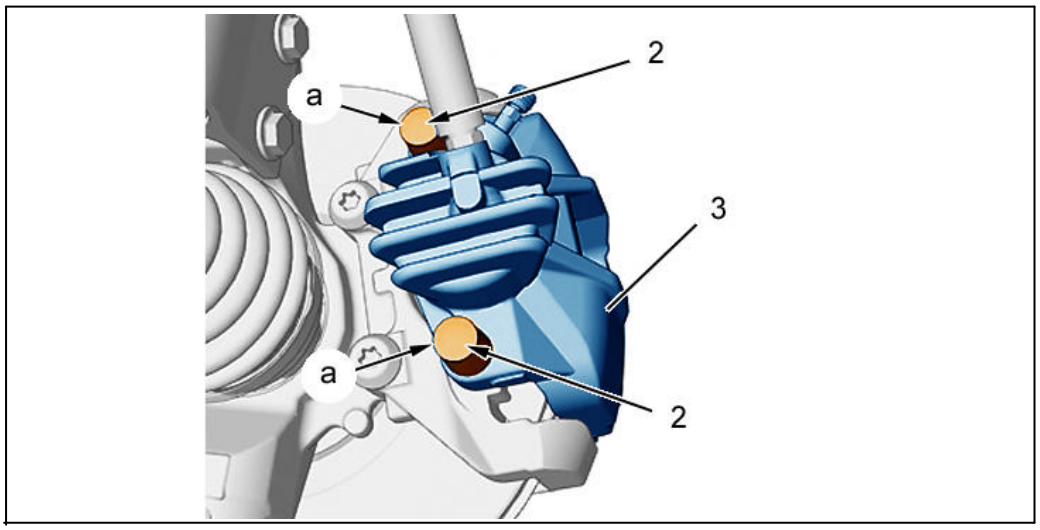


Figure : B3FP7QKD

Remove :

- The blanks (at " a ")
- The screws (2)

CAUTION : Take care not to twist the brake hose .

Move aside and suspend the brake caliper (3) .
Remove the brake pads .

2.2. BOSCH assembly

Tighten the wheel bolts to 9 ± 1 daNm .

URGENT : Apply the brakes several times, gently and progressively, with the engine running, before driving the vehicle .

Check the brake fluid level and top up if necessary .